

GTE-520 插座測試器

勝特力材料 886-3-5753170
勝特力电子(上海) 86-21-34970699
勝特力电子(深圳) 86-755-83298787
[Http://www.100y.com.tw](http://www.100y.com.tw)



GFI Receptacle Tester

Instructions For 110-125VAC GFCI Receptacles only

1. Always test on a known live circuit before use to assure the tester is in operation condition
2. Make sure GFCI Receptacle is installed in accordance with the manufacturers specifications
3. Check for correct wiring of receptacle and all remotely connected receptacles on the branch circuit by plugging tester into each receptacle
4. Press the TEST button on the installed GFCI receptacle, the GFCI should trip. If it does not trip, do not use the circuit, consult an electrician. If it does trip, press the RESET button on the receptacle and plug in the tester
5. Press the test button on the tester for a minimum of 6 seconds, the indicator lights on the tester will shut off when the GFCI trips
6. If the tester does not trip, either the GFCI is operable but the wiring is incorrect, or the wiring is correct but the GFCI is inoperable. Consult an electrician to determine the problem