HAKOFR-801 歸



Analog-type Hot Air Rework System



Features

For repair of surface-mounting P.W.B.

- Outlet nozzle featuring new mechanism
 - · Consistent temperature of hot air is allowed by new mechanism.



勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

- Featuring airflow meter
 - · Easy to control the airflow volume visually.
- Automatic cool-down function
 - · To avoid the heater damage, the cooling begins automatically when the power to the heater is shut off. The air stops blowing after cool-down.
- Compact design
- ESD safe by design.

Packing List				
Part No.	Packing List			
No.FR801	Main Unit (HAKKO FR-801 Station), Handpiece Holder, Power Cord, FP Pick-up, FP Pick-up Wire (S / L), Instruction Manual: 1pc each			

NOTE: This product does not include a nozzle. When purchasing this product, be sure to order a nozzle suitable for the work.

Specifications				
Power Consumption	100V-310W,110V-360W,120V-430W,220V- 570W, 230V-630W,240V-680W			
Capacity	5 to 20L/min (Max.)			
Hot Air Temperature	100 to 420 °C (Use A1126)			
Outer Dimensions (Station)	160(W) x 145(H) x 230(D)mm			
Length (Handpiece)	185(L) mm (w/o cord)			
Weight (Station)	4kg			
Weight (Handpiece)	115g (w/o cord)			

· Replacement Parts


特力材料886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787

w. 100y. com. tw

Repl	acement	Parts
------	---------	--------------

Replacei	Replacement Parts		
Part No.	Name	胜特力电子(深圳 Http://www	
B1438	FP Pick-up (with two wires)	nttp.//www	
B1439	FP Pick-up Wire (S)	W 100 L	
B1440	FP Pick-up Wire (L)	W 1 100 k	

Optional nozzles for Hakko 850/850B/852/FR-801/FR-802/FR-803

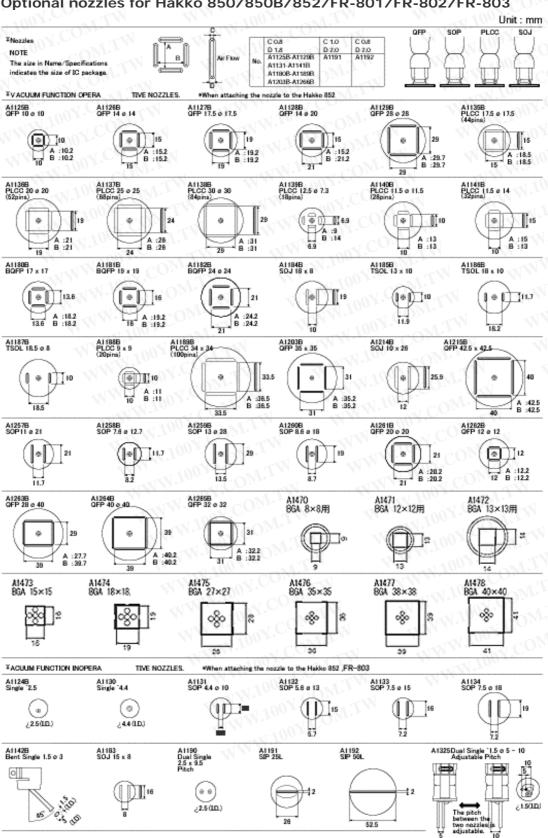



HAKEOFR-801

SMDリワークステーション 扁平集成電路拔放臺 SMD Rework Station

温度分布表 温度分布圖表 TEMPERATURE DISTRIBUTION CHART

▲ 注意

- グラフは参考用値であり、規格値ではありません。
- サーマルプロテクターが働く場合は温度設定を下げるか、風量を上げるように調節してく ださい。
- FR-801をご使用の際にはノズル別温度分布表を参考にしてください。
- FR-801はハッコー850及びハッコー850Bとは異なります。よって、温度分布表も異なりますので、ご注意ください。
- 測定条件:ノズル先端より1mmの位置で記録計により測定。
- ()内は温度特性同等品です。

企注意

- 溫度分布圖表使用于參考,并不是規格值。
- 熱度保護器起動時,請將溫度降低或將風量提高以做調節。
- 使用FR-801時,請參考不同噴嘴的溫度分布圖表。
- FR-801与HAKKO 850及850B不同,溫度分布圖表也不同,請注意。
- 測量條件:距離噴氣嘴3毫米處測量。
- 噴嘴番咢下面的()內,是溫度特性的同等品。

A CAUTION


- These charts do not define the temperature characteristics, and are for reference only.
 If the thermal protector trips, reduce the temperature setting or increase the air flow.
- The temperature distribution charts for HAKKO 850 or 850B should not be used for FR-801. FR-801 uses a different pump and control system. When you use the FR-801, make sure to refer to the temperature distribution charts shown to the right.
- Test condition: Measured at a point 1mm (0.04 in.) from the nozzle by recorder.
- Nozzles of which part names are parenthesized have equivalent temperature characteristics

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787

Http://www. 100y. com. tw


A1124B (A1142B)

温度/溫度/Temp.

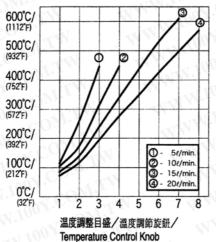


A1125B (A1139B)

温度/温度/Temp.

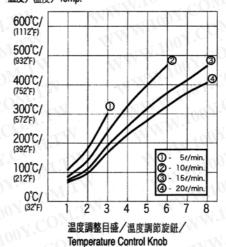

A1128B

温度/温度/Temp.

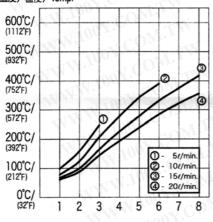


A1129B (A1138B, A1265B)

温度/溫度/Temp.

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787



Http://www.100y.com.tw

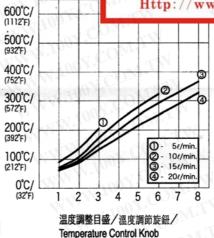


A1257B

(A1184B, A1186B, A1188B, A1214B, A1259B, A1260B, A1133, A1134, A1191, A1325)

温度調整目盛/溫度調節旋鈕/

Temperature Control Knob


温度/溫度/Temp.

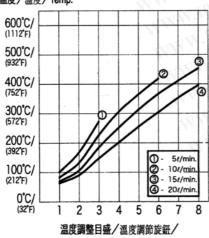

Temperature Control Knob


A1261B (A1137B, A1182B, A1192)

温度/溫度/Temp.

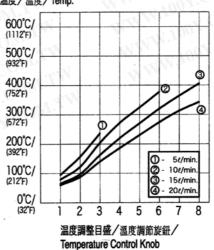


A1126B (A1180B)

温度/溫度/Temp.

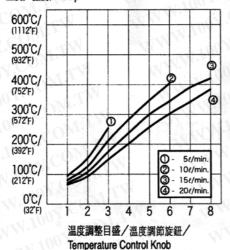


A1130

温度/溫度/Temp.

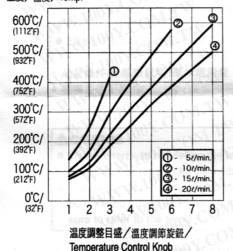


A1262B (A1140B, A1141B)

温度/溫度/Temp.

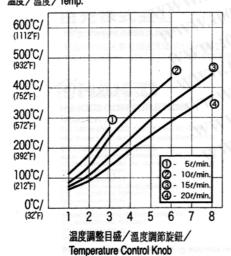


A1127B (A1135B, A1136B, A1181B)

温度/溫度/Temp.

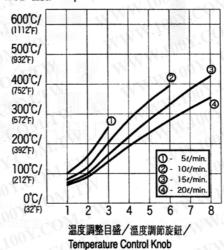

A1131 (A1132, A1183, A1190, A1185B, A1187B, A1258B)

温度/溫度/Temp.

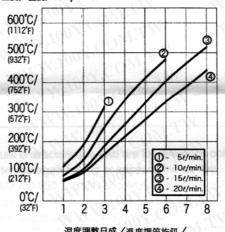

温度調整目盛/溫度調節旋鈕/ Temperature Control Knob

A1264B

(A1189B, A1203B, A1215B, A1263B)

