[TRP-CU/ Operation Manual]

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787

Http://www.100y.com.tw

Features

PWR/TX/RX mode LED indicate. Power requirement :+10V TO +30V.

Support external standard +12V DC power adapter input.

Automatic Data direction Control with no baud rate switch setting hassle.

Minimum 3000V DC isolation protection.

Mounts easily on DIN-rail or panel.

No external flow control signals required for RS-485.

Transient suppression on RS-485 data line.

Supported baud rate up to 115.2 Kbps.

Reach distance up to 4000 Feet (1200 m).

Power and data flow indicator for troubleshooting.

Reserved space for termination resistors (R8,R9).

Built-in termination resistor (selectable).

Accept industrial standard +24V DC Unregulated power.

Automatic internal RS-422/485 bus supervision.

Specifications

Plug-in screw terminal Wiring: Accepts AWG 1-#12 to #22 (0.5 to 2.5mm)wires. Supported baud rates (bps): 1200, 2400, 4800, 9600, 19.2K, 38.4K, 57.6K, 115.2K.

Storage temperature : -25~85 degree (13~185 F).

Operating temperature : 0~70 degree (32~158 F).

Requirement : DC IN from +10V to 30V or external +12V DC IN Converted signals : RS422 or RS485 mode external switch .

Power consumption: UNDER 1W. Isolation voltage: 3000V DC.

Accessories (Supplied): NYLON DIN-rail Mounting Adapter SECC Panel Mounting Bracket.


RS-422/485 connector: Industrial plug-in screw terminal.

Operating Temperature: 0 to 55.

Power requirement: Unregulated +10 to +30 V DC with protection from power reversals.

Humidity: 5-95%, non-condensing.


Pin Assignment

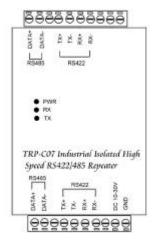


Pin D	Pin Definitions		
PIN#	Signal Name	Description	
1	DATA+	RS485 Transmission line, Positive	
2	DATA-	RS485 Transmission line, Negative	
3	N.C	No Connection	
4	TX+	RS422 Transmission line, Positive	
5	TX-	RS422 Transmission line, Negative	
6	RX+	Receiving line, Positive	
7	RX-	Receiving line, negative	
8	N.C	No Connection	
9	DC IN	DC IN 10V to 30V	
10	GND	Ground	

[TRP-CU/ Operation Manual]

4 RS422 TEST

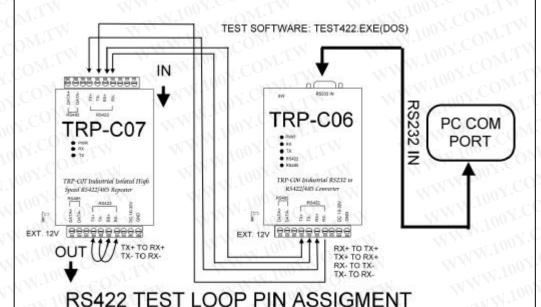

5 Communication Wiring

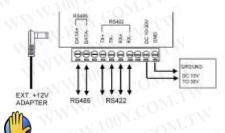

arning: Don't connect external power adapter and plug in screw terminal DC input together. 請勿同時聯結外部變壓器 與輸入內部電源.

> 勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

更正日期:92年3月14日