#### [TRP-C08 Operation Manual ]

#### 1 Introduction

The TRP-C08 converter is an intelligent, stackable expansion module that connects to a PC USB port or USB Hub via the Universal Serial Bus(USB) port, providing one High-Speed RS-232/RS-422 or RS-485 serial port (jumper less) The TRP-C08 features easy connectivity for traditional serial devices.

The RS-232 standard supports full-duplex communication and handshaking signals (such as RTS, CTS) and The RS-485 control is completely transparent to the user and software written for half-duplex COM works without any modification.

The TRP-C08's OPTO-isolators provide 3000 Vdc of isolation to protect the host computer from ground loops and destructive voltage spikes on the RS-232/RS-422 and RS-485 data lines.

TRP-C08 also offer internal surge-protection on their data lines. Internal highspeed transient suppressors on each data line protect the modules from dangerous voltages levels or spikes.

The TRP-C08 module derives the power from USB port and doesn't need any power adapter

#### 2 Features

**USB Specification 1.1 Compliant** 

Driver support for Windows 95/98/ME/2000/XP, Linux

Full-Duplex RS-232/RS-422 support

RS-232 support RTS & CTS handshake signals

Minimum 3000 VDC isolation protections

Auto switching for USB to RS-232/RS-422 or RS-485 (jumper less)

Auto switching baud rate up to 115.2Kbps

Transient suppression on RS-485 data lines

Power and RX/TX flow indicator for troubleshooting

Power requirement: BY USB Power Auto direction flow control on RS-485 Mounts easily on DIN-rail or panel

## 3 Specifications

Converted signals: RS-232/RS-422 or RS-485 Auto switching (jumper less)

USB interface connector: USB type B

USB Controller: Compatibility USB Specification 1.1 Standard

Isolation voltage: 3000VDC

Power requirement: By USB bus power

Handshake: RS-232 support RTS & CTS handshake signals

Auto Switching Baud rate (bps): 300~115.2Kbps

RS-232/RS-422/RS-485 connector: plug-in screw terminal

Isolation Side: RS-232/422/485 Power consumption: 0. 65W


Operating temperature:0~70 (32~158 )

Storage temperature:-25~85 (13~185)

Humidity:5~95%, non-condensing

Transmission and Receiving LED indicator


# 4 Pin Assignment

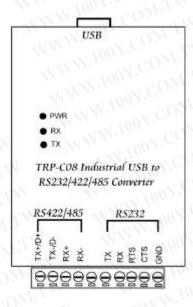

Pin Definitions		
PIN#	Signal Name	Description
1	TX+/D+	RS-422 or RS-485 Transmission line, Positive
2	TX-/D-	RS-422 or RS-485 Transmission line, Nositive
<u> </u>	1 A-/D-	K3-422 OF K3-463 Transmission line, Nositive
3	RX+	RS422 Transmission line, Positive
4	RX-	RS422 Transmission line, Negative
5	NC.	No Connection
6	TX	RS-232 transmission line
7	RX-	RS-232 receive line
8	RTS	RS-232 Request to send line
9	CTS	RS-232 Clear to send line
10	F.GND	Ground
USB Type B connector		
1	+5V	USB +5VDC bus power
2	Data -	USB Data line, Negative
3	Data+-	USB Data line, Positive

JSB bus power ground

# 5 Communication Wiring

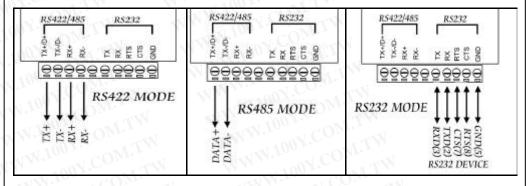

## 6. Test Utility ( Demo.exe for windows)

The software can easy to test TRP-C08 converter working fine or fail . please refer the utility from driver CD, you can looking for the help and demo.exe file.

(更正日期:92年9月14日)

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw