


接线定义：			
A+	红线	A-	绿线
B+	黄线	B-	蓝线
EB+	黄线	EB-	绿线
EA+	黑线	EA-	蓝线
VCC	红线	EGND	白线

驱动器和电机接线图

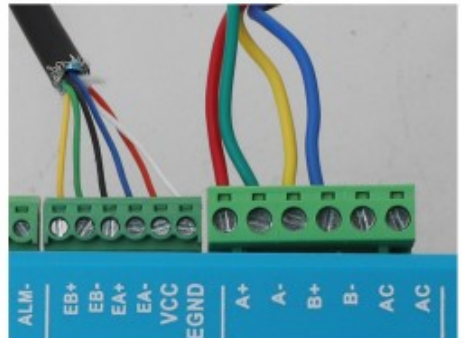

86 閉環步進伺服套裝 86HSE4N 閉環步進電機 4.5N.M+閉環驅動器 HSB86H

闭环电机套裝
力矩4.5N

配编码线3米



86闭环电机套裝4.5N.M驱动器 HBS86H + 电机86HSE4N



86全闭环高速恒扭矩步进伺服电机套裝
闭环步进电机4.5N 长101mm 额定转速1000转
驱动器 HBS860H 全闭环数字式 AC18-80VAC




电机基本介绍：
 框号 86*86，电机总长 101mm
 静力矩 4N.m，额定电流 5A
 止口直径 73mm，轴长 33mm
 键槽 5*5*25， 转速 2000rpm
 额定转速 1000rpm。


勝特力材料 886-3-5773766
 勝特力电子(上海) 86-21-34970699
 勝特力电子(深圳) 86-755-83298787
[Http://www.100y.com.tw](http://www.100y.com.tw)



电机尺寸图

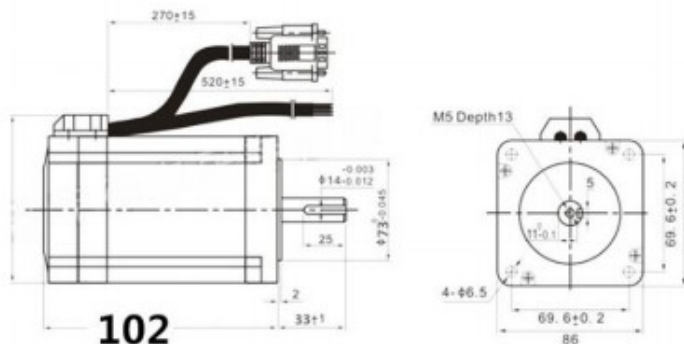


驱动器尺寸图

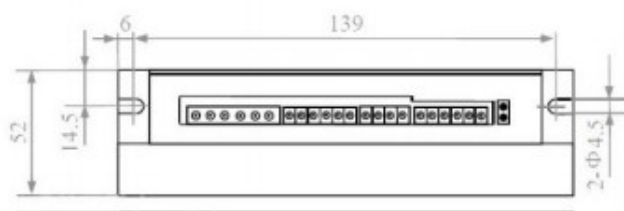

四、拨码开关设定

HBS86H驱动器采用六位拨码开关设定细分精度、控制信号有效沿和电机旋转方向设定，详细描述如下：

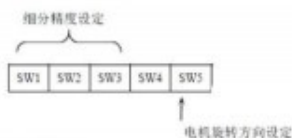

拨码开关设定

步数/圈	SW1	SW2	SW3	SW4
Default/400	on	on	on	on
800	off	on	on	on
1600	on	off	on	on
3200	off	off	on	on
6400	on	on	off	on
12800	off	on	off	on
25600	on	off	off	on
51200	off	off	off	on
1000	on	on	on	off
2000	off	on	on	off
4000	on	off	on	off
5000	off	off	on	off
8000	on	on	off	off
10000	off	on	off	off
20000	on	off	off	off
40000	off	off	off	off

SW5 : 电机方向设置 ON:正转, OFF:反转

SW5 : 电机方向设置 ON:正转, OFF:反转

故障设定

绿色 LED 为电源指示灯，当驱动器接通电源时，LED 绿灯常亮。红色 LED 为故障指示灯，当出现故障时，该指示灯以 5 秒周期循环闪烁，闪烁次数不同代表