



# Universal MATE-N-LOK\* Connectors

Application Specification 114-1010 02 MAY 23 Rev V1



#### NOTE

All numerical values are in metric units [with U.S. customary units in brackets]. Dimensions are in millimeters [and inches]. Unless otherwise specified, dimensions have a tolerance of  $\pm 0.13$  [ $\pm .005$ ] and angles have a tolerance of  $\pm 2^{\circ}$ . Figures and illustrations are for identification only and are not drawn to scale.

# 1. INTRODUCTION

This specification covers the requirements for application of Universal MATE-N-LOK\* housings, contacts, and printed circuit (PC) board headers. The housings are available in 1- through 15-circuit versions and are intended for use in wire-to-wire (panel mounted or free hanging) or wire-to-board applications. The vertical pin and socket headers are available in 2- through 15-circuit versions and are intended for board-to-wire applications. The right-angle pin and socket headers are available in 2- through 8-circuit in-line versions and are intended for board-to-wire applications.

Optional terminal position assurance (TPA) accessories are available to install onto the housing. These devices provide added security to ensure proper contact insertion and retention in the circuit cavities.

When corresponding with TE Connectivity Personnel, use the terminology provided in this specification to facilitate inquiries for information. Basic terms and features of this product are provided in Figure 1.



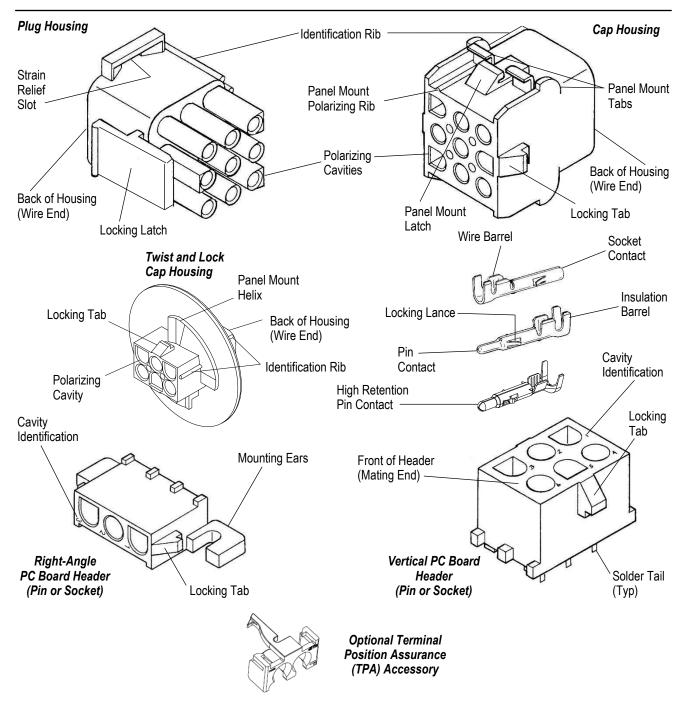


Figure 1

# 2. REFERENCE MATERIAL

# 2.1. Revision Summary

This paragraph is reserved for a revision summary covering the most recent additions and changes made to this specification which include the following:

- Updated Paragraph 1, Figure 1, Paragraph 2.5, and Paragraph 3.9 with TPA information.
- Update Paragraph 3.3.G and Figure 4 with O-Crimp information.

Rev V1 2 of 18



#### 2.2. Customer Assistance

Reference Product Base Part Number 480702 and Product Code 1318 are representative numbers of the Universal MATE-N-LOK product line. Use of these numbers will identify the product line and help you to obtain product and tooling information. Such information can be obtained through a local TE Representative, by visiting our website at <a href="https://www.te.com">www.te.com</a>, or by calling PRODUCT INFORMATION at the number at the bottom of page 1.

# 2.3. Drawings

Customer Drawings for product part numbers are available from the service network. If there is a conflict between the information contained in the Customer Drawings and this specification or with any other technical documentation supplied, the information contained in the Customer Drawings takes priority.

# 2.4. Specifications

Product Specifications 108-1031 (for connectors) and 108-1053 (for headers), provides product performance requirements and test result information.

#### 2.5. Instructional Material

The following list includes available instruction sheets (408-series) that provide assembly procedures for product, and operation, maintenance and repair of tooling; and customer manuals (409-series) that provide setup, operation, and maintenance of machines.

```
Hand Crimping Tool 69710-1
408-2095
408-3295
          Preparing Reel of Contacts for Application Tooling
408-3320
          Universal MATE-N-LOK Strain Relief Assembly and Keying Plug
          Universal MATE-N-LOK Splash Proof Seals
408-3392
408-7300
          MATE-N-LOK Contact and Housing Selection Charts
408-7424
           Checking Terminal Crimp Height or Gaging Die Closure
408-7714
           Universal MATE-N-LOK Connectors
408-7984
          Insertion Tool 455830-1
408-8040
          Heavy Duty Miniature Quick-Change Applicators (Side-Feed Type)
408-8053
           Conversion Guide for Miniature Quick-Change Applicators
408-8059
           General Preventive Maintenance for Applicators
408-8547
           CERTI-CRIMP* II Straight Action Hand Tools
408-9433
          Crimping Die Assemblies 58380-1 and 58380-2
408-9591
          Hand Crimping Tool 58439-1
          Handling of Reeled Products
408-9816
408-10049 Extraction Tool 1804030-1
408-143222 Instruction Sheet - Universal MATE-N-LOK TPA Assembly
409-5842
          AMP-O-LECTRIC* Model "G" Terminating Machines 354500-[]
409-5852
          AMPOMATOR* CLS III-G Lead-Making Machine 122500-[]
          Crimp Quality Monitors (CQM) for AMPOMATOR CLS IV Lead-Making Machines
409-5870
          AMPOMATOR CLS IV+ Lead-Making Machine 356500-[]
409-5878
409-10027 Stripping Modules 1490500 and 1490502
409-10029 Stripping Modules 1490501 and 1490503
409-10047 AMP-3K Terminating Machines 1725950
```

#### 2.6. Manuals

Manual 402-40 is available upon request and can be used as a guide in soldering. This manual provides information on various flux types and characteristics along with the commercial designation and flux removal procedures. A checklist is attached to the manual as a guide for information on soldering problems.

Rev V1 3 of 18



#### 3. REQUIREMENTS

### 3.1. Storage

### A. Ultraviolet Light

Prolonged exposure to ultraviolet light may deteriorate the chemical composition used in the housing material.

# **B.** Reel Storage

When using reeled contacts, store coil wound reels horizontally and traverse wound reels vertically.

### C. Shelf Life

Each connector is packaged and shipped in an individual antistatic tube container or tape and reel. To prevent damage to the housings and contact solder tines, the connectors should remain in the container until ready for installation. Also, to prevent possible storage contamination and ensure maximum solderability, the connectors should be used on a first in, first out basis.

### D. Chemical Exposure

Do not store contacts near any of the following chemicals as they may cause stress corrosion.

Alkalies Ammonia Citrates Phosphates Citrates Sulfur Compounds
Amines Carbonates Nitrites Sulfur Nitrites Tartrates



#### NOTE

Where the above environmental conditions exist, phosphor-bronze contacts are recommended instead of brass if available.

# 3.2. Wire

#### A. Wire Selection

The contacts will accept stranded wires ranging in size from 10 to 30 AWG. Wire insulation diameter shall have minimum and maximum dimensions according to the wire sizes indicated in Figure 2. Reasonable care shall be taken during the stripping operation to ensure the conductor is not nicked, scraped, or cut.



#### NOTE

Contacts accept stranded wire only. Not intended for solid wire.

# **B.** Wire Preparation

The wire strip length shall be according to the wire sizes as indicated in Figure 2.

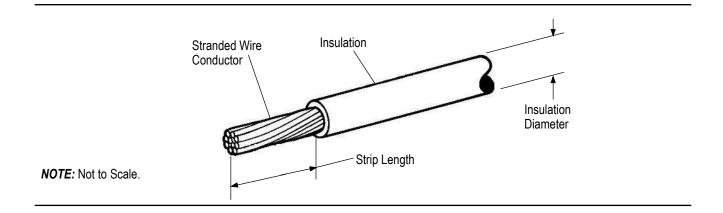


Figure 2 (cont'd)

Rev V1 4 of 18



WIRE WIRE BARREL					
SIZE (AWG)	INSULATION DIAMETER RANGE	STRIP LENGTH ±0.38 [.015]	CRIMP HEIGHT ±0.05 [.002]	CRIMP WIDTH	INSULATION BARREL CRIMP WIDTH
30		0.81 to 1.45 4.06 032 to .057] [.160]	0.71 [.028]	1.40 [.055]	2.29 [.090]
28	0.81 to 1.45		0.71 [.028]		
26	[.502 to .507]		0.76 [.030]	[.000]	
24		4.37 [.172]	0.96 [.038]	1.78 [.070]	2.54△ [.100]
22	1.02 to 2.54		1.02 [.040]		
20	[.040 to .100]		1.09 [.043]		
18			1.22 [.048]		
20		4.37 [.172]	1.19 [.047]	2.29 [.090]	3.30 [.130]
18	1.52 to 3.30		1.32 [.052]		
16	[.060 to .130]		1.50 [.059]		
14			1.75 [.069]		
20			1.19 [.047]	2.29 [.090]	5.08 [.200]
18		3.30 to 5.08 4.37 .130 to .200] [.172]	1.32 [.052]		
16			1.50 [.059]		
14	[1.00 to 1200]		1.75 [.069]		
2 @ 18			1.60 [.063]		4.83 [.190]
18	0.004 5.00	4.07	1.50 [.059]	2.29 [.090]	5.08 [.200]
16	3.30 to 5.08 [.130 to .200]	4.37 [.172]	1.68 [.066]		
14	[		1.93 [.076]		
12	5.08 [.200]	6.76	1.83 [.072]	3.56	
10	Max.	[.266]	2.29 [.090]	[.140]	

# HAND TOOL WIRE CRIMP DIMENSIONS

WIRE			WIRE BARREL		INSULATION
SIZE (AWG)	INSULATION DIAMETER RANGE	STRIP LENGTH ±0.38 [.015]	CRIMP HEIGHT ±0.05 [.002]	CRIMP WIDTH	BARREL CRIMP WIDTH
30	0.81 to 1.45 [.032 to .057]		0.71 [.028]	1.40 [.055]	2.29 [.090]
28		4.06 [.160]	0.71 [.028]		
26		[]	0.71 [.028]	[.000]	
24		4.37 [.172]	1.02 [.040]	1.78 [.070]	2.54 [.100]
22	1.02 to 2.54 [.040 to .100]		1.02 [.040]		
20			1.17 [.046]		
18			1.17 [.046]		

 $\triangle$ For part numbers 770210-1 and 770211-1, insulation barrel crimp width should be 3.30 [.130].

Figure 2 (cont'd)

Rev V1 5 of 18



WIRE			WIRE BA	INSULATION	
SIZE (AWG)	INSULATION DIAMETER RANGE	STRIP LENGTH ±0.38 [.015]	CRIMP HEIGHT ±0.05 [.002]	CRIMP WIDTH	BARREL CRIMP WIDTH
20			1.27 [.050]	2.29 [.090]	3.30 [.130]
18	1.52 to 3.30	4.37 [.172]	1.27 [.050]		
16	[.060 to .130]		1.60 [.063]		
14			1.60 [.063]		
20			1.24 [.049]	2.29 [.090]	5.08 [.200]
18	3.30 to 5.08		1.24 [.049]		
16	[.130 to .200]		1.60 [.063]		
14			1.60 [.063]		
12	5.08 [.200] Max.	6.76 [.266]	2.11 [.083]	3.56 [.140]	
10			2.44 [.096]		

Figure 2 (end)

### 3.3. Crimped Contact Requirements

The contact shall be located in desired tooling and crimped according to the instructions packaged with that tooling. See Section 5, TOOLING, of this document for details on tooling options and instructional materials.



#### CAUTION

Wire insulation shall NOT be cut or broken during the crimping operation, nor shall the insulation be crimped into the contact wire barrel. Reasonable care should be taken by tooling operators to provide undamaged wire terminations.



#### NOTE

Wire stripping tool jaws may leave corrugated indentations on the surface of the wire insulation. This is especially severe with cross-linked polyethylene (high temperature) insulation. If these indentations occur at the location of the wire seal, leakage may result. Insulation surface within 8.89 mm from the tip of the contact must be smooth and free of indentations. See Figure 3.

### A. Wire Barrel Crimp

The crimp applied to the wire portion of the contact is the most compressed area and is most critical in ensuring optimum electrical and mechanical performance of the crimped contact. The contact wire barrel crimp height must be within the dimension provided in Figure 2.

#### **B. Effective Crimp Length**

For optimum crimp effectiveness, the crimp must be within the area shown in Figure 3 and must meet the crimp dimensions provided in Figure 2. Effective crimp length shall be defined as that portion of the wire barrel, excluding bellmouth(s), fully formed by the crimping tool. Instructions for adjusting, repairing, and inspecting tools are packaged with the tools. See Section 5, TOOLING.

#### C. Bellmouths

Front and rear bellmouths shall be evident and conform to the dimensions given in Figure 3.

### D. Cutoff Tabs

The cutoff tab shall be cut to the dimensions shown in Figure 3.


### E. Burrs

The cutoff burr shall not exceed the dimensions shown in Figure 3.

Rev V1 6 of 18



# High Retention Pin Contact

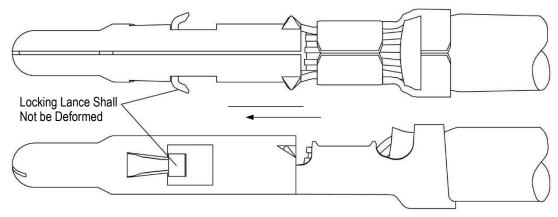

The Wire Barrel Seam Shall be Closed Adequately to Confine All Strands of the Wire. There Shall be No Loose Wire Strands or Wire Strands Embedded in the Outside of the Wire Barrel. Wire Strands and Insulation Both Visible. Note: Large Diameter Insulation May Flush to 1.02 [.040] Max Not be Visible When Crimping with Hand Tools. Socket Contact Rear Bellmouth Front Bellmouth 0.13 [.005] to 0.25 ±0.00/-0.25 Locking Lance Shall 0.89 [.035]  $[.010 \pm .000/-.010]$ Not be Deformed Wire Barrel Crimp Width 0.25 [.010] Max Wire Wire Barrel Barrel Flash Crimp Height Section X-X No Burrs Cutoff Tab 0.18 [.007] Max

Figure 3

Rev V1 7 of 18



#### F. Wire Barrel Flash

The wire barrel flash shall not exceed the dimensions shown in Figure 3, Section X-X.

# G. Insulation Barrel Crimp

The insulation barrel shall grip the insulation firmly and legs of the insulation support crimp barrel may deform or cut into the insulation, but must not penetrate into the conductor. This product has two styles of insulation crimp. Most common is the F-crimp. For F-crimp style, the legs of the insulation barrel touch each other, and the crimp shall comply to width provided in Figure 2. For special cases, the overlap crimp or O-crimp is used. The overlap allows the legs of the insulation barrel overlap itself by at least the length of one material thickness. The O-crimp allows the legs of the insulation barrel to touch as shown. See Figure 4.

The smallest cable within the insulation range may have a gap between the insulation and the insulation barrel leg (max. of the difference of the diameter between the smallest and largest cable), however, must touch the insulation support barrel for at least a distance equal to half its circumference. See Figure 4.

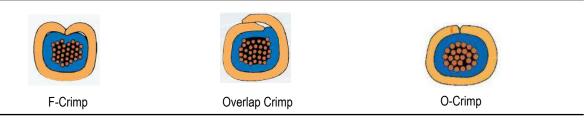


Figure 4

#### H. Wire Location

The wire conductor and insulation must be visible in the transition area between the wire and insulation barrels as shown in Figure 3.

#### I. Conductor Extension

The conductor may extend beyond the wire barrel to the maximum shown in Figure 3.

#### J. Wire Barrel Seam

The wire barrel seam must be closed with no evidence of loose wire strands visible in the seam as shown in Figure 3.

#### K. Twist and Roll

There shall be no twist, roll, deformation or other damage to the mating portion of the crimped contact that will impair usage of the contact. See Figure 5.

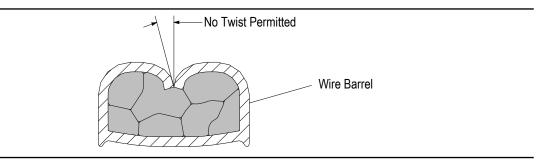


Figure 5

Rev V1 8 of 18



# L. Straightness/Alignment

The force applied during crimping may cause some bending between the crimped wire barrel and the mating portion of the contact. The axial concentricity of the crimped wire barrel shall fall into an area defined by a 4.19 mm [.165 in.] diameter circle whose center is the centerline of the contact. The axial concentricity of the crimped insulation barrel shall fall into an area defined by a 5.59 mm [.220 in.] diameter circle whose center is the centerline of the contact. Such deformation is acceptable within the limits provided in Figure 6.

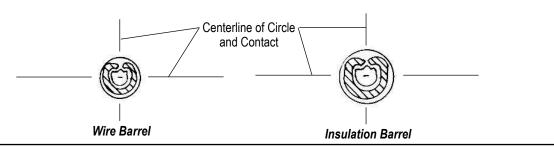


Figure 6

# 3.4. Housings

A connector assembly consists of a plug and a cap connector. A connector consists of a housing (plug or cap) with a specified number of crimp contacts (pin and/or socket). Mating connectors may be a plug and a cap, or a plug and a pc board header, so long as both have an identical number of circuits with a pin contact mating with a socket contact. Both the plug and cap housings have individually numbered cavity identification on the BACK (wire end), plus an identification rib on the SIDE indicating the No. 1 cavity. The housings feature polarizing cavities on the mating end and are intermateable with Universal MATE-N-LOK II connectors. The plug housing has two locking latches and the cap housing has two locking tabs. The housings are designed for free hanging or panel mounting applications (refer to Paragraph 3.9, Panel Cutout).

### A. Assembly

Crimped pin and socket contacts shall be manually inserted in either the plug or cap housing, or they may be intermixed in each housing to provide multiple keying combinations. After inserting the terminal into the back of the housing, pull back lightly on the wire of the contact to make sure that the contact is locked in place. See Figure 7.



#### NOTE

Insertion Tool 455830-1 (408-7984) is available for inserting contacts crimped to small wire sizes.

# **B.** Disassembly

Extraction Tool 1804030-1 (408-10049) is designed for removing pin and socket contacts from plug and cap housings. See Figure 7.

Rev V1 9 of 18



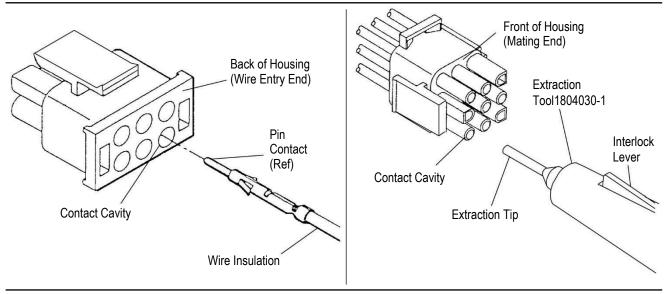


Figure 7

#### C. Strain Relief and Wire Dress

If necessary, wires can be bundled together and supported with cable ties or similar device. Wires must not be stretched or confined in any way. Therefore, the wires must remain perpendicular to the connector and avoid an excessively sharp bend radius. The minimum distance for the cable tie, measured from the housing at the wire end of the connector to the cable tie is shown in Figure 8.

#### 3.5. Headers

The pc board headers are supplied preloaded with solder tail pin contacts or solder tail socket contacts. Vertical pin and socket headers are available in 2 through 15 circuits. Right-angle pin and socket headers are available in 2 through 8 circuits. All headers feature individually numbered cavity identification on the FRONT (mating end). The headers also feature polarizing cavities and locking tabs. The headers are designed to be mounted on a pc board (refer to Paragraph 3.10.C, Printed Circuit Board Layout).

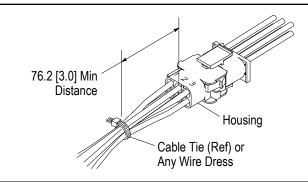



Figure 8

# 3.6. Strain Relief Assembly

The strain relief assembly is designed to relieve the stress of the wires on the contacts. There are two strain relief versions (open and enclosed). The open version is available for 2 through 15 circuit plug housings. The enclosed version is available for 2 through 15 circuit plug or cap housings. The enclosed version features an attached insert for smaller wire bundles. Adapters are required when installing an enclosed strain relief assembly onto a cap housing. Two identical strain reliefs are inserted into slots in the back of the connector (or adapter) and are secured together with two No. 6 pan head self-tapping screws. See Figure 9.

Rev V1 10 of 18



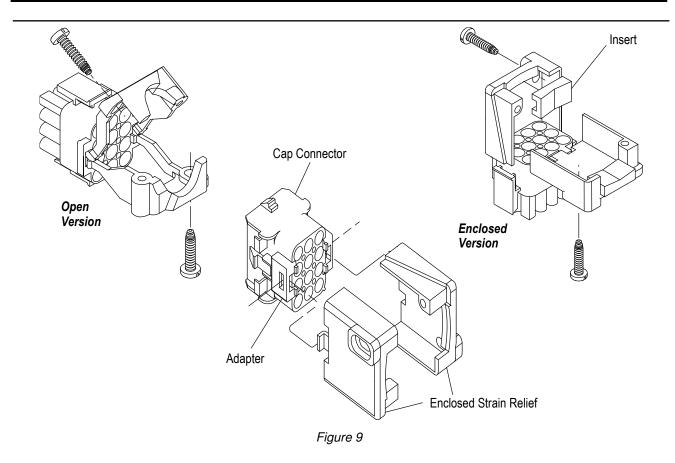

# 3.7. Keying Plugs

Keying plugs provide additional polarization for the connectors. The keying plug may be inserted into the front of the plug or the cap connector. See Figure 10.

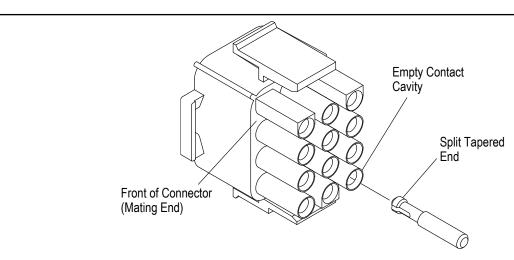


Figure 10

Rev V1 11 of 18



#### 3.8. Test Connectors

Plug and cap test connectors mate with respective assembled plug and cap connectors and headers to test the electrical circuit. The test connectors are preloaded with spring loaded contacts that will mate with pin or socket contacts in the connector. The 2.13 mm [.084 in.] dia pin that extends out the BACK of the housing will accept Universal MATE-N-LOK socket contacts. See Figure 11.

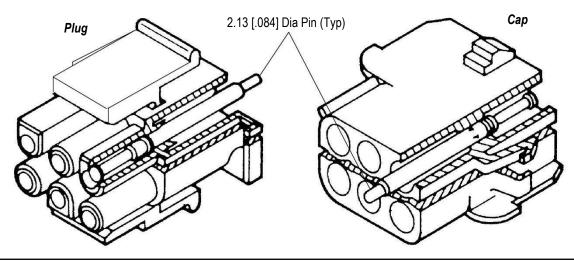


Figure 11



#### NOTE

Test connectors have a 5 ampere maximum current rating per circuit.

# 3.9. Optional TPA Devices

An optional TPA device is available for the plug housing and cap housing. Refer to 408-143222 for installation requirements and instructions.


The TPA device must be installed onto the wire end of the housing so that the latches are secure as described in 408-143140. If not fully latched, this indicates that one or more contacts has not been fully inserted.

### 3.10. Panel Cutout

Cap connector panel mounting cutouts shall be as indicated in Figure 12. (No mounting hardware is required.) The cap housing features flexible mounting latches for insertion into the panel. Push the cap connector through the panel - in the same direction as the cutout was made - until it snaps in place.

Rev V1 12 of 18




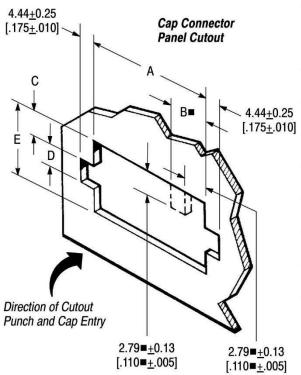

NUMBER	DIMENSIONS					
OF CIRCUIT POSITIONS	A <u>+</u> 0.13 [.005]	B■ <u>+</u> 0.25 [.010]	C <u>+</u> 0.25 [.010]	D <u>+</u> 0.25 [.010]	E <u>+</u> 0.13 [.005]	
2	14.35 [.565]					
3	20.70 [.815]	6.35 [.250]	2.41 [.095]	8.64 [.340]	13.46 [.530]	
4	27.05 [1.065]					
6	14.35 [.565]					
9	20.70 [.815]		6.98	12.19	26.16	
12	27.05 [1.065]	8.89 [.350]	[.275]	[.480]	[1.030]	
15	33.40 [1.315]	8.89 [.350]				

<sup>■</sup> Optional panel cutout dimensions for cap and panel polarization.

Panel Thickness - .762 [.030] to 2.286 [.090]

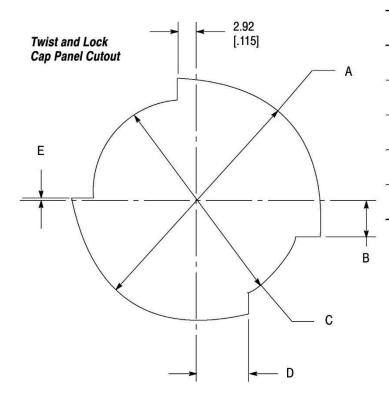

DIMENSION	POSITION SIZE			
DIMENSION	6 and 9	12		
"A"	34.67 [1.365]	40.13 [1.580]		
"B"	4.70 [.185]	6.15 [.242]		
"C"	29.08 [1.145]	34.54 [1.360]		
"D"	7.37 [.290]	8.08 [.318]		
"E"	0.25 [.010]	1.98 [.078]		

Figure 12

Rev V1 13 of 18



The Twist and Lock cap housing features a round helix for insertion into the panel. Refer to the panel cutout dimensions as shown in Figure 12.

The Twist and Lock panel cutout is polarized to ensure proper installation of the connector. Align the pin 1 indicator rib with the short side polarization opening of the panel and push the cap connector through the panel. Twist the connector clockwise until firmly seated. The panel thickness may vary between 0.76 and 2.29 mm [.030 and .090 in.]. In order to prevent foam leakage, the maximum amount of "gap" between the connector flange and the panel is 0.25 mm [.010 in.]. Refer to Figure 13.

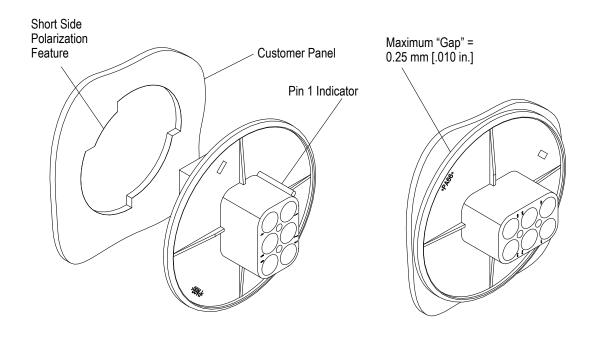


Figure 13

# 3.11. PC Board

# A. Material and Thickness

- 1. Board material will be glass epoxy (FR-4, G-10).
- 2. The connector headers can be installed on pc boards up to 1.57 mm [.062 in.] thick for standard tails, and 3.18 mm [.125 in.] for long tails. Board thickness may vary depending upon the application. Contact the Product Information Center or the Tooling Assistance Center number listed at the bottom of page 1 for suitability of other board materials or thicknesses.

#### B. Tolerance

Maximum allowable bow of the pc board shall be 0.25 mm [.010 in.] over the length of the socket.

# C. PC Board Layout

The mounting and contact holes in the pc board must be precisely located to ensure proper placement and optimum performance of the connector header. Design the pc board using the dimensions provided in Figure 14. The layout shows the top (component) side of the board.




#### NOTE

Figure 14 represents a typical pc board layout for this product. For dimensions and hole pattern layout for specific product, obtain the appropriate customer drawing through your Tyco Electronics Representative or refer to the telephone numbers at the bottom of page 1.

Rev V1 14 of 18



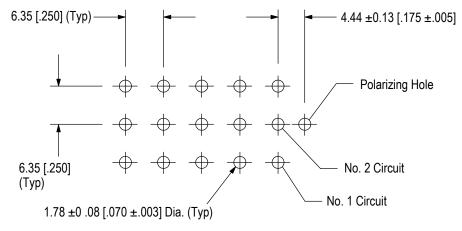

Vertical PC Board Header Layout (15 Position Ref)

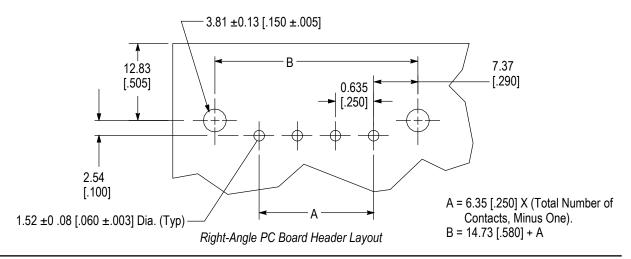


Figure 14

# 3.12. Contact Hole Configuration

The contact holes in the pc board must be prepared as specified in Figure 15.

NOTE: The drilled hole diameter must be sized so that the diameter of the finished hole after plating meets the dimensions as shown.

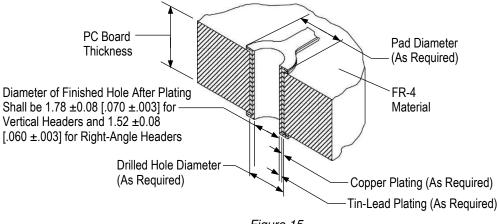


Figure 15

**15** of 18 Rev V1



# 3.13. Soldering

# A. Soldering Guidelines

Universal MATE-N-LOK Connector Headers can be soldered using wave or equivalent soldering techniques. The temperatures and exposure time shall be within the ranges specified in Figure 16. We recommend using SN60 or SN62 solder for these socket assemblies.

SOLDERING PROCESS	TEMPERATURE	TIME (At Max Temperature)	
Wave	260°C [500°F] (Wave Temperature)	5 Seconds	

Figure 6



#### NOTE

Manual 402-40 provides some guidelines for establishing soldering practices. Refer to Paragraph 2.6, Manuals.

# B. Fluxing

The contact solder tines must be fluxed prior to soldering with a mildly active, rosin base flux. Selection of the flux will depend on the type of pc board and other components mounted on the board. Additionally, the flux must be compatible with the wave solder line, manufacturing, health, and safety requirements. Call the Product Information number at the bottom of page 1 for consideration of other types of flux. Some fluxes that are compatible with these sockets are provided in Figure 17.

FLUX TYPE	ACTIVITY	RESIDUE	COMMERCIAL DESIGNATION		
FLUXTIFE	ACTIVITY	RESIDUE	ALPHA	KESTER	
Type RMA (Mildly Activated)	Mild	Noncorrosive	611	185/197	
Center (Activated)	Medium	May be Corrosive	711, 809, 811	1544, 1545, 1547	

Figure 7

# C. Cleaning

After soldering, removal of fluxes, residues, and activators is necessary. Consult with the supplier of the solder and flux for recommended cleaning solvents. The following is a listing of common cleaning solvents that will not affect the sockets. The sockets will be unaffected by any of these solvents for 5 minutes at room temperature.

Cleaners must be free of dissolved flux and other contaminants. We recommend cleaning with the pc board on its edge. If using an aqueous cleaner, we recommend standard equipment such as a soak-tank or an automatic in-line machine. See Figure 18.

CLEAN	ER	TIME	TEMPERATURE	
NAME	TYPE	(Minutes)	(Max)	
ALPHA 2110	Aqueous	1	132°C [270°F]	
BIOACT EC-7	Solvent	5	100°C [212°F]	
Butyl CARBITOL	Solvent	1	Ambient Room	
Isopropyl Alcohol	Solvent		100°C [212°F]	
KESTER 5778	Aqueous			
KESTER 5779	Aqueous	5		
LONCOTERGE 520	Aqueous	3		
LONCOTERGE 530	Aqueous			
Terpene	Solvent			

Figure 18

ALPHA, BIOACT, CARBITOL, LONCOTERGE, and KESTER are trademarks of their respective owners.

Rev V1 16 of 18





#### **DANGER**

Consideration must be given to toxicity and other safety requirements recommended by the solvent manufacturer.

Trichloroethylene and Methylene Chloride can be used with no harmful effect to the sockets; however, TE does not recommend them because of the harmful occupational and environmental effects. Both are carcinogenic (cancer-causing) and Trichloroethylene is harmful to the earth's ozone layer.



#### NOTE

If you have a particular solvent that is not listed, contact the Product Information number at the bottom of page 1.

# D. Drying

When drying clean assemblies and pc boards, air drying of is recommended. Temperature for the sockets should not exceed 105°C [221°F] for a period of five minutes with no degradation to the connector components. Degradation of the sockets could result from extreme temperatures.

# E. Checking Installed Socket

All solder joints should conform to those specified in Test Specification 109-11.

### 3.14. Repair/Replacement

Damaged crimped contacts or housings must be removed, discarded, and replaced with new components. Use an extraction tool to remove individual contacts from connectors for replacement or for relocation to another housing cavity. Extraction Tool 318851-1 is used to extract contacts from the connectors.



#### CAUTION

If a damaged contact is evident before the contacts are inserted into the housing, cut the wire in back of the contact and reterminate the wire end. If the contact or housing is damaged after insertion, remove the contact with the extraction tool and cut the wire in back of the contact and re-terminate wire end.



#### CAUTION

When removing connector headers from pc boards, reasonable care should be taken to remove the headers straight and inline in relation to the pc boards. In free-hanging applications, the wires must be supported during removal to prevent excess strain on the contacts. Improper removal could result in damage to the wires, housing, contacts, or pc board.

# 4. QUALIFICATION

The Universal MATE-N-LOK Connectors are Listed by Underwriters Laboratories Inc. (UL) in File Number E28476, Certified to CSA International in File LR7189, and designed and tested to meet VDE 3980/continuous surveillance.

# 5. TOOLING

Tooling information for product part numbers is available from <a href="www.te.com">www.te.com</a> or by calling the Product Information Center at the number at the bottom of page 1.

Rev V1 17 of 18



# 6. VISUAL AID

The illustration below shows a typical application of this product. This illustration should be used by production personnel to ensure a correctly applied product. Applications which DO NOT appear correct should be inspected using the information in the preceding pages of this specification and in the instructional material shipped with the product or tooling.

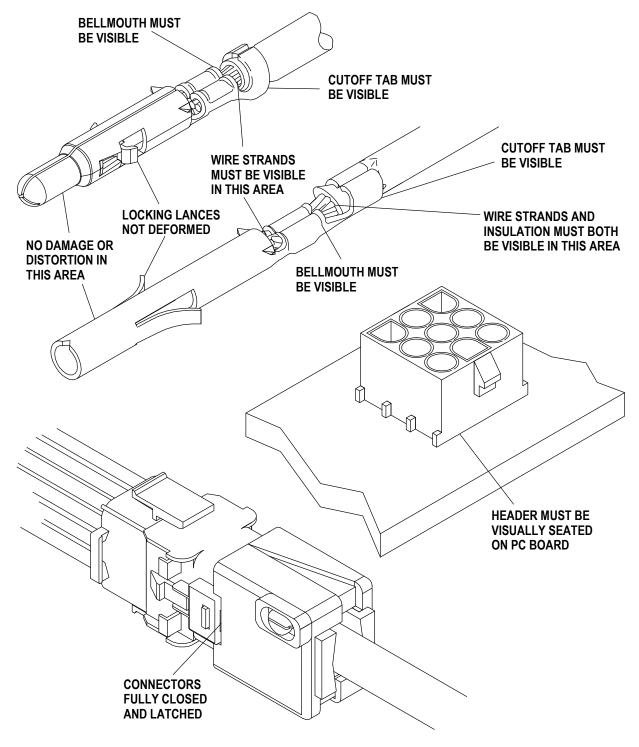


FIGURE 20. VISUAL AID

Rev V1 18 of 18