

移除水印



JRD-M309

航空端子压接钳

- 四芯轴八点式压接
- 精准压接不伤端子
- 经久耐用稳定可靠



八档位调节 应用更广泛

不同档位压接不同范围，尺寸调节更方便

导线范围：8-18AWG(8.37-0.8107mm \boxtimes)

SEL. NO.	压头工作直径 (mm/INCH)	
	A通 (GO)	B止 (NO GO)
1	0.91/0.036	1.04/0.041
2	1.14/0.045	1.27/0.05
3	1.32/0.036	1.45/0.052
4	1.55/0.061	1.68/0.066
5	1.75/0.069	1.88/0.074
6	1.93/0.076	2.06/0.081
7	2.18/0.086	2.41/0.095
8	2.54/0.1	2.79/0.11

定位器调节步骤

JR ready®

根据端子的规格选择合适的定位器

①定位器多种型号可选



01 工具处于张开状态



02 销钉对准销孔



03 拧紧螺丝



04 旋转定位芯对准白色线



05 按下去



06 按下复位按钮进行复位

调节盘使用方法

JRready®



1. 取出别针



2. 提起轮盘并
旋转到所需档位



3. 插回别针
锁定档位

压接钳使用步骤

JRready®



1. 放入端子



2. 放入导线



3. 压接并取出

注意 ① 不得用坚硬的钢质压接件（实心、壁厚等）塞入压齿腔内肆意压接，或当小档误入大直径压接件或压齿腔内被硬物卡住时，请联系我们！

通止规检测步骤



为保证压接质量的稳定性，开始使用之前和使用之后都需要用通止规来进行档位检测（每个档位都有对应的通止规）。




1.调到对应档位




2.压住手柄



3.插入通止规

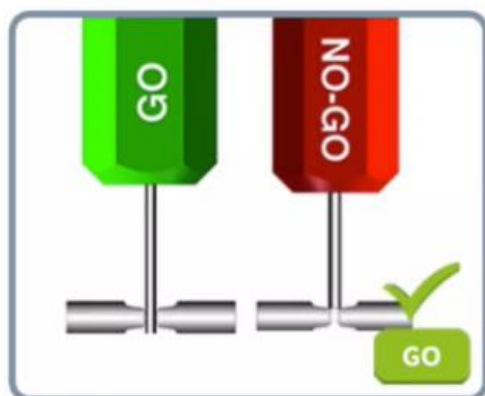

绿色一端通过,红色一端不通过,钳口合格。

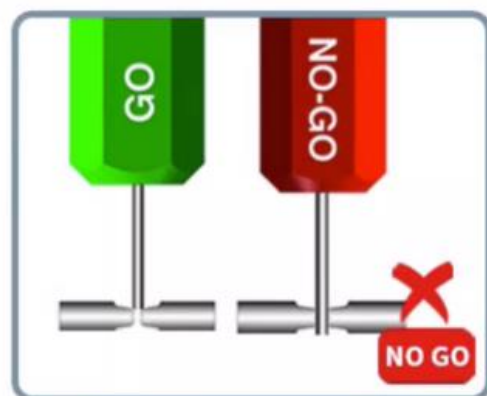

绿色一端不通过或红色一端通过,钳口不合格。

压接应用实例

