

# Digital Timer

## H5CX-□-N

### Ultra-compact Timer Provides Advanced Functions and Security Settings.



#### Basic Features

- Short body with depth of only 59 mm (for 24-VAC / 12 to 24-VDC Models with Screw Terminals). \*1
- Character height of 12 mm for better readability (on models with 4 digits).
- The present value display characters can be switched between red, green, and orange. \*2

#### Safety and Reliability

- Power supply circuit and input circuits are isolated for safety and reliability. \*3
- New set value limit and output counter functions have been added.

#### Other Features

- Front Panel can be changed to white or light gray. \*4
- Models with instantaneous contact output added to the series.

\*1. For 100 to 240 VAC Models with Screw Terminals 78 mm, Models with Sockets: 63.7 mm (case dimension).

\*2. The H5CX-A11, H5CX-L8 and H5CX-B Timers have only red characters.

\*3. Specifications: 100 to 240 VAC

\*4. Replacement Front Panels sold separately.



**NEW**

Refer to "Safety Precautions" on page 41.

## Features


### Basic Features

#### Ultra Short Body

The body depth has been greatly reduced. Helps in making thinner control panels. (Models with Screw Terminals)

24-VAC / 12 to 24-VDC Models with Screw Terminals: 59 mm  
 100 to 240-VAC / VDC Models with Screw Terminals: 78 mm \*  
 Models with Sockets: 63.7 mm (case dimension)

\* The shortest body for a timer with isolated power supply and input circuits and a maximum ambient temperature of 55°C (according to OMRON investigation in June 2009).

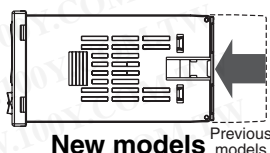

New models


#### Easier to Read

For better readability, the character height for the present value display is 12 mm (on models with 4 digits), the largest class in the industry. The wide viewing angle and brightness provide excellent visibility. The number of display segments has also been increased to make settings easier to understand, and the present value display can be switched between red, green and orange so that output status can be seen from a distance.

Model with 4 Digits    Model with 6 Digits



down (Display example)

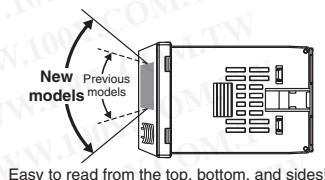


Easy to read from the top, bottom, and sides!

**Note:** The H5CX-A11 and H5CX-L8 Timers have only red characters.

### The Easiest Operation

Operation is simplified by the Up/Down Keys for each digit on 4-digit models and Up Keys for each digit on 6-digit models.

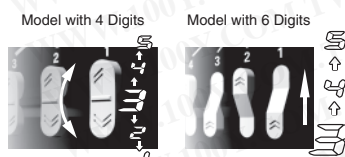


### Safety and Reliability

#### Isolated Power Supply and Input Circuits \*1

Power supply circuit and input circuits are isolated for safety and reliability.

Previous non-isolated timers had wiring restrictions and could be damaged if wired incorrectly. The New H5CX removes these worries.

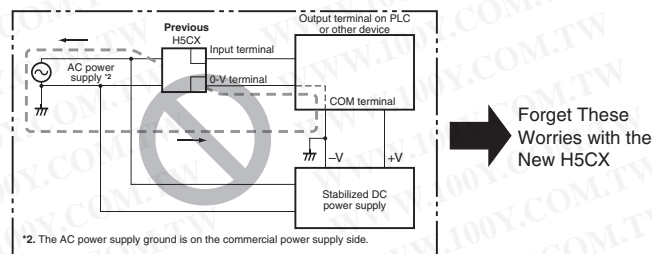

\*2. The AC power supply ground is on the commercial power supply side.

Forget These Worries with the New H5CX

\*1. New Models (H5CX-□-N) with 100 to 240-VAC specifications.

#### Set Value Limit

You can set an upper limit for the set value to prevent unexpected operation of output devices caused by setting mistakes.



#### Output Counter


The output counter counts the number of times the output turns ON (alarm display, count monitoring, count in increments of 1,000). This counter is useful in managing the service life of the Timer or the load.



## Other Features

### Change the Front Panel Color

The Front Panel can be replaced with an optional Front Panel (order separately) with a different color to match the installation site. Select from black, white, and light gray.

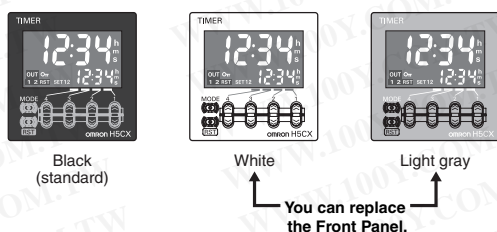

### Models with Instantaneous Contact Output

Models with instantaneous contact outputs have been added to the lineup for use with self-holding circuits and as auxiliary relays. These models are also convenient when replacing analog timers.

### Universal NPN/PNP Input

DC 2-wire sensors can be connected for a wide range of input devices.

### Waterproof, Dust-proof Structure (UL508 Type 4X and IP66)

Worry-free application is possible in locations subject to water.

**Note:** When the Y92S-29 Waterproof Packing is used.

### Key Protection




Select from any of seven protection patterns. Use the best one for the application.

### New Modes

Modes, such as a stopwatch mode (Mode S), have been added. Select any of 15 modes.

## Model Number Structure
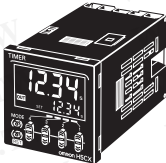
### Model Configuration

H5CX Series					
Type	Standard Type H5CX-A Series		Economy Type H5CX-L Series		Six-digit Type H5CX-B Series
					
Model	H5CX-A□-N		H5CX-A11□-N		H5CX-L8□-N
Function	Timer	Yes		Yes	
	Twin timer	Yes		Yes	
	Two-stage settings/ forecast output	No		No	
Operating modes	Timer Mode: 11 modes Twin Timer Mode: 4 modes			Timer Mode : 4 modes Twin Timer Mode : 2 modes	Timer Mode: 2 modes
Input	NPN/PNP input		NPN input	None	
External connections	Screw terminal block	11-pin socket	8-pin socket		Screw terminal block
Present value display character color	Red, green, or orange	Red			
Number of display digits	4				6
Instantaneous contacts	None			Provided	None
Gate input	Supported		Not supported		Supported
DIP switch settings	Provided		None		Provided
Power supply voltage	100 to 240 VAC or 24 VAC/12 to 24 VDC				12 to 24 VDC



## Model Number Legend (Not all possible combinations of functions are available.)

**H5CX-□□□□□-N**

1 2 3 4 5

### 1. Type Classifier

Symbol	Meaning
A	Standard type
B	6-digit type
L	Economy type

### 4. Output type

Symbol	Meaning
None	Contact output (time-limit SPDT)
E	Contact output (time-limit SPDT + instantaneous SPDT) *
S	Transistor output

\* Can be used as a time-limit DPDT output.

### 2. External Connections

Symbol	Meaning
None	Screw terminals
8	8-pin socket
11	11-pin socket

### 5. Supply voltage

Symbol	Meaning
None	100 to 240 VAC 50/60 Hz
D	12 to 24 VDC/24 VAC 50/60 Hz *

\* The H5CX-BWSD-N is available only for 12 to 24 VDC.

### 3. Settings

Symbol	Meaning
None	One stage
W	Two stages

## Ordering Information

### List of Models

Type	Time specifications	Operating modes	External connections	Inputs	Outputs	Supply voltage	Models				
H5CX-A	0.001 to 9.999 s 0.01 to 99.99 s 0.1 to 999.9 s 1 to 9999 s	Timer Mode A: Signal ON Delay I A-1: Signal ON Delay II A-2: Power ON Delay I A-3: Power ON Delay II b: Repeat cycle 1 b-1: Repeat cycle 2 d: Signal OFF Delay E: Interval F: Cumulative Z: ON/OFF-duty-adjustable flicker S: Stopwatch	Screw terminals	Signal, Reset, Gate (NPN/ PNP inputs)	Contact output (time-limit SPDT)	100 to 240 VAC  12 to 24 VDC/ 24 VAC	H5CX-A-N  H5CX-AD-N				
					Transistor output (SPST)	100 to 240 VAC  12 to 24 VDC/ 24 VAC	H5CX-AS-N  H5CX-ASD-N				
			11-pin socket		Contact output (time-limit SPDT)	100 to 240 VAC  12 to 24 VDC/ 24 VAC	H5CX-A11-N  H5CX-A11D-N				
					Transistor output (SPST)	100 to 240 VAC  12 to 24 VDC/ 24 VAC	H5CX-A11S-N  H5CX-A11SD-N				
					H5CX-L	Twin Timer Mode toff: Flicker OFF Start 1 ton: Flicker ON Start 1 toff-1: Flicker OFF Start 2 ton-1: Flicker ON Start 2	8-pin socket	Signal, Reset (NPN inputs)	Contact output (time-limit SPDT)	100 to 240 VAC  12 to 24 VDC/ 24 VAC	H5CX-L8-N  H5CX-L8D-N
									Transistor output (SPST)	100 to 240 VAC  12 to 24 VDC/ 24 VAC	H5CX-L8S-N  H5CX-L8SD-N
None	Contact output (time-limit SPDT + instantaneous SPDT) Models with instantaneous contact outputs	100 to 240 VAC  12 to 24 VDC/ 24 VAC	H5CX-L8E-N  H5CX-L8ED-N								
	H5CX-B	0.01 to 9999.99 s 1 s to 99 h 59 min 59 s 0.1 to 99999.9 min 0.1 to 99999.9 h	A: Signal ON Delay I F-1: Cumulative	Screw terminals					Signal, Reset, Gate (NPN/ PNP inputs)	Transistor output (DPST)	12 to 24 VDC

**Note:** 1. The functions that are provided depend on the model. Check detailed specifications before ordering.

2. Refer to **page 33** and later for information on H5CX-B Timers (6-digit display).



## Accessories (Order Separately)

### Front Panels (Replacement Parts)

Models	Color	Applicable Timers	Page
Y92P-CXT4G	Light gray (5Y7/1)	Four-digit models	12
Y92P-CXT4S	White (5Y9.2 / 0.5)		
Y92P-CXT4B	Black (N1.5)		

**Note:** 1. You can change the color of the front panel when mounting the Timer. The Timer is shipped with a black (N1.5) Front Panel.  
2. "TIMER" is printed on the front of Replacement Front Panels.

### Soft Cover

Models	Remarks	Page
Y92A-48F1	---	12

### Hard Cover

Models	Remarks	Page
Y92A-48	---	12

### Flush Mounting Adapter

Models	Remarks	Page
Y92F-30	Included with models with terminal blocks.	12
Y92F-45	Use this Adapter to install the Timer in a cutout previously made for a DIN 72 x 72 mm device (panel cutout: 68 x 68 mm).	

### Waterproof Packing

Models	Remarks	Page
Y92S-29	Included with models with terminal blocks.	12

### Connection Sockets

Models	Type	Connectable Timers	Remarks	Page
P2CF-08	Front Connecting Socket	H5CX-L8□	Round crimp terminals cannot be used on Finger-safe Sockets. Use forked crimp terminals.	13
P2CF-08-E	Front Connecting Socket (Finger-safe Type)			
P2CF-11	Front Connecting Socket	H5CX-A11□	Round crimp terminals cannot be used on Finger-safe Sockets. Use forked crimp terminals.	
P2CF-11-E	Front Connecting Socket (Finger-safe Type)			
P3G-08	Back Connecting Socket	H5CX-L8□	A Y92A-48G Terminal Cover can be used with the Socket to create a finger-safe construction.	
P3GA-11		H5CX-A11□		

### Terminal Covers for P3G-08 and P3GA-11 Back-connecting Sockets

Models	Remarks	Page
Y92A-48G	---	14

勝特力材料 886-3-5753170  
勝特力电子(上海) 86-21-34970699  
勝特力电子(深圳) 86-755-83298787  
[Http://www.100y.com.tw](http://www.100y.com.tw)



## H5CX-A□-N/-L□-N Digital Timers

- Switch the display color\* between red, green, and orange to see the output status from a distance.
- Up/Down Keys for each digit enable easy operation.
- Cyclic control is easy with the Twin Timer and Variable ON/OFF Duty modes.

\* Not supported by the H5CX-A11□-N or H5CX-L8□-N.



## Specifications

## Ratings

Item		Models	H5CX-A□-N	H5CX-A11□-N	H5CX-L8□-N
Classification			Standard Type		Economy Type
Ratings	Power supply voltage <sup>*1</sup>	• 100 to 240 VAC 50/60 Hz • 12 to 24 VDC/24 VAC 50/60 Hz			
	Operating voltage fluctuation range	85% to 110% of rated supply voltage (90% to 110% at 12 to 24 VDC)			
	Power consumption	Approx. 6.2 VA at 100 to 240 VAC, Approx. 5.1 VA/2.4 W at 24 VAC/12 to 24 VDC <sup>*2</sup>			
Mounting method		Flush mounting		Flush mounting, surface mounting, DIN track mounting	
External connections		Screw terminals		11-pin socket	8-pin socket
Degree of protection		IEC IP66, UL508 Type 4X (indoors) for panel surface only and when Y92S-29 Waterproof Packing is used			
Digits		4 digits			
Time ranges		0.001 s to 9.999 s, 0.01 s to 99.99 s, 0.1 s to 999.9 s, 1 s to 9999 s, 1 s ti 99 min 59 s 0.1 m to 999.9 min, 1 min to 9999 min, 1 min to 99 h 59 min, 0.1 h to 999.9 h, 1 h to 9999 h			
Timer mode		Elapsed time (Up), remaining time (Down) (selectable)			
Inputs	Input signals	Signal, Reset, Gate			Signal, Reset (no inputs on models with instantaneous contact outputs)
	Input method	No-voltage Input	ON impedance: 1 kΩ max. (Leakage current: 12 mA when 0 Ω) ON residual voltage: 3 V max. OFF impedance: 100 kΩ min.		No-voltage Input ON impedance: 1 kΩ max. (Leakage current: 12 mA when 0 Ω)
		Voltage Input	High (logic) level: 4.5 to 30 VDC Low (logic) level: 0 to 2 VDC (Input resistance: approx. 4.7 kΩ)		ON residual voltage: 3 V max. OFF impedance: 100 kΩ min.
			No-voltage input/voltage input (switchable)		
	Signal, reset, gate	Minimum input signal width: 1 or 20 ms (selectable, same for all input)			
Reset system		Power reset (depending on output mode), external reset, manual reset, automatic reset (depending on output mode)			
Power reset		Minimum power-opening time: 0.5 s (except for A-3, b-1, F, ton-1, and toff-1 mode)			
Reset voltage		10% max. of rated supply voltage			
Sensor waiting time		250 ms max. (Control output is turned OFF and no input is accepted during sensor waiting time.)			
Output	Output modes	A: Signal ON Delay I, A-1: Signal ON Delay II, A-2: Power ON Delay I, A-3: Power ON Delay II, b: Repeat Cycle 1, b-1: Repeat Cycle 2, d: Signal OFF Delay, E: Interval, F: Cumulative, Z: ON/OFF-duty-adjustable flicker, S: Stopwatch, toff: Flicker OFF Start 1, ton: Flicker ON Start 1, toff-1: Flicker OFF Start 2, ton-1: Flicker ON Start 2			Models with Instantaneous Contact Outputs A-2: Power ON Delay I, b: Repeat Cycle 1, E: Interval, Z: ON/OFF-duty-adjustable flicker, toff: Flicker OFF Start 1, ton: Flicker ON Start 1
	One-shot output time	0.01 to 99.99 s			
	Control output	• Models with Contact Outputs 5 A at 250 VAC/30 VDC, resistive load (cos =1) Minimum applied load: 10 mA at 5 VDC (failure level: P, reference value) • Transistor output: NPN open collector, 100 mA at 30 VDC max., residual voltage: 1.5 VDC max. (Approx. 1 V), Leakage current: 0.1 mA max.			
Display method <sup>*3</sup>		7-segment, negative transmissive LCD; Present value: 12-mm-high characters, (switchable between red, green, and orange) Set value: 6-mm-high characters, green		7-segment, negative transmissive LCD; Present value: 12-mm-high characters, red Set value: 6-mm-high characters, green	
Memory backup		EEPROM (overwrites: 100,000 times min.) that can store data for 10 years min.			
Operating temperature range		-10 to 55°C (-10 to 50°C if counters are mounted side by side) (with no icing or condensation)			
Storage temperature range		-25 to 70°C (with no icing or condensation)			
Operating humidity range		25% to 85%			
Case color		Black (N1.5) (Optional Front Panels are available to change the Front Panel color to light gray or white.)			
Attachments		Waterproof packing, flush mounting adapter, label for DIP switch settings		Label for DIP switch settings	---

\*1. Do not use the output from an inverter as the power supply. The ripple must be 20% maximum for DC power.

\*2. Inrush current will flow for a short time when the power supply is turned ON.  
Inrush Current (Reference Values)

Voltage	Applied voltage	Inrush current (peak value)	Time
100 to 240 VAC	264 VAC	5.3 A	0.4 ms
12 to 24 VDC/24 VAC	26.4 VAC	6.4 A	1.4 ms
	26.4 VDC	4.4 A	1.7 ms

\*3. The display is lit only when the power is ON. Nothing is displayed when power is OFF.




## Characteristics

<b>Accuracy of operating time and setting error (including temperature and voltage influences)</b>		Power-ON start: $\pm 0.01\%$ $\pm 50$ ms max. (See note 1.) Signal start: $\pm 0.005\%$ $\pm 0.03$ ms max. (See note 1.) Signal start for transistor output model: $\pm 0.005\%$ $\pm 3$ ms max. (See note 1 and 2.) If the set value is within the sensor waiting time at startup the control output of the H5CX will not turn ON until the sensor waiting time passes. <b>Note:</b> 1. The values are based on the set value. 2. The value is applied for a minimum pulse width of 1 ms.
<b>Insulation resistance</b>		100 M $\Omega$ min. (at 500 VDC) between current-carrying terminal and exposed non-current-carrying metal parts, and between non-continuous contacts
<b>Dielectric strength</b>		2,000 VAC, 50/60 Hz for 1 min between current-carrying metal parts and non-current-carrying metal parts 2,000 VAC, 50/60 Hz for 1 min between power supply and input circuits for H5CX-A11-N/-A11S-N 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for H5CX-□SD-N 2,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between non-continuous contacts
<b>Impulse withstand voltage</b>		3 kV (between power terminals) for 100 to 240 VAC, 1 kV for 24 VAC/12 to 24 VDC 4.5 kV (between current-carrying terminal and exposed non-current-carrying metal parts) for 100 to 240 VAC 1.5 kV for 24 VAC/12 to 24 VDC
<b>Noise immunity</b>		$\pm 1.5$ kV (between power terminals) and $\pm 600$ V (between input terminals), square-wave noise by noise simulator (pulse width: 100 ns/1 $\mu$ s, 1-ns rise)
<b>Static immunity</b>		Malfunction: 8 kV Destruction: 15 kV
<b>Vibration resistance</b>	<b>Destruction</b>	10 to 55 Hz with 0.75-mm single amplitude each in three directions for 2 h each
	<b>Malfunction</b>	10 to 55 Hz with 0.35-mm single amplitude each in three directions for 10 min each
<b>Shock resistance</b>	<b>Destruction</b>	300 m/s <sup>2</sup> in three directions, three cycles
	<b>Malfunction</b>	100 m/s <sup>2</sup> in three directions, three cycles
<b>Life expectancy</b>	<b>Mechanical</b>	10,000,000 operations min. (under no load at 18,000 operations/h and ambient temperature of 23°C)
	<b>Electrical</b>	100,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h and ambient temperature of 23°C) *
<b>Weight</b>		Approx. 115 g (Timer only)

\* Refer to Life-test Curve.

## Life-test Curve (Reference Values)

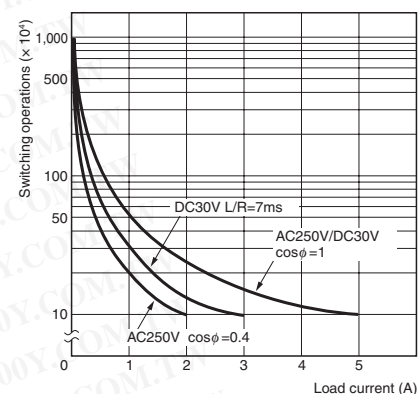

A maximum current of 0.15 A can be switched at 125 VDC (cosφ =1) and a maximum current of 0.1 A can be switched if L/R is 7 ms. In both cases, a life of 100,000 operations can be expected.



## Applicable Standards

Approved safety standards	UL508/Listing, UL50 Type 4X for indoor use (enclosure rating), CSA C22.2 No. 14 <sup>*1</sup> , conforms to EN61812-1 (Pollution degree 2/overvoltage category III) B300 PILOT DUTY 1/4 HP 120 VAC, 1/3 HP, 240 VAC, 5 A resistive load VDE0106/P100 CCC: Pollution degree 2, Overvoltage category II <sup>*2</sup>	
EMC	(EMI) Emission Enclosure: Emission AC mains: (EMS) Immunity ESD:  Immunity RF-interference:  Immunity Conducted Disturbance: Immunity Burst:  Immunity Surge:  Immunity Voltage Dip/Interruption:	EN61812-1 EN55011 Group 1 class A EN55011 Group 1 class A EN61812-1 EN61000-4-2: 6 kV contact discharge (level 2) 8 kV air discharge (level 3) EN61000-4-3: 10 V/m (Amplitude-modulated, 80 MHz to 1 GHz) (level 3); 10 V/m (Pulse-modulated, 900 MHz 5 MHz) (level 3) EN61000-4-6: 10 V (0.15 to 80 MHz) (level 3) EN61000-4-4: 2 kV power-line (level 3); 1 kV I/O signal-line (level 4) EN61000-4-5: 1 kV line to lines (power and output lines) (level 3); 2 kV line to ground (power and output lines) (level 3) EN61000-4-11: 0.5 cycle, 100% (rated voltage)

\*1. The following safety standards apply to models with sockets (H5CX-A11□ or H5CX-L8□).

cUL (Listing): Applicable when an OMRON P2CF (-E) Socket is used.

cUR (Recognition): Applicable when any other socket is used.

\*2. Excluding the H5CX-ASD-N/-A11SD-N/-L8SD-N.

## I/O Functions

For details, refer to the timing charts on **page 20** and **page 29**.

Inputs <sup>*1</sup>	Start signal	Normally functions to start timing. In modes A-2 and A-3, disable timing. In mode S, starts and stops timing.
	Reset	<ul style="list-style-type: none"> <li>Resets present value. (In elapsed time mode, the present value returns to 0; in remaining time mode, the present value returns to the set value.)</li> <li>Count inputs are not accepted and control output turns OFF while reset input is ON.</li> <li>Reset indicator is lit while reset input is ON.</li> </ul>
	Gate <sup>*2</sup>	Disables timing. (If a reset occurs while the gate input is ON, a reset will be performed.)
Outputs	Control output (OUT)	Outputs take place according to designated operating mode when timer reaches corresponding set value.

\*1. The H5CX-L8E□ does not have an input.

\*2. The H5CX-L□ does not have a gate input.

## Response Delay Time When Resetting (Transistor Output)

The following table shows the delay from when the reset signal is input until the output is turned OFF.


(Reference value)

Minimum reset signal width	Output delay time
1 ms	0.8 to 1.2 ms
20 ms	15 to 25 ms



## Connections

### Block Diagram

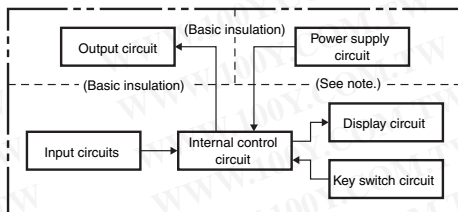

**Note:** Basic insulation is provided between the power supply circuit and the input circuits. However, basic insulation is not provided in the H5CX-□D-N.

### Terminal Arrangement


Confirm that the power supply meets specifications before use.

H5CX-A-N/-AD-N	H5CX-AS-N/-ASD-N
<p>Terminals 1 and 6 of the H5CX-AD-N are connected internally.</p>	<p>Terminals 1 and 6 of the H5CX-ASD-N are connected internally.</p>
H5CX-A11-N/-A11D-N	H5CX-A11S-N/-A11SD-N
<p>Terminals 2 and 3 of the H5CX-A11D-N are connected internally.</p>	<p>Terminals 2 and 3 of the H5CX-A11SD-N are connected internally.</p>
H5CX-L8-N/-L8D-N	H5CX-L8S-N/-L8SD-N
<p>Terminals 1 and 2 of the H5CX-L8D-N are connected internally.</p>	<p>Terminals 1 and 2 of the H5CX-L8SD-N are connected internally.</p>
H5CX-L8E-N/-L8ED-N	

**Note:** Do not connect unused terminals as relay terminals.

### Transistor Output

- The transistor output of the H5CX is insulated from the internal circuitry by a photocoupler, so the transistor output can be used as both NPN and PNP output.
- The diode connected to the collector of the output transistor is used to absorb inverted voltage that is generated when an inductive load is connected to the H5CX.

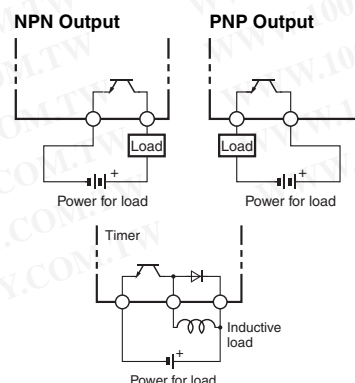




## Input Circuits

### Signal, Reset, and Gate Input

#### No-voltage Inputs (NPN Inputs)

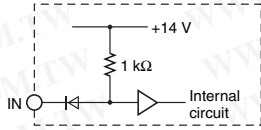

#### Voltage Inputs (PNP Inputs)




## Input Connections

The inputs are no-voltage (closed or open) inputs or voltage inputs except for the H5CX-L8□. (The inputs of the H5CX-L8□ are no-voltage inputs only. The H5CX-L8E□ does not have an input.)

### No-voltage Inputs (NPN Inputs)


#### Open Collector

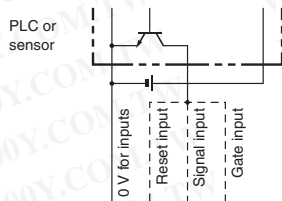

H5CX-A□	6	7	8	9
H5CX-A11□	3	7	6	5
H5CX-L8□	1	3	4	-

Note: Operate with transistor ON


#### Voltage Output

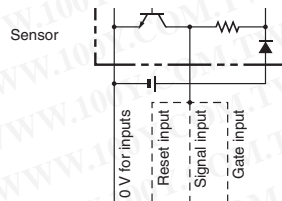

H5CX-A□	6	7	8	9
H5CX-A11□	3	7	6	5
H5CX-L8□	1	3	4	-

Note: Operate with transistor ON


#### Contact Input

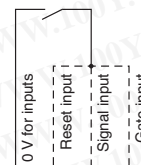

H5CX-A□	6	7	8	9
H5CX-A11□	3	7	6	5
H5CX-L8□	1	3	4	-

Note: Operate with relay ON

#### DC Two-wire Sensor

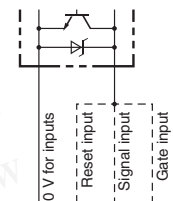

H5CX-A□	6	7	8	9
H5CX-A11□	3	7	6	5
H5CX-L8□	1	3	4	-

Note: Operate with transistor ON

### No-voltage Input Signal Levels

No-contact input	Short-circuit level Transistor ON
	<ul style="list-style-type: none"> <li>Residual voltage: 3 V max.</li> <li>Impedance when ON: 1 kΩ max.</li> </ul> (The leakage current is approx. 12 mA when the impedance is 0 Ω.)
Contact input	Open level Transistor OFF
	<ul style="list-style-type: none"> <li>Impedance when OFF: 100 kΩ min.</li> </ul>


Note: The DC voltage must be 30 VDC max.

### Applicable Two-wire Sensor

- Leakage current: 1.5 mA max.
- Switching capacity: 5 mA min.
- Residual voltage: 3.0 VDC max.
- Operating voltage: 10 VDC

### Voltage Inputs (PNP Inputs) The inputs of the H5CX-L8□ are no-voltage inputs only.


#### No-contact Input (NPN Transistor)

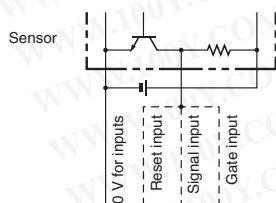

H5CX-A□	6	7	8	9
H5CX-A11□	3	7	6	5

Note: Operate with transistor OFF


#### No-contact Input (PNP Transistor)

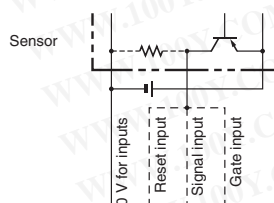

H5CX-A□	6	7	8	9
H5CX-A11□	3	7	6	5

Note: Operate with transistor ON

#### Contact Input

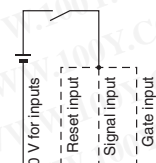

H5CX-A□	6	7	8	9
H5CX-A11□	3	7	6	5

Note: Operate with relay ON

### Voltage Input Signal Levels

High level (Input ON): 4.5 to 30 VDC
Low level (Input OFF): 0 to 2 VDC

Note: 1. The DC voltage must be 30 VDC max.  
2. Input resistance: Approx. 4.7 kΩ




# H5CX-A□-N/-L□-N

## Nomenclature


### Display Section

1. Key Protect Indicator (orange)
2. Control Output Indicator (orange)
3. Reset Indicator (orange)
4. Present Value Display (Main display)  
(Character height: 12 mm, red \*)  
\* Characters on models with screw terminals (H5CX-A□) can be switched between red, green, and orange.
5. Time Unit Indicators  
(Color is same as present value display.)  
(If the time range is 0 min, 0 h, 0.0 h, or 0 h 0 min, these indicators flash to indicate timing operation.)
6. Set Value Display (Sub-display)  
(Character height: 6 mm, green)
7. Set Value 1, 2 Indicator (green)


Character Size  
for Present  
Value Display



Character Size  
for Set Value  
Display

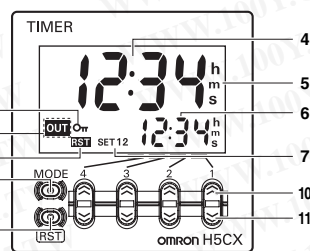

Front View

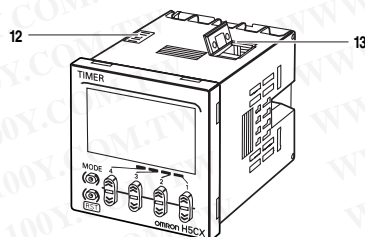


### Operation Key

8. Mode Key  
(Changes modes and setting items)
9. Reset Key  
(Resets present value and output)
10. Up Keys 1 to 4
11. Down Keys 1 to 4


### Switches

#### 12. Key-protect Switch

(Default setting) OFF (Disabled) ↔ ON (Enabled)



#### 13. DIP Switch



**Note:** There is no DIP switch on the H5CX-L8□.


## Dimensions

(unit: mm)

### Digital Timers


#### Digital Timers

#### H5CX-A-N/-AS-N (Flush Mounting Models)

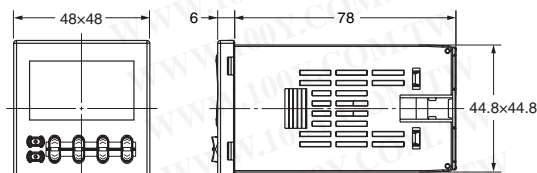

**Note:** M3.5 terminal screw (effective length: 6 mm)


#### H5CX-AD-N/-ASD-N (Flush Mounting Models)

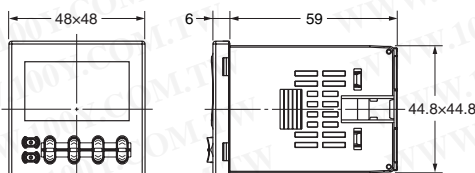


**Note:** M3.5 terminal screw (effective length: 6 mm)

#### H5CX-A11□-N

#### (Flush Mounting/Surface Mounting Models)

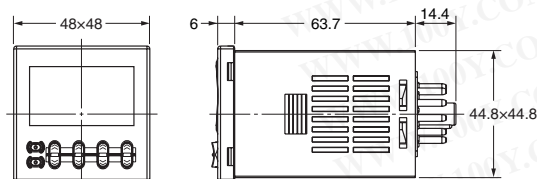


#### H5CX-L8□-N (Flush Mounting/Surface Mounting Models)

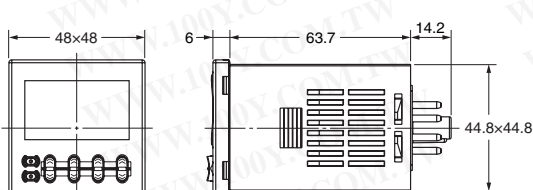




## Dimensions with Flush Mounting Adapter


### H5CX-A-N/-AS-N (Provided with Adapter and Waterproof Packing)

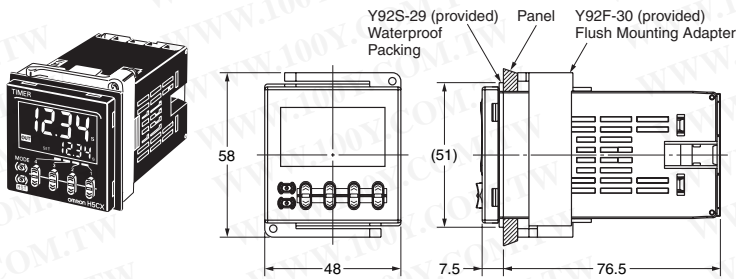


### H5CX-AD-N/-ASD-N (Provided with Adapter and Waterproof Packing)

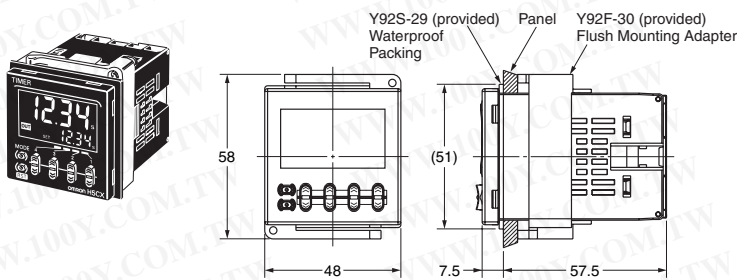

### H5CX-A11□-N (Adapter and Waterproof Packing Ordered Separately)

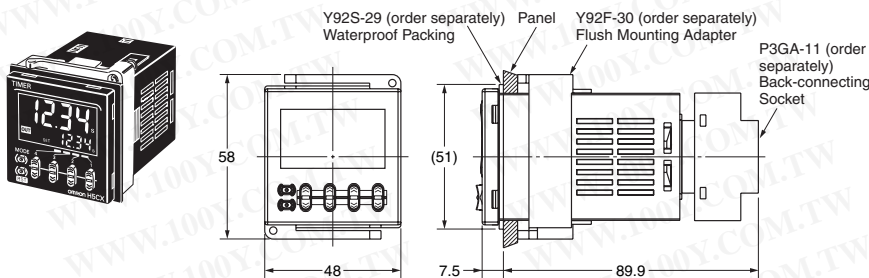


### H5CX-L8□-N (Adapter and Waterproof Packing Ordered Separately)

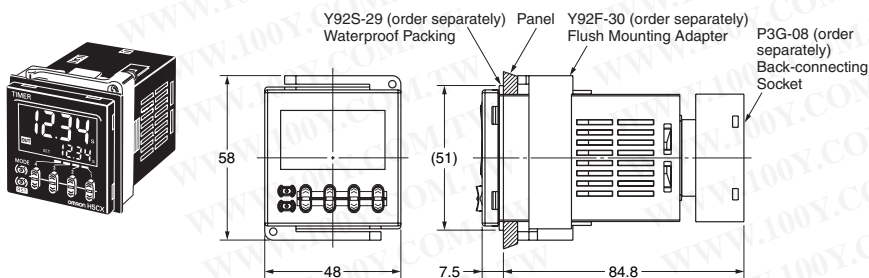


#### Panel Cutouts

Panel cutouts areas shown below. (according to DIN43700).

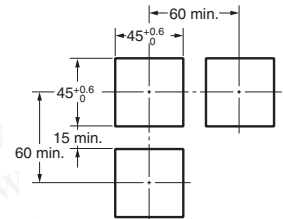


- Note:**
1. The mounting panel thickness should be 1 to 5 mm.
  2. To allow easier operation, it is recommended that Adapters be mounted so that the gap between sides with hooks is at least 15 mm (i.e., with the panel cutouts separated by at least 60 mm).
  3. It is possible to mount Timers side by side, but only in the direction without the hooks. (However, if Timers are mounted side by side, water resistance will be lost.)




With Y92A-48F1 attached.  
 $A = \{48n - 2.5 + (n-1) \times 4\} +1/-0$

With Y92A-48 attached.  
 $A = (51n - 5.5) +1/-0$

#### Dimensions with Front Connecting Socket

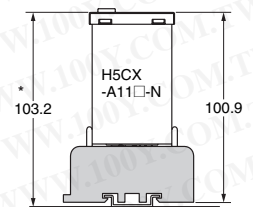

P2CF-11(-E) (order separately)  
 Front Connecting Socket

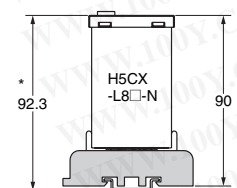

P2CF-08(-E) (order separately)  
 Front Connecting Socket

\* These dimensions vary with the type of DIN track (reference value).



## Accessories (Order Separately)

### Note:

Depending on the operating environment, the condition of resin products may deteriorate, and may shrink or become harder. Therefore, it is recommended that resin products are replaced regularly.

### Front Panel (Replacement Part)

You can change the color of the front panel when mounting the Timer. The Timer is shipped with a black (N1.5) Front Panel.

#### Y92P-CXT4S

Cover for Timer with 4 Digits  
White (5Y9.2/0.5)

#### Y92P-CXT4G


Cover for Timer with 4 Digits  
Light gray (5Y7/1)

#### Y92P-CXT4B

Cover for Timer with 4 Digits  
Black (N1.5)




### Replacement Method

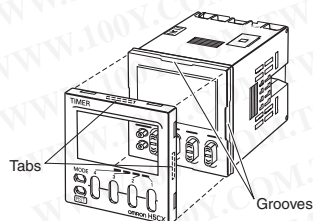

The Front Panel is attached to the Terminal with tabs in four locations. To remove the Front Panel, open the tabs and pull the Front Panel forward. To attach the Front Panel, press it onto the Timer so that all four tabs lodge into the grooves on the body of the Timer.


### Soft Cover

Y92A-48F1

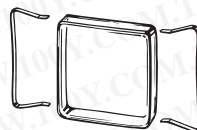

### Hard Cover

Y92A-48



### Protecting the Timer in Environments Subject to Oil

The H5CX's panel surface is water-resistive (IP□6, UL Type 4X) and so even if drops of water penetrate the gaps between the keys, there will be no adverse effect on internal circuits. If, however, there is a possibility of oil being present on the operator's hands, use the Soft Cover. The Soft Cover ensures protection equivalent to IP54 against oil. Do not, however, use the H5CX in locations where it would come in direct contact with oil.

### Flush Mounting Adapter

Y92F-30


Order the Flush Mounting Adapter separately if it is lost or damaged.

**Note:** A Flush Mounting Adapter is included with models with screw terminals.



Y92F-45

Use this Adapter to install the Timer in a cutout previously made for a DIN 72 x 72 mm device (panel cutout: 68 x 68 mm).

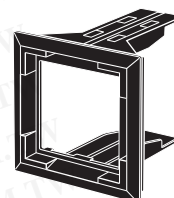

### Waterproof Packing

Y92S-29

**Note:** The Waterproof Packing is included with models with screw terminals.



Order the Waterproof Packing separately if it is lost or damaged. The Waterproof Packing can be used to achieve IP66 protection.

















The Waterproof Packing will deteriorate, harden, and shrink depending on the application environment. To ensure maintaining the IP□6, UL Type 4X waterproof level, periodically replace the Waterproof Packing. The periodic replacement period will depend on the application environment. You must confirm the proper replacement period. Use 1 year or less as a guideline. If the Waterproof Packing is not replaced periodically, the waterproof level will not be maintained.

It is not necessary to mount the Waterproof Packing if waterproof construction is not required.









## Connection Sockets

### Front-connecting Sockets

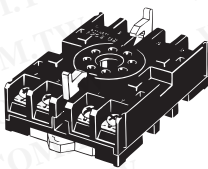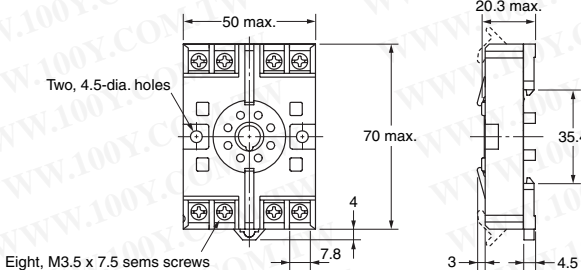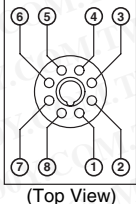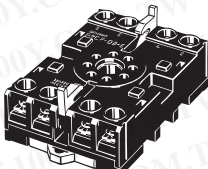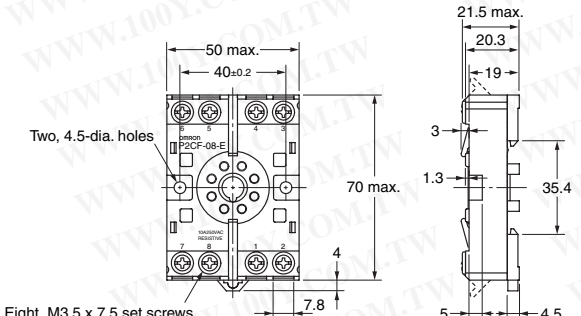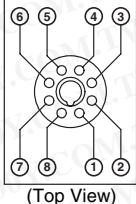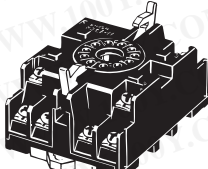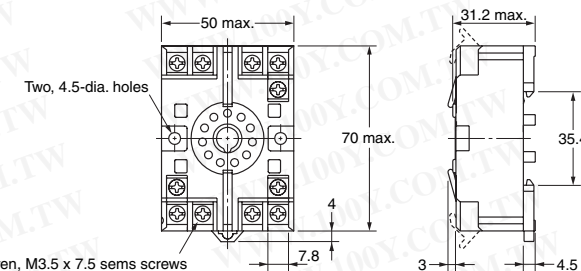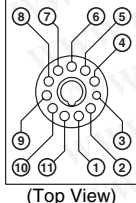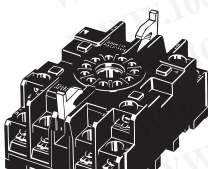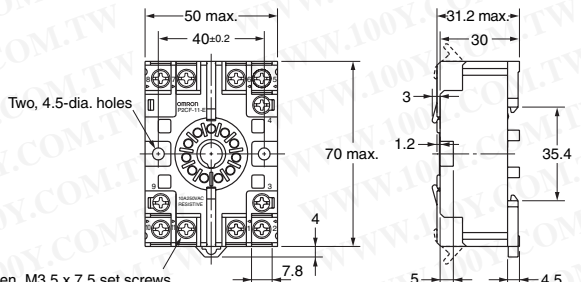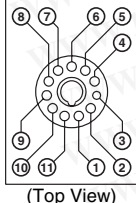Model	Dimensions	Terminal arrangement and internal connections	Mounting hole dimensions
<b>P2CF-08</b>	 	 <p>(Top View)</p>	 <p>Note: The Socket can also be mounted to DIN track.</p>
<b>P2CF-08-E (Finger Safe Terminal)</b>	 	 <p>(Top View)</p>	 <p>Note: The Socket can also be mounted to DIN track.</p>
<b>P2CF-11</b>	 	 <p>(Top View)</p>	 <p>Note: The Socket can also be mounted to DIN track.</p>
<b>P2CF-11-E (Finger Safe Terminal Type)</b>	 	 <p>(Top View)</p>	 <p>Note: The Socket can also be mounted to DIN track.</p>

**Note:** Round crimp terminals cannot be used on Finger-safe Sockets. Use forked crimp terminals.


### Back-connecting Sockets

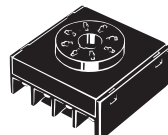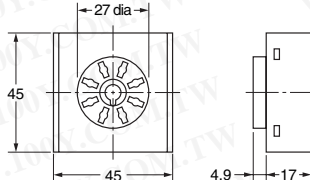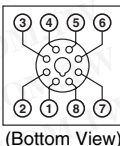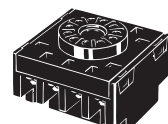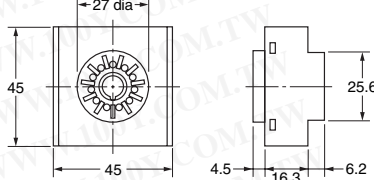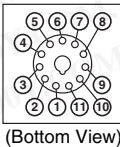Model	Dimensions	Terminal arrangement and internal connections
<b>P3G-08</b>	 	 <p>(Bottom View)</p>
<b>P3GA-11</b>	 	 <p>(Bottom View)</p>

**Note:** A Y92A-48G Terminal Cover can be used with the Socket to create a finger-safe construction.



Terminal Covers for P3G-08 and P3GA-11 Back-connecting Sockets

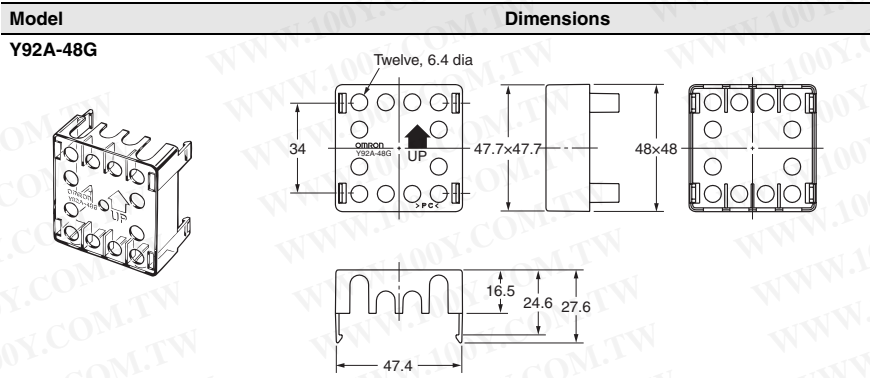


**Note:** The Terminal Cover can be used with a Back-mounting Socket (P3G-08 or P3GA-11) to create a finger-safe construction.

Optional Products for Track Mounting


Mounting Track

PFP-100N  
PFP-50N

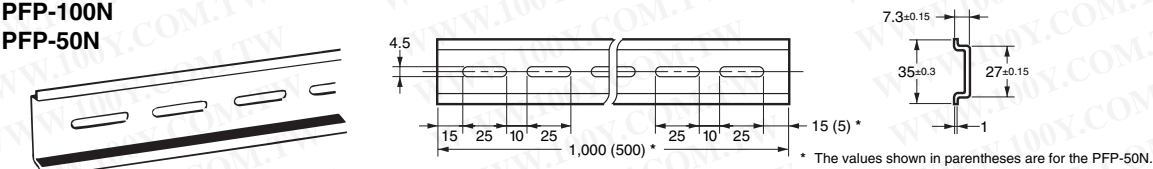


Mounting Track

PFP-100N2

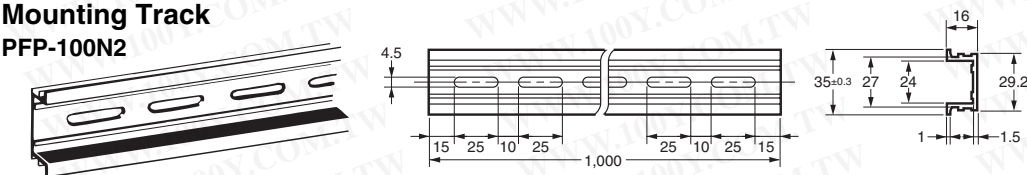

End Plate

PFP-M

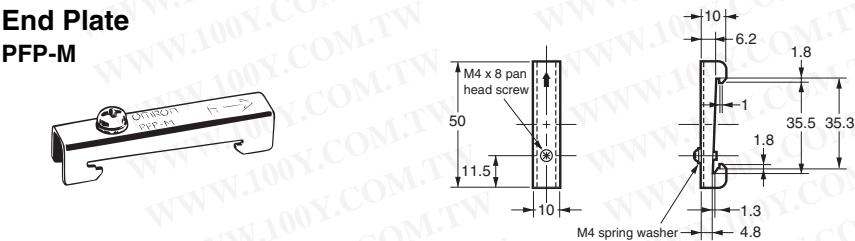

Spacer

PFP-S



**Note:** Order Spacers in increments of 10.



## Operating Procedures

### Setting Procedure Guide

#### Settings for Timer Operation \*

Use the following settings.

#### Settings for Twin Timer Operation \*

Refer to **page 25**.

\* It is not necessary to mount the Waterproof Packing if waterproof construction is not required.


### Operating Procedures for Timer Function

#### Step1


Settings for basic functions can be performed with just the DIP switch.

**Note:** There is no DIP switch on the H5CX-L8□. Go to **Step2**.

Key-protect Switch

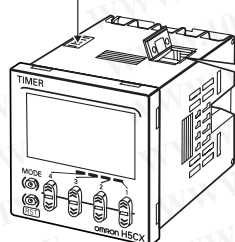

Be sure to set pin 1 to ON when using the DIP switch.



	Item	OFF	ON
1	DIP switch settings	Disabled	Enabled
2	Time range	Refer to the table on the right.	
3			
4	Output modes	Refer to the table on the right.	
5			
6	Timer mode	UP	DOWN
7			
8	Input signal width	20 ms	1 ms

**Note:** All the pins are factory-set to OFF.

- Be sure to turn ON pin 1 of the DIP switch.
- Changes to DIP switch settings are enabled when the power is turned ON.  
(Set the DIP switch while the power is OFF.)

Pin 2	Pin 3	Pin 4	Time range
ON	ON	ON	0.001 s to 9.999 s
OFF	OFF	OFF	0.01 s to 99.99 s
ON	OFF	OFF	0.1 s to 999.9 s
OFF	ON	OFF	1 s to 9999 s
ON	ON	OFF	0 min 01 s to 99 min 59 s
OFF	OFF	ON	0.1 min to 999.9 min
ON	OFF	ON	0 h 01 min to 99 h 59 min
OFF	ON	ON	0.1 h to 999.9 h


Pin 5	Pin 6	Output mode
OFF	OFF	Mode A: Signal ON delay 1 (Timer resets when power comes ON.)
ON	OFF	Mode A-2: Power ON delay 1 (Timer resets when power comes ON.)
OFF	ON	Mode E: Interval (Timer resets when power comes ON.)
ON	ON	Mode F: Cumulative (Timer does not reset when power comes ON.)

After making DIP switch settings for basic operation, advanced functions can be added using the operation keys on the front panel. Refer to **Step2** on **page 16** for details.



## Step2 Settings that cannot be performed with the DIP switch are performed with the operation keys.

- Change to Function Setting Mode.

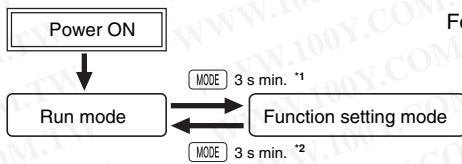

For details on operations in run mode, refer to **page 19**.

- \*1. If the mode is switched to the function setting mode during operation, operation will continue.
- \*2. Changes made to settings in function setting mode are enabled for the first time when the mode is changed to run mode. Also, when settings are changed, the timer is reset (time initialized and output turned OFF).

The characters displayed in reverse video are the default settings.  
When performing settings with operation keys only, set pin 1 of the DIP switch to OFF (factory setting).  
If pin 1 of the DIP switch is set to ON, the setting items indicated in    will not be displayed.

Function setting mode


- Set the time range using the       keys.  
 → For details, refer to the **Time Range List**.
- Set the timer mode using the       keys.  
 → UP (UP) ↔ dōwn (DOWN)
- Set the output mode using the       keys.  
 → A ↔ A-1 ↔ A-2 ↔ A-3 ↔ b ↔ b-1 ↔ d ↔ E ↔ F ↔ z ↔ S  
 (A) (A-1) (A-2) (A-3) (b) (b-1) (d) (E) (F) (Z) (S)  
**Note:** Only modes A-2 b, E, and Z can be selected for models with instantaneous contact outputs.
- Set each digit for the output time using the corresponding       keys.  
 → Hōld / 0.01 ~ 99.99  
 (Output hold) (0.01s) (99.99s)  
 (If the output time is set to 0.00, Hōld is displayed.)  
**Note:** Displayed for modes A, A-1, A-2, A-3, b, b-1 and S only.
- Set the input signal width using the       keys.  
 → 20ms ↔ 1ms  
 (20ms) (1ms)  
**Note:** Not displayed for models with instantaneous contact outputs.
- Set the NPN/PNP mode using the       keys.  
 → nPN ↔ PNP  
 (NPN input) (PNP input)  
**Note:** Only displayed for the H5CX-A□ and H5CX-A11□.
- Set the display color using the       keys.  
 → rEd ↔ Grn ↔ ōrō ↔ r-ō ↔ ō-r ↔ r-ō ↔ ō-r ↔ ō-ō ↔ ō-ō  
 (Red) (Green) (Orange) (Red-green) (Green-red) (Red-orange) (Orange-red) (Green-orange) (Orange-green)  
**Note:** Displayed only for models with terminal screws (H5CX-A□).
- Set the function (instantaneous or time-limit operation) for the instantaneous output (output 1) using the       Keys.  
 → IL IL ↔ 2L  
 (Instantaneous) (Time-limit)  
**Note:** Displayed only for models with instantaneous contact outputs.

From next page To next page

**Time Range List**

Display	Set Value
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> s	0.01 s to 99.99 s (default setting)
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> s	0.1 s to 999.9 s
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> s	1 s to 9999 s
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> min	0 min 01 s to 99 min 59 s
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> min	0.1 min to 999.9 min
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> min	1 min to 9999 min
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> h	0 h 01 min to 99 h 59 min
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> h	0.1 h to 999.9 h
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> h	1 h to 9999 h
<span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> <span style="border: 1px solid black; padding: 0 2px;">  </span> s	0.001 s to 9.999 s



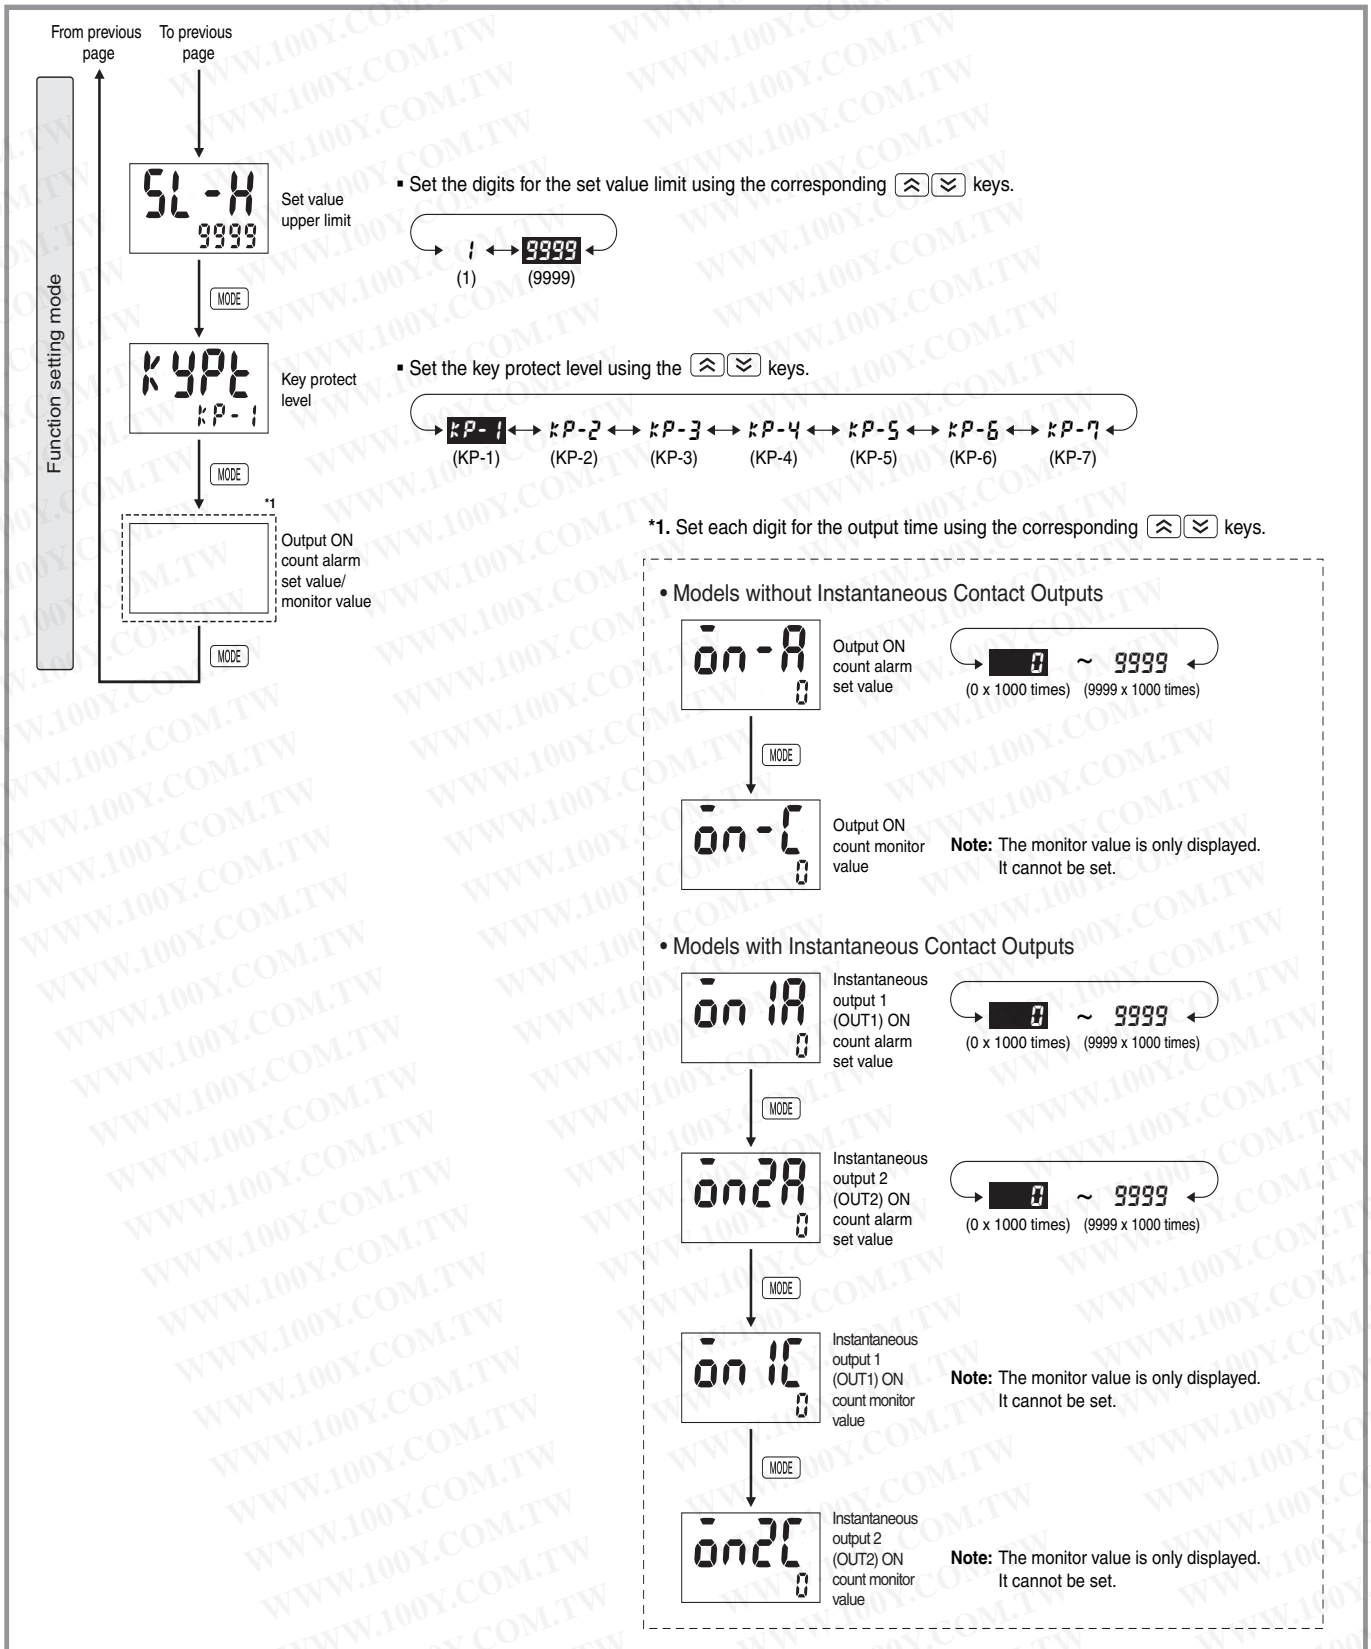



# H5CX-A□-N/-L□-N Timer

## Explanation of Functions

### Operating Procedures for Timer Function

Items marked with stars (★) can be set using the DIP switch.

#### Time Range (E L m r) ★

Set the range to be timed in the range 0.001 s to 9,999 h.  
Settings of type ---- h (9,999 h) and ---- min (9,999 min) cannot be made with the DIP switch. Use the operation keys if these settings are required.

#### Timer Mode (E L m m) ★

Set either the elapsed time (UP) or remaining time (DOWN) mode.  
In UP mode, the elapsed time is displayed, and in DOWN mode, the remaining time is displayed.

#### Output Mode (O L L m) ★

Set the output mode.  
The possible settings are A, A-1, A-2, A-3, b, b-1, d, E, F, Z and S.  
Only output modes A, A-2, E, and F can be set using the DIP switch.  
Use the operation keys if a different setting is required.  
(For details on output mode operation, refer to "Timing Charts" on page 20.)

#### Output Time (O L L m)

When using one-shot output, set the output time for one-shot output (0.01 to 99.99 s).  
One-shot output can be used only if the selected output mode is A, A-1, A-2, A-3, b, b-1 or S.  
If the output time is set to 0.00, H O L d is displayed, and the output is held.

#### Input Signal Width (L F L L) ★

Set the minimum signal input width (20 ms or 1 ms) for signal, reset, and gate inputs.  
The same setting is used for all external inputs (signal, reset, and gate inputs).  
If contacts are used for the input signal, set the input signal width to 20 ms.  
Processing to eliminate chattering is performed for this setting.

#### NPN/PNP Input Mode (L m O d)

Select either NPN input (no-voltage input) or PNP input (voltage input) as the input format.  
Set an NPN input when using a 2-wire sensor.  
For details on input connections, refer to "Input Connections" on page 9.

#### Display Color (E O L r)

(Terminal block model: H5CX-A□ only)

Set the color used for the present value.

	Output OFF	Output ON
r E d	Red (fixed)	
E r n	Green (fixed)	
O r L	Orange (fixed)	
r - L	Red	Green
E - r	Green	Red
r - O	Red	Orange
O - r	Orange	Red
E - O	Green	Orange
O - L	Orange	Green

#### Key Protect Level (K Y P L)

Set the key protect level.  
Refer to "Key Protect Level" on page 32.

#### Instantaneous/Time-limit (O L m d)

Set the contact output to time-limit SPDT + instantaneous SPDT or time-limit SPDT operation.

#### Set Value Upper Limit (S L - H)

Set the upper limit for the set value when it is set in Run Mode.  
The limit can be set to between 1 and 9999.  
This setting does not apply to the ON duty in Z mode.

#### Output ON Count Alarm Set Value (O n - R)

Set the alarm value for the output ON count.  
The limit can be set to between 0 x 1000 (0 times) and 9999 x 1000 (9,999,000 times). Only the underlined values are set. The alarm will be disabled if 0 is set.  
If the total ON count of the output exceeds the alarm set value, E 3 will be displayed on the Timer to indicate that the output ON count alarm value was exceeded. Refer to "Self-diagnostic Function" on page 32 for information on the E 3 display.

#### ON Count Alarm Set Values for Outputs 1 and 2 (OUT1 and OUT2) (O n 1 R and O n 2 R)

Set the ON count alarm values for the outputs 1 and 2.  
The limit can be set to between 0 x 1000 (0 times) and 9999 x 1000 (9,999,000 times). Only the underlined values are set. The alarm will be disabled if 0 is set.  
If the total ON count of instantaneous output 1 or 2 exceeds the alarm set value, E 3 will be displayed on the Timer to indicate that the output ON count alarm value was exceeded. Refer to "Self-diagnostic Function" on page 32 for information on the E 3 display.

#### Output ON Count Monitor Value (O n - L)


The monitor value is only displayed. It cannot be set.  
The output ON count will be 1,000 times the displayed value.

#### ON Count Monitor Values for Outputs 1 and 2 (OUT1 and OUT2) (O n 1 L and O n 2 L)

The monitor value for output 1 or 2 is only displayed. It cannot be set.  
The output ON count will be 1,000 times the displayed value.



## Operation in Run Mode Operating Procedures for Timer Function

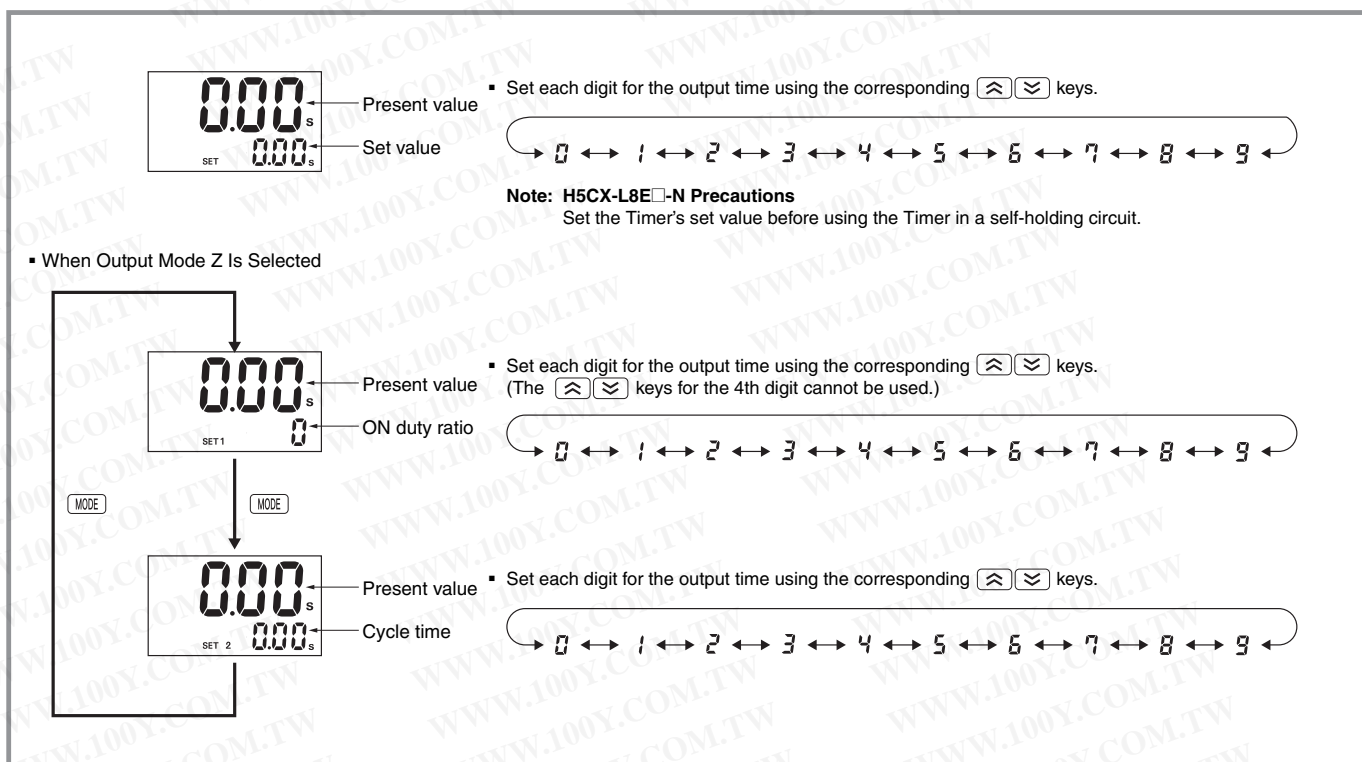

### Present Value and Set Value

These items are displayed when the power is turned ON. The present value is displayed in the main display and the set value is displayed in the sub-display.

The values displayed will be determined by the settings made for the time range and the timer mode in function setting mode.

### Present Value and ON Duty Ratio (Output Mode = Z)

The present value is displayed in the main display and the ON duty ratio is displayed in the sub-display. Set the ON duty ratio used in ON/OFF-duty-adjustable flicker mode (Z) as a percentage.

$$\text{ON time} = \text{Cycle time} \times \frac{\text{ON duty ratio (\%)}}{100}$$

The output accuracy will vary with the time range, even if the ON duty ratio setting is the same. Therefore, if fine output time adjustment is required, it is recommended that the time range for the cycle time is set as small as possible.

**Examples: 1.** When Time Range = - - - s (9999 s)

$$20(\text{s}) \times \frac{31(\%)}{100} = 6.2(\text{s})$$

Rounded off to the nearest integer (because of the time range setting) → ON time = 6 s

**2.** When Time Range = - - - s (99.99 s)



$$20.00(\text{s}) \times \frac{31(\%)}{100} = 6.200(\text{s})$$

Rounded off to 2 decimal places (because of the time range setting) → ON time = 6.20 s

If a cycle time is set, cyclic control can be performed in ON/OFF-duty-adjustable flicker mode simply by changing the ON duty ratio.

### Present Value and Cycle Time (Output Mode = Z)

The present value is displayed in the main display and the cycle time is displayed in the sub-display. Set the cycle time.

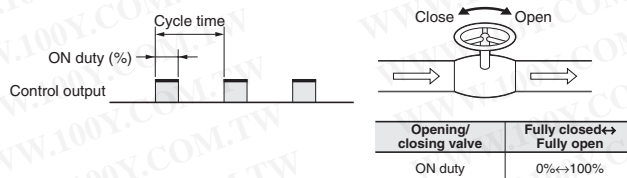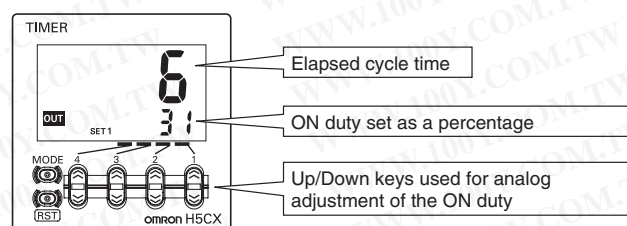


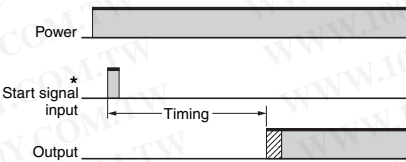
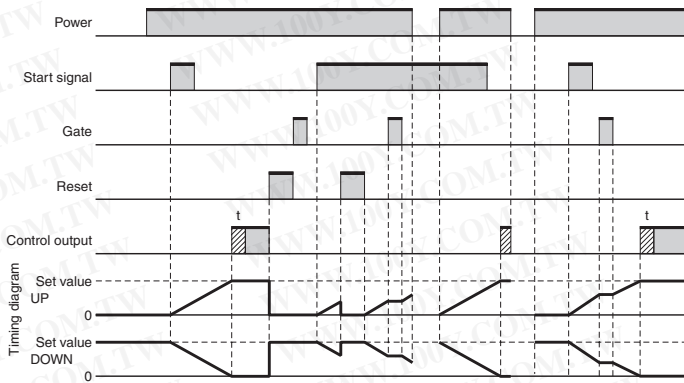
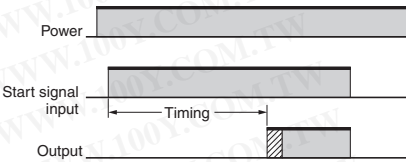
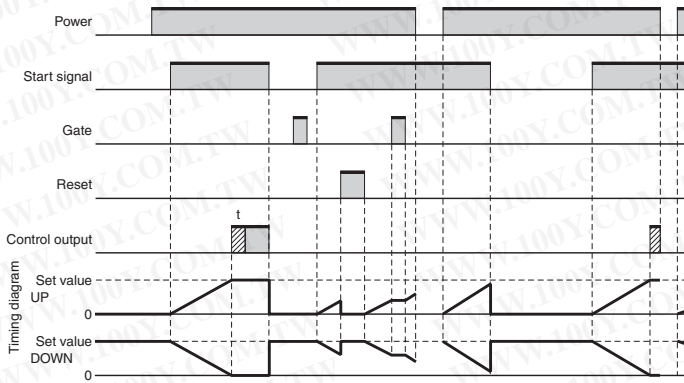

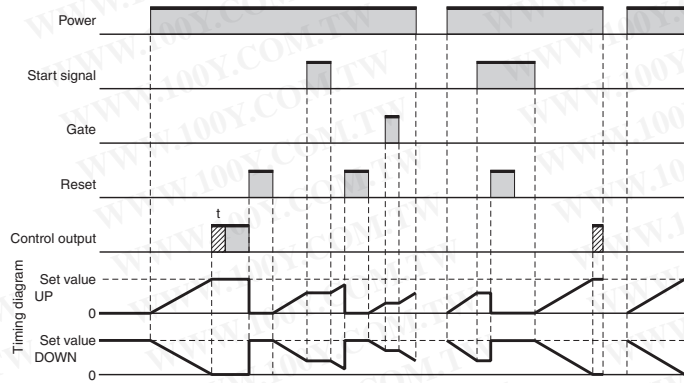

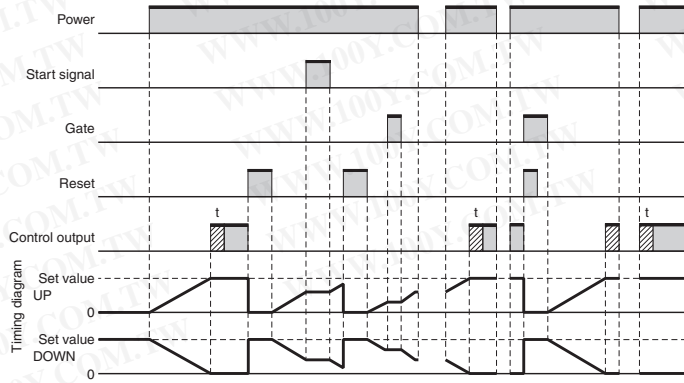


H5CX-A□-N/-L□-N  
Timer


Timing Charts  
Operating Procedures for Timer Function  
Models without Instantaneous Contact Outputs

The gate input is not included in the H5CX-L8□ models.

 Either one-shot output or sustained output can be selected.

Mode A: Signal ON delay 1 (Timer resets when power comes ON.)	
Basic operation	Detailed operation
 <p>* Start signal input is disabled during timing.</p> <p>Timing starts when the start signal goes ON. While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF. The control output is controlled using a sustained or one-shot time period.</p> <p><b>Note:</b> Output is instantaneous when setting is 0.</p>	
Mode A-1: Signal ON delay 2 (Timer resets when power comes ON.)	
Basic operation	Detailed operation
 <p>Timing starts when the start signal goes ON, and resets when the start signal goes OFF. While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF. The control output is controlled using a sustained or one-shot time period.</p> <p><b>Note:</b> Output is instantaneous when setting is 0.</p>	
Mode A-2: Power ON delay 1 (Timer resets when power comes ON.)	
Basic operation	Detailed operation
 <p>Timing starts when the reset input goes OFF. The start signal disables the timing function (i.e., same function as the gate input). The control output is controlled using a sustained or one-shot time period.</p> <p><b>Note:</b> Output is instantaneous when setting is 0.</p>	
Mode A-3: Power ON delay 2 (Timer does not reset when power comes ON.)	
Basic operation	Detailed operation
 <p>Timing starts when the reset input goes OFF. The start signal disables the timing function (i.e., same function as the gate input). The control output is controlled using a sustained or one-shot time period.</p> <p><b>Note:</b> Output is instantaneous when setting is 0.</p>	


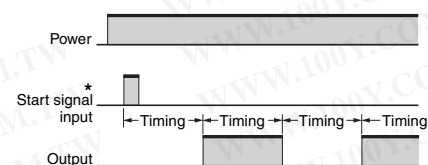


**Mode b: Repeat cycle 1 (Timer resets when power comes ON.)**
**Basic operation**


\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON.  
The status of the control output is reversed when time is up (OFF at start).  
While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.



**Note:** Normal output operation will not be possible if the set time is too short.  
Set the value to at least 100 ms (contact output type).

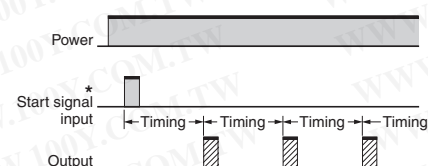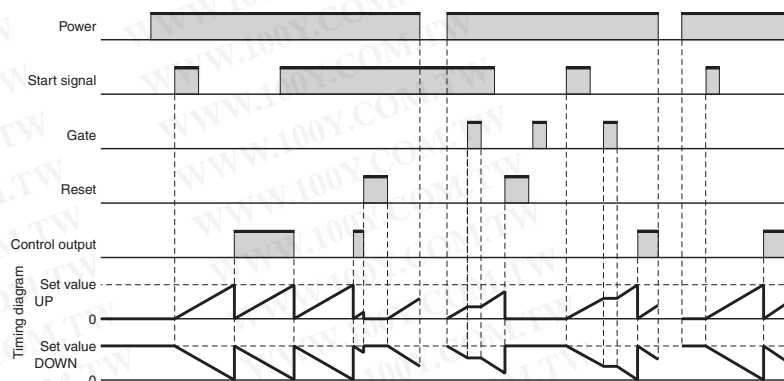**Detailed operation**
**Sustained Output**


\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON.  
The control output is turned ON when time is up.  
While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.




**Note:** Normal output operation will not be possible if the set time is too short.  
Set the value to at least 100 ms (contact output type).

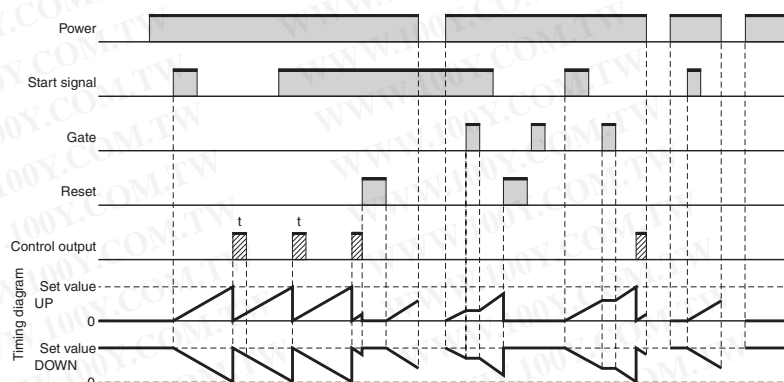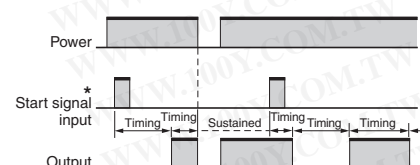**One-shot Output**

**Mode b-1: Repeat cycle 2 (Timer does not reset when power comes ON.)**
**Basic operation**


\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON.  
The status of the control output is reversed when time is up (OFF at start).  
While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.

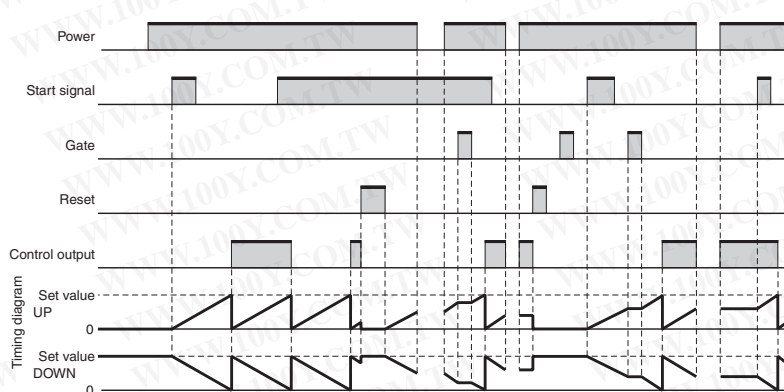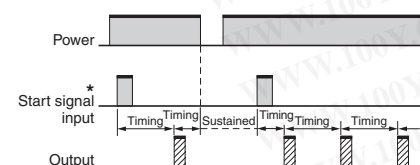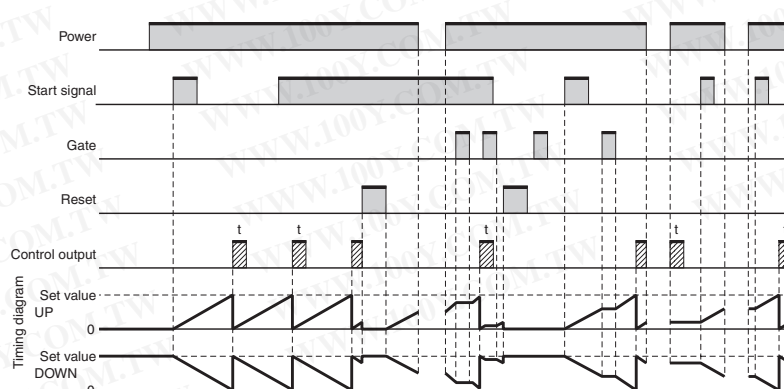**Note:** Normal output operation will not be possible if the set time is too short.  
Set the value to at least 100 ms (contact output type).

**Detailed operation**
**Sustained Output**

**One-shot Output**


\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON.  
The control output is turned ON when time is up.  
While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.


**Note:** Normal output operation will not be possible if the set time is too short.  
Set the value to at least 100 ms (contact output type).



H5CX-A□-N/-L□-N  
Timer

Mode d: Signal OFF delay (Timer resets when power comes ON.)

Basic operation

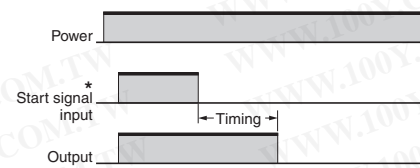


\* Start signal input is enabled during timing.

The control output is ON when the start signal is ON (except when the power is OFF or the reset is ON). The timer resets when the time is up.


**Note:** Output functions only during start signal input when setting is 0.

Detailed operation

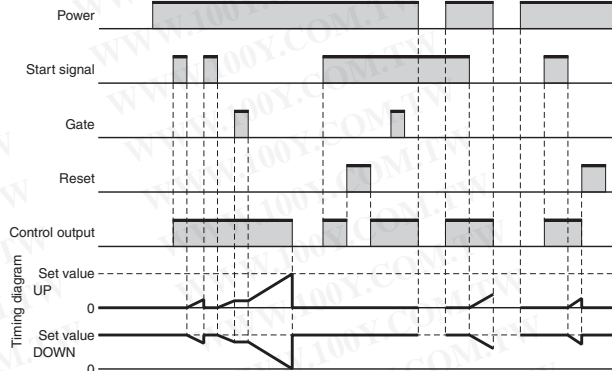

Mode E: Interval (Timer resets when power comes ON.)

Basic operation

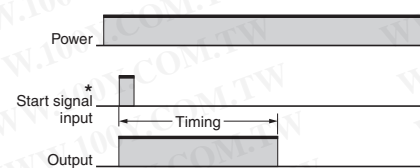


\* Start signal input is enabled during timing.

Timing starts when the start signal comes ON. The timer resets when the time is up. While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.


**Note:** Output is disabled when the setting is 0.

Detailed operation

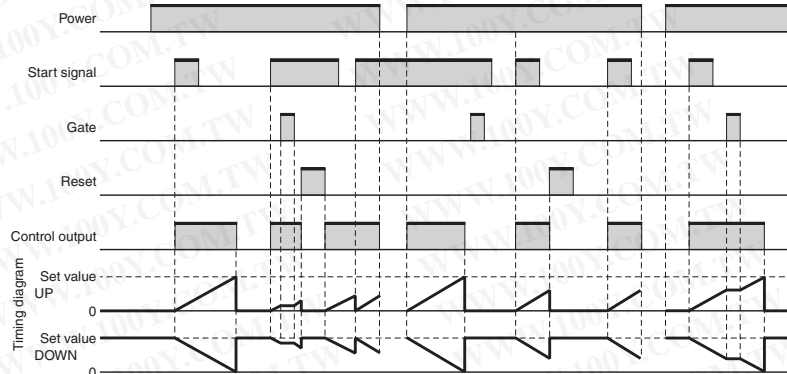

Mode F: Cumulative (Timer does not reset when power comes ON.)

Basic operation

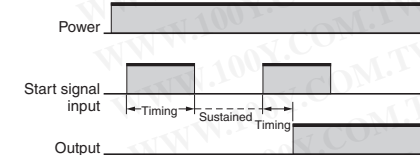


Start signal enables timing (timing is stopped when the start signal is OFF or when the power is OFF). A sustained control output is used.

**Note:** Output is instantaneous when setting is 0.


When the H5CX is used with power start in mode F mode or F-1 (i.e., cumulative operation with output on hold), there will be a timer error (approximately 100 ms each time the H5CX is turned ON) due to the characteristics of the internal circuitry. Use the H5CX with signal start if timer accuracy is required.

Detailed operation

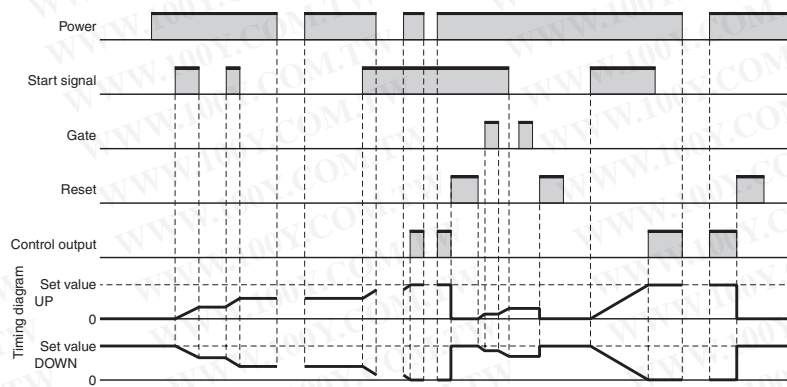

Mode Z: ON/OFF-duty-adjustable flicker (Timer resets when power comes ON.)

Basic operation

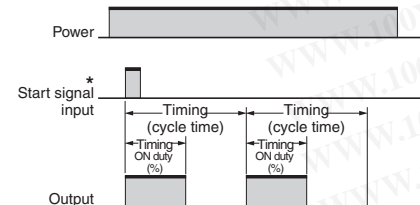


\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (ON at start). While the start signal is ON, the timer starts when power comes ON or when the reset input goes OFF.

**Note:** Normal output operation will not be possible if the set time is too short. Set the value to at least 100 ms (contact output type).


Detailed operation

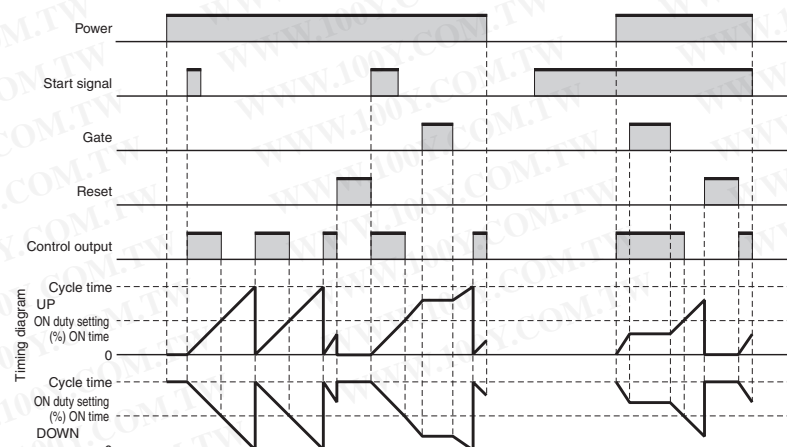




## Mode S: Stopwatch (Timer resets when power comes ON.)

### Basic operation

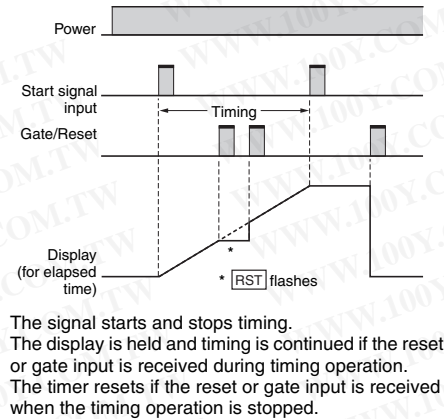

**Note:** Output is instantaneous when setting is 0.

### Detailed operation

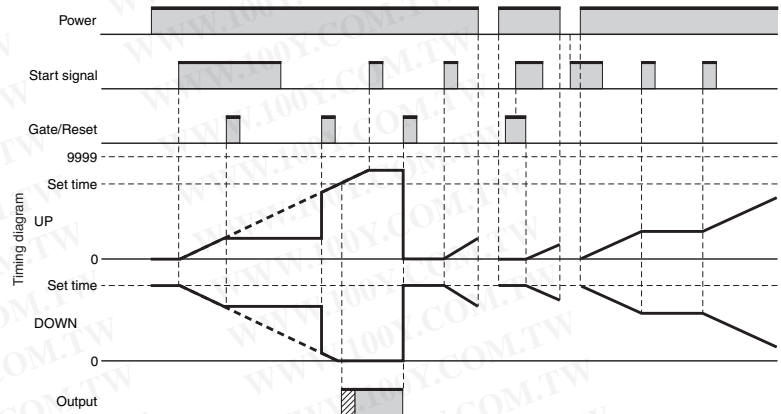


## Models with Instantaneous Contact Outputs

Either one-shot output or sustained output can be selected.


## Mode A-2: Power ON delay (Timer resets when power comes ON.)

### Basic operation

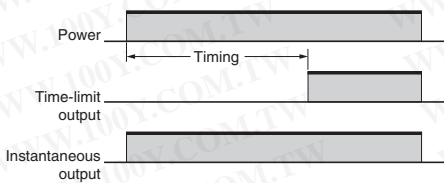


**Note:** Output is instantaneous when setting is 0.

### Detailed operation

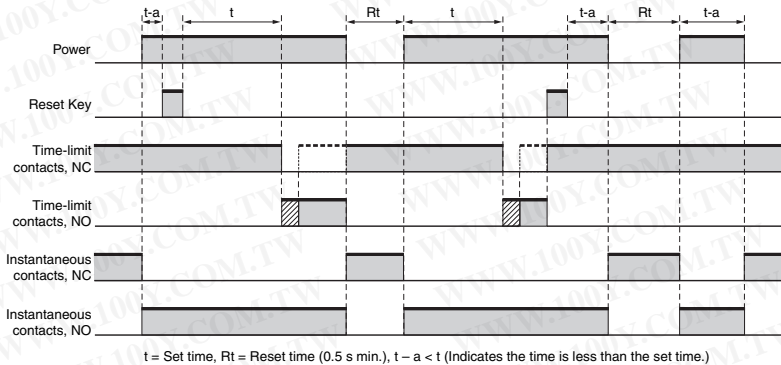


## Mode b: Repeat cycle 1 (Timer resets when power comes ON.)

### Basic operation

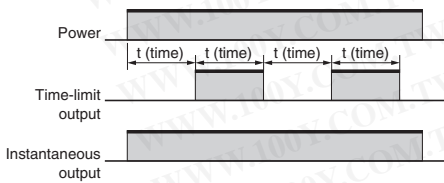

**Note:** Normal output operation will not be possible if the set time is too short.  
Set the value to at least 100 ms.

### Detailed operation

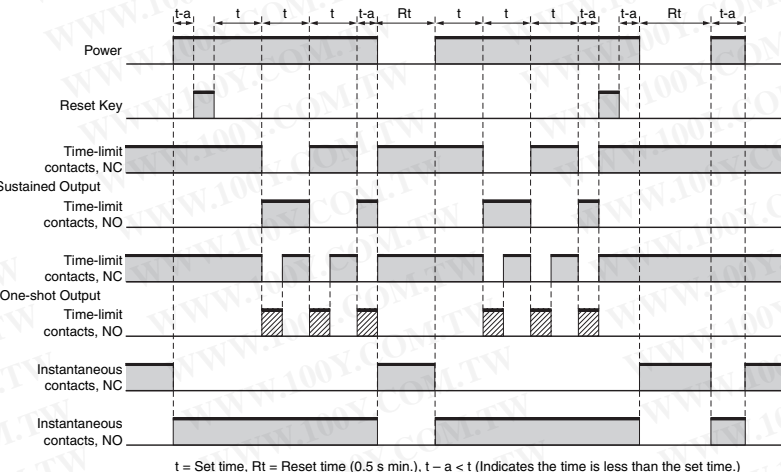

## Note: H5CX-L8E□-N Precautions

Set the Timer's set value before using the Timer in a self-holding circuit.




# H5CX-A□-N/-L□-N

## Timer

### Mode E: Interval (Timer resets when power comes ON.)


#### Basic operation

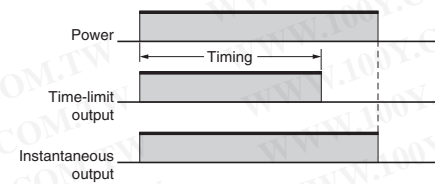

The Timer starts when the power comes ON or when the reset input goes OFF.

**Note:** Output is not instantaneous when setting is 0.


#### Detailed operation

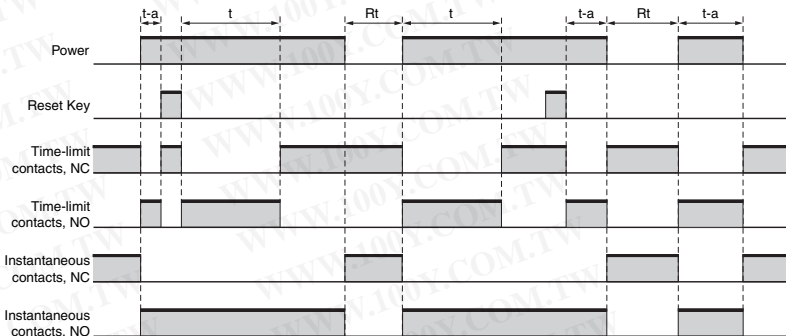

t = Set time, Rt = Reset time (0.5 s min.), t - a < t (Indicates the time is less than the set time.)

### Mode Z: ON/OFF-duty adjustable flicker (Timer resets when power comes ON.)


#### Basic operation

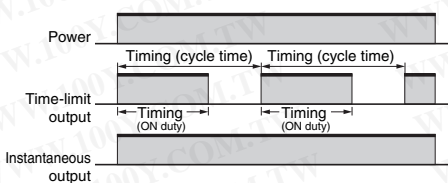

The Timer starts when the power comes ON or when the reset input goes OFF.

**Note:** Normal output operation will not be possible if the set time is too short.  
Set the value to at least 100 ms.

#### Detailed operation

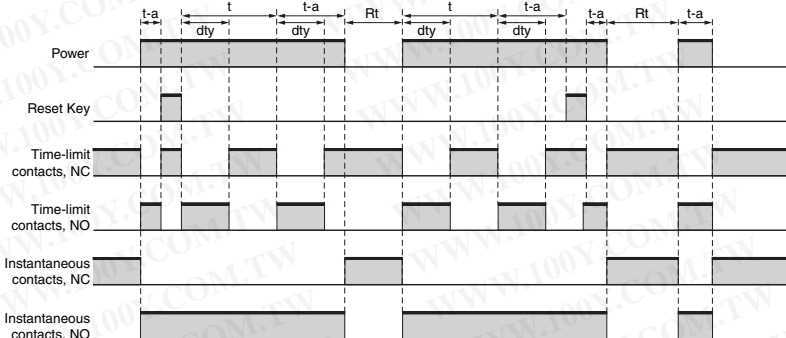

t = Set time, dt = ON duty time, Rt = Reset time (0.5 s min.), t - a < t (Indicates the time is less than the set time.)

#### **Note:** H5CX-L8E□-N Precautions


Set the Timer's set value before using the Timer in a self-holding circuit.



## Setting Procedure Guide

### Operating Procedures for Twin Timer Function


#### Step1 Switching to a Twin Timer

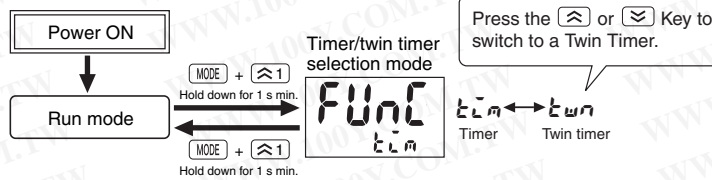


#### Step2 Settings for basic functions can be performed with just the DIP switch.

**Note:** There is no DIP switch on the H5CX-L8□. Go to **Step3**.

Key-protect Switch

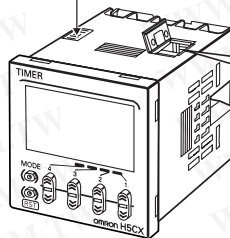

Be sure to set pin 1 to ON when using the DIP switch.



	Item	OFF	ON
1	DIP switch settings	Disabled	Enabled
2	OFF time range	Refer to the table on the right.	
3	ON time range		
4	Output mode	Flicker OFF start	Flicker ON start
5	Timer mode	UP	DOWN
6	Input signal width	20 ms	1 ms

Pin 2	Pin 3	OFF time range
OFF	OFF	0.01 s to 99.99 s
ON	OFF	0.1 s to 999.9 s
OFF	ON	1 s to 9999 s
ON	ON	0 min 01 s to 99 min 59 s

Pin 4	Pin 5	ON time range
OFF	OFF	0.01 s to 99.99 s
ON	OFF	0.1 s to 999.9 s
OFF	ON	1 s to 9999 s
ON	ON	0 min 01 s to 99 min 59 s

**Note:** All the pins are factory-set to OFF.

- Be sure to turn ON pin 1 on the DIP switch.
- Changes to DIP switch settings are enabled when the power is turned ON.  
(Perform DIP switch settings while the power is OFF.)

After making DIP switch settings for basic operation, advanced functions can be added using the operation keys on the front panel. Refer to **Step3** on **page 26** for details.




# H5CX-A□-N/-L□-N Twin Timer

To switch to twin timer operation, use the procedure given below. For details, refer to page 31.


## Step3 Settings that cannot be performed with the DIP switch are performed with the operation keys.

- Change to Function Setting Mode.

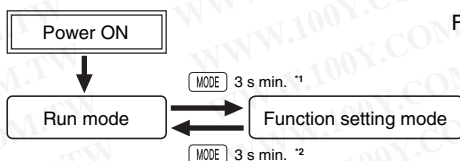


For details on operations in run mode, refer to page 28.

- \*1. If the mode is switched to the function setting mode during operation, operation will continue.
- \*2. Changes made to settings in function setting mode are enabled for the first time when the mode is changed to run mode. Also, when settings are changed, the timer is reset (time initialized and output turned OFF).

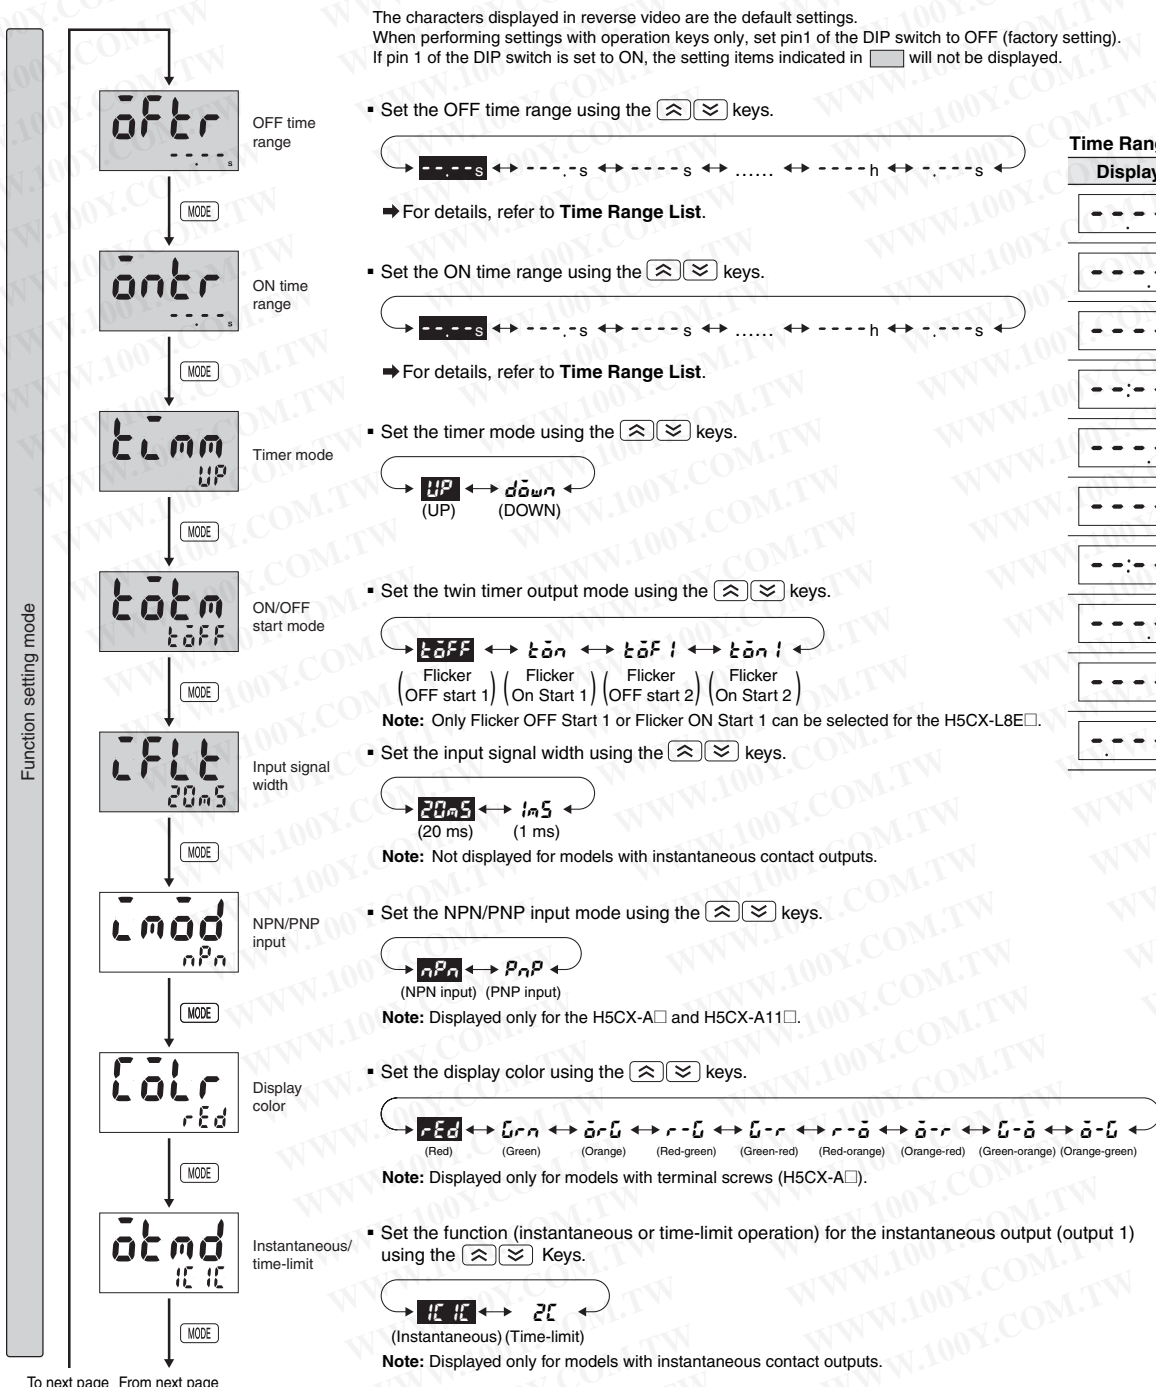



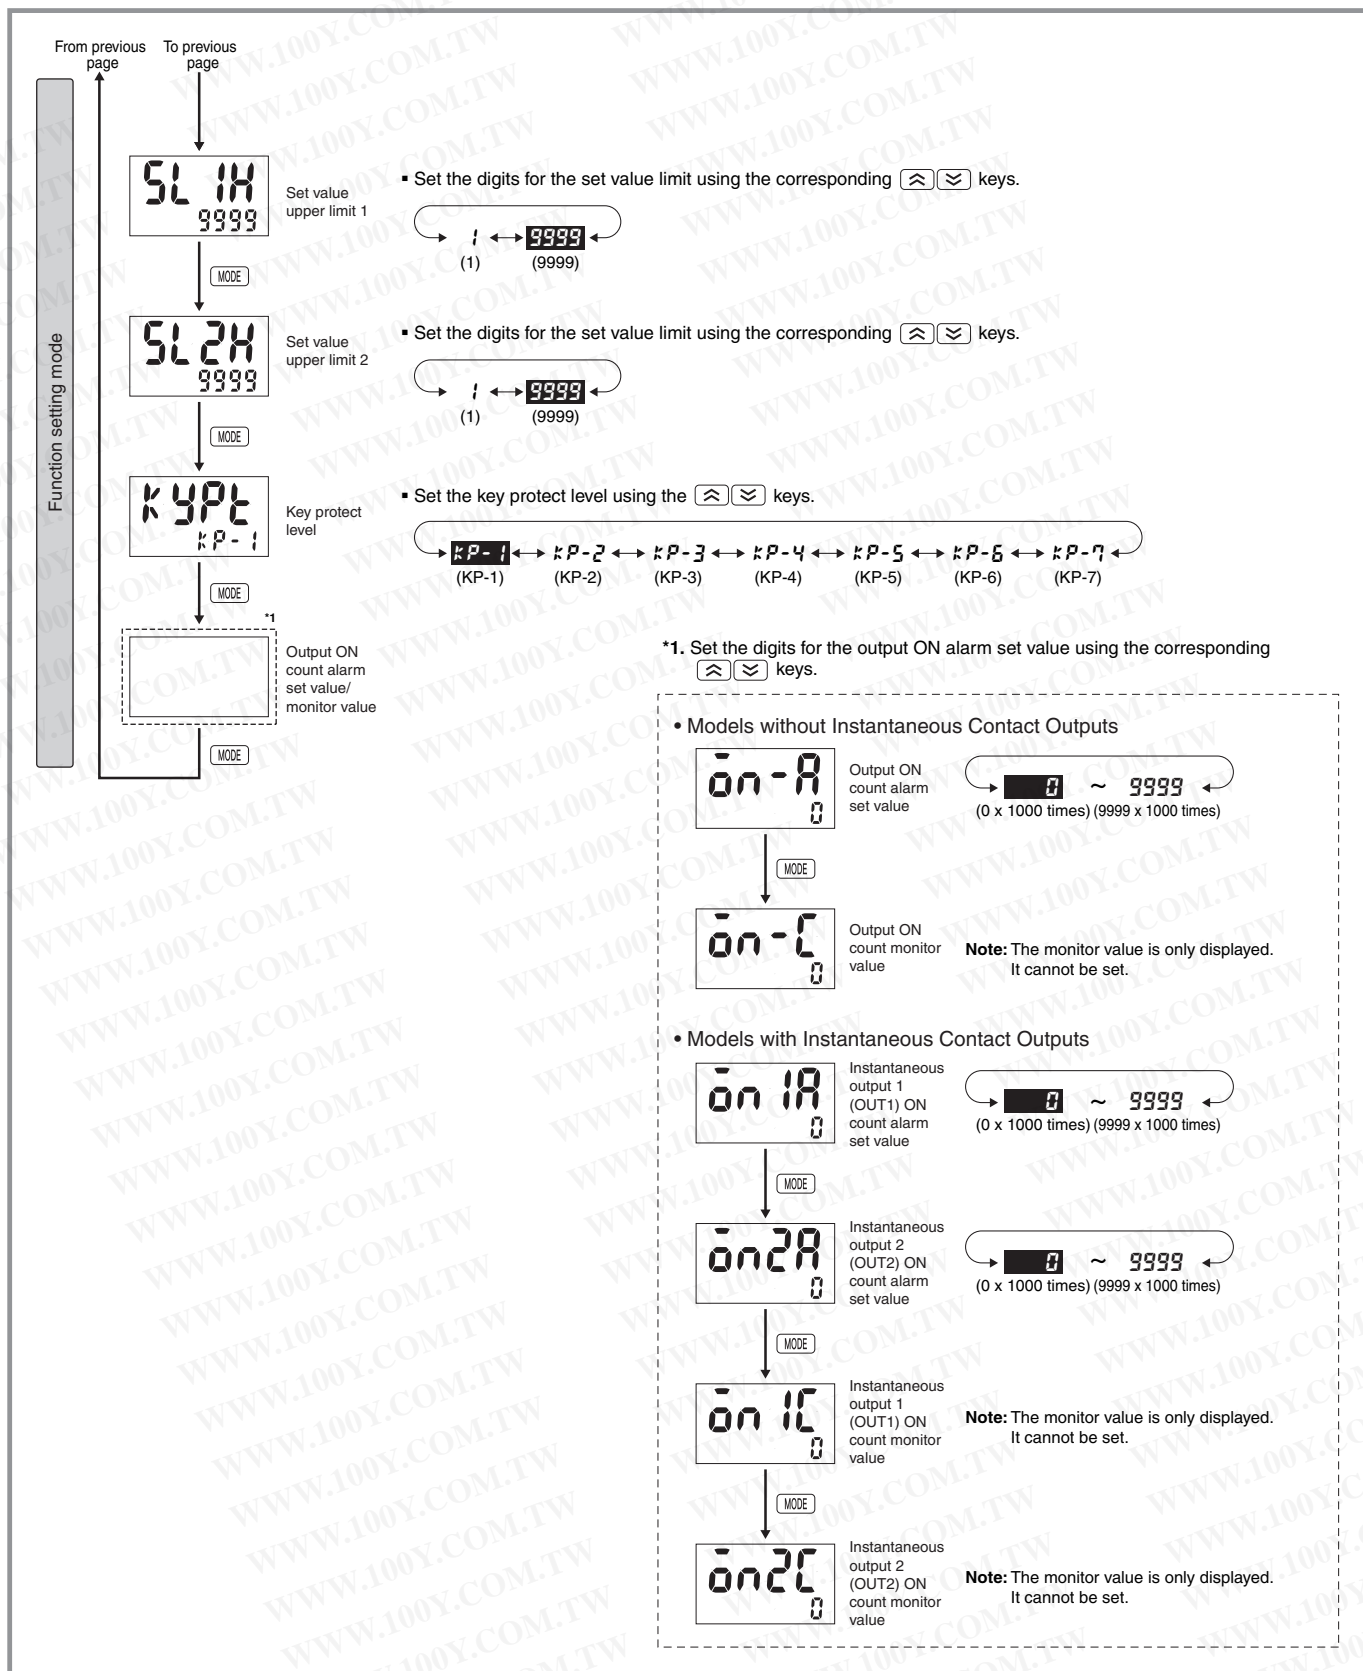



H5CX-A□-N/-L□-N  
Twin Timer

Explanation of Functions  
Operating Procedures for Twin Timer Function

Items marked with stars (★) can be set using the DIP switch.

OFF Time Range (OFF TIME)★

Set the time range for the OFF time in the range 0.000 s to 9,999 h. Only settings of type --:-- s (99.99 s), ---: s (999.9 s), ---- s (9,999 s), and -- min -- s (99 min 59 s) can be made with the DIP switch. Use the operation keys if another type of setting is required.

ON Time Range (ON TIME)★

Set the time range for the ON time in the range 0.001 s to 9,999 h. Only settings of type --:-- s (99.99 s), ---: s (999.9 s), ---- s (9,999 s), and -- min -- s (99 min 59 s) can be made with the DIP switch. Use the operation keys if another type of setting is required.

Timer Mode (TIMER MODE)★

Set either the elapsed time (UP) or remaining time (DOWN) mode. In UP mode, the elapsed time is displayed, and in DOWN mode, the remaining time is displayed.

ON/OFF Start Mode (START MODE)★

Set the output mode. Set either flicker OFF start or flicker ON start. (For details on output mode operation, refer to "Timing Charts" on page 29.)

Input Signal Width (INPUT SIGNAL WIDTH)★

Set the minimum signal input width (20 ms or 1 ms) for signal, reset, and gate inputs. The same setting is used for all external inputs (signal, reset, and gate inputs). If contacts are used for the input signal, set the input signal width to 20 ms. Processing to eliminate chattering is performed for this setting.

NPN/PNP Input Mode (INPUT MODE)

Select either NPN input (no-voltage input) or PNP input (voltage input) as the input format. Set an NPN input when using a 2-wire sensor. The same setting is used for all external inputs. For details on input connections, refer to "Input Connections" on page 9.

Display Color (DISPLAY COLOR)

(Terminal black model: H5CX-A□ only)


Set the color used for the present value.

	Output OFF	Output ON
Red	Red (fixed)	
Green	Green (fixed)	
Orange	Orange (fixed)	
Red-Green	Red	Green
Green-Red	Green	Red
Red-Orange	Red	Orange
Orange-Red	Orange	Red
Green-Orange	Green	Orange
Orange-Green	Orange	Green

Key Protect Level (KEY PROTECT LEVEL)

Set the key protect level. Refer to "Key Protect Level" on page 32.

Operation in Run Mode  
Operating Procedures for Twin Timer Function

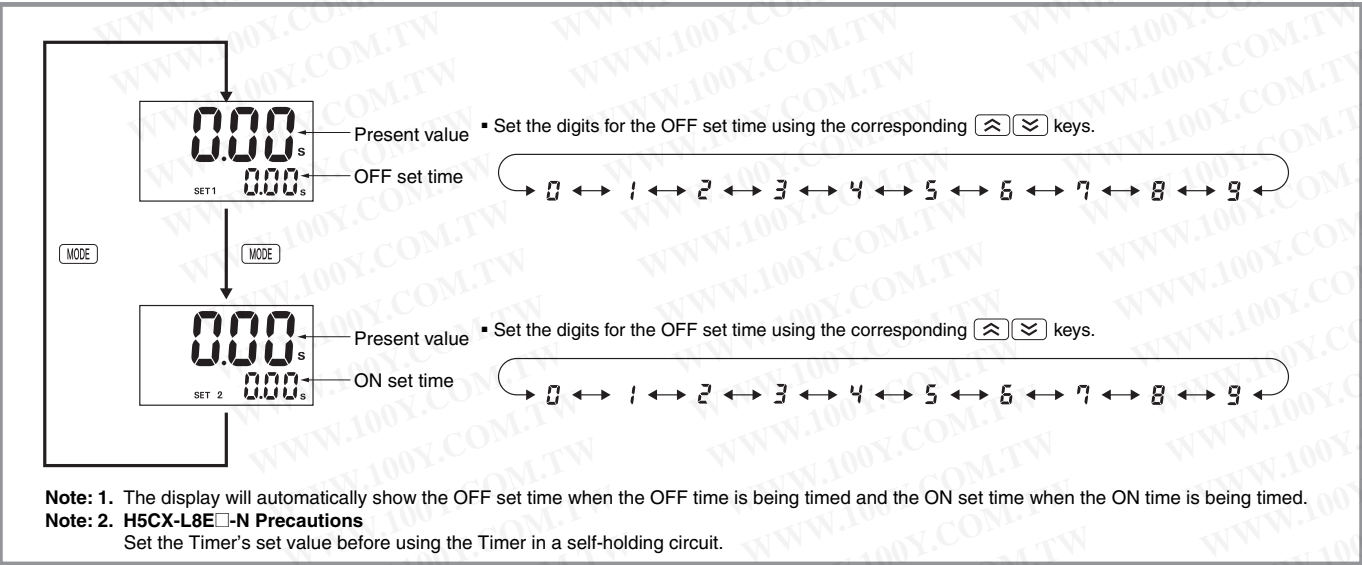

Present Value and OFF Set Time

The present value is displayed in the main display and the OFF set time is displayed in the sub-display. Set the OFF time.

Present Value and ON Set Time

The present value is displayed in the main display and the ON set time is displayed in the sub-display. Set the ON time.









## Timing Charts

### Operating Procedures for Timer Function

#### Models without Instantaneous Contact Outputs

The gate input is not included in the H5CX-L8□ models.

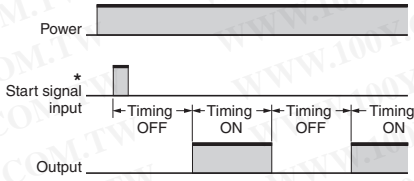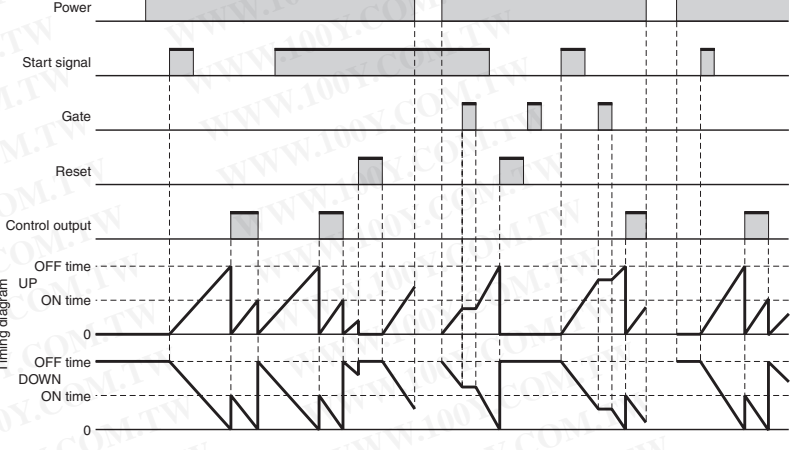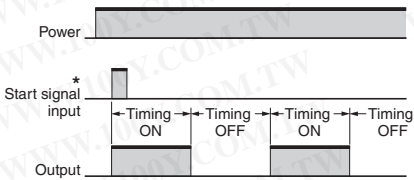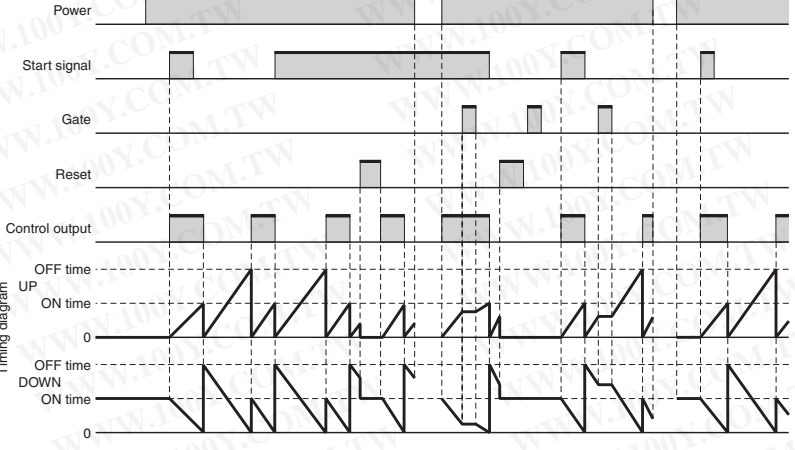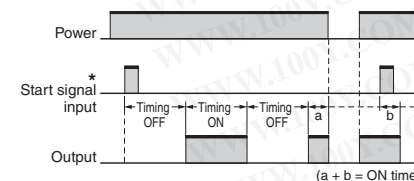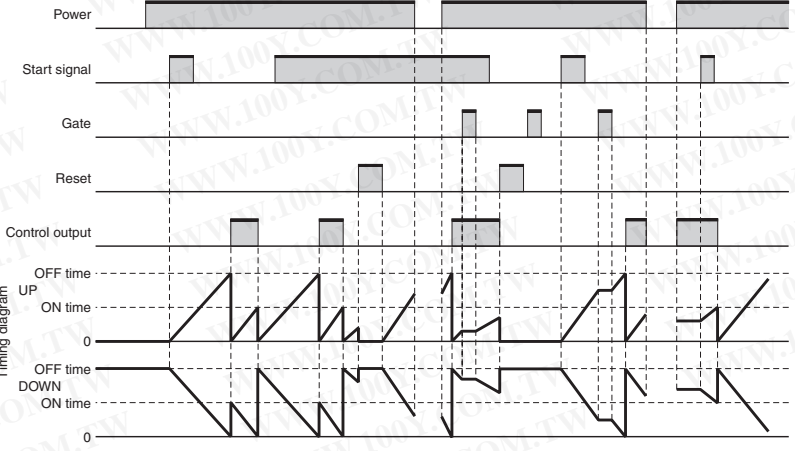
Mode toff: Flicker OFF start 1 (Timer resets when power comes ON.)	
Basic operation	Detailed operation
 <p>* Start signal input is disabled during timing.</p> <p>Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (OFF at start). While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.</p> <p><b>Note:</b> Normal output operation will not be possible if the set time is too short. Set the value to at least 100 ms (contact output type).</p>	
Mode ton: Flicker OFF start 1 (Timer resets when power comes ON.)	
Basic operation	Detailed operation
 <p>* Start signal input is disabled during timing.</p> <p>Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (ON at start). While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.</p> <p><b>Note:</b> Normal output operation will not be possible if the set time is too short. Set the value to at least 100 ms (contact output type).</p>	
Mode toff-1: Flicker OFF start 2 (Timer does not reset when power comes ON.)	
Basic operation	Detailed operation
 <p>* Start signal input is disabled during timing.</p> <p>Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (OFF at start). While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.</p> <p><b>Note:</b> Normal output operation will not be possible if the set time is too short. Set the value to at least 100 ms (contact output type).</p>	



H5CX-A□-N/-L□-N  
Twin Timer

Mode ton-1: Flicker ON start 2 (Timer does not reset when power comes ON.)

Basic operation

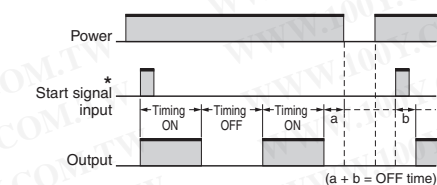


\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON.  
The status of the control output is reversed when time is up (ON at start).  
While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.

**Note:** Normal output operation will not be possible if the set time is too short.  
Set the value to at least 100 ms (contact output type).


Detailed operation

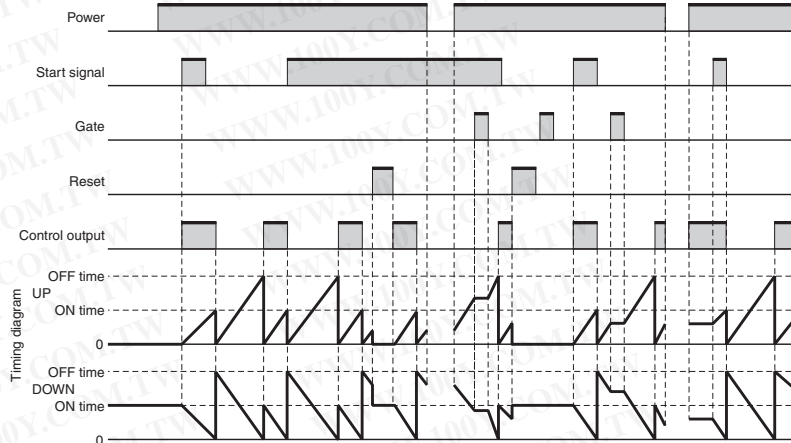

Models with Instantaneous Contact Outputs

Mode toff: Flicker OFF start 1 (Timer resets when power comes ON.)


Basic operation

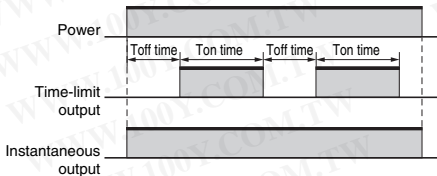

The Timer starts when the power comes ON or when the reset input goes OFF.

**Note:** Normal output operation will not be possible if the set time is too short.  
Set the ON time and OFF time to at least 100 ms.


Detailed operation

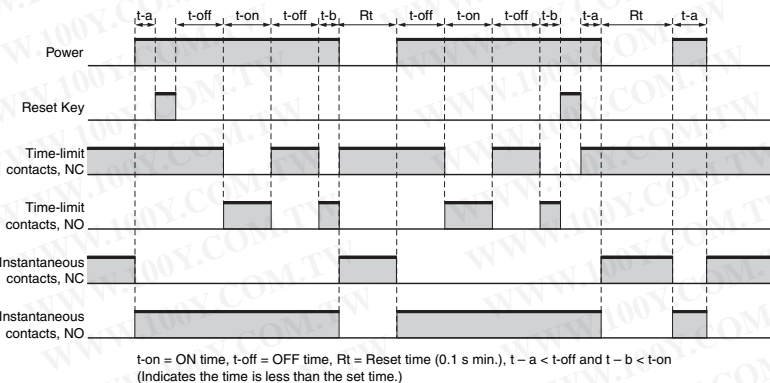

t-on = ON time, t-off = OFF time, Rt = Reset time (0.1 s min.), t - a < t-off and t - b < t-on  
(Indicates the time is less than the set time.)

Mode ton: Flicker ON start 1 (Timer resets when power comes ON.)


Basic operation

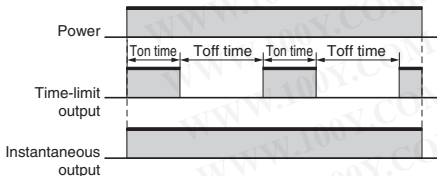

The Timer starts when the power comes ON or when the reset input goes OFF.

**Note:** Normal output operation will not be possible if the set time is too short.  
Set the ON time and OFF time to at least 100 ms.

Detailed operation

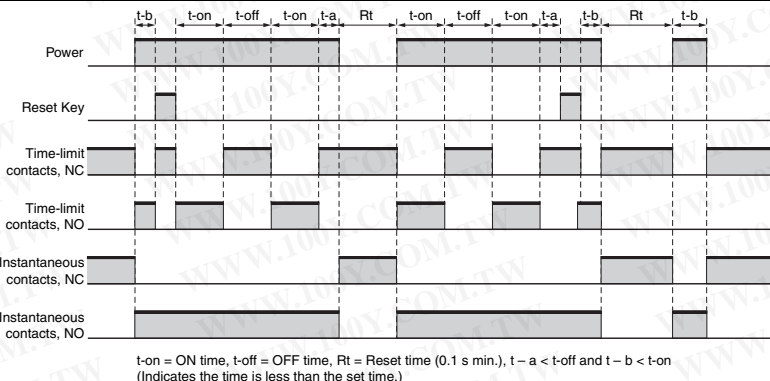

t-on = ON time, t-off = OFF time, Rt = Reset time (0.1 s min.), t - a < t-off and t - b < t-on  
(Indicates the time is less than the set time.)

**Note:** H5CX-L8E□-N Precautions


Set the Timer's set value before using the Timer in a self-holding circuit.



## Timer/Twin Timer Selection Mode (Function Selection)

Select whether the H5CX is used as a timer or a twin timer in timer/twin timer selection mode.

The H5CX is also equipped with a DIP switch monitor function, a convenient function that enables the settings of the DIP switch pins to be confirmed using the front display.

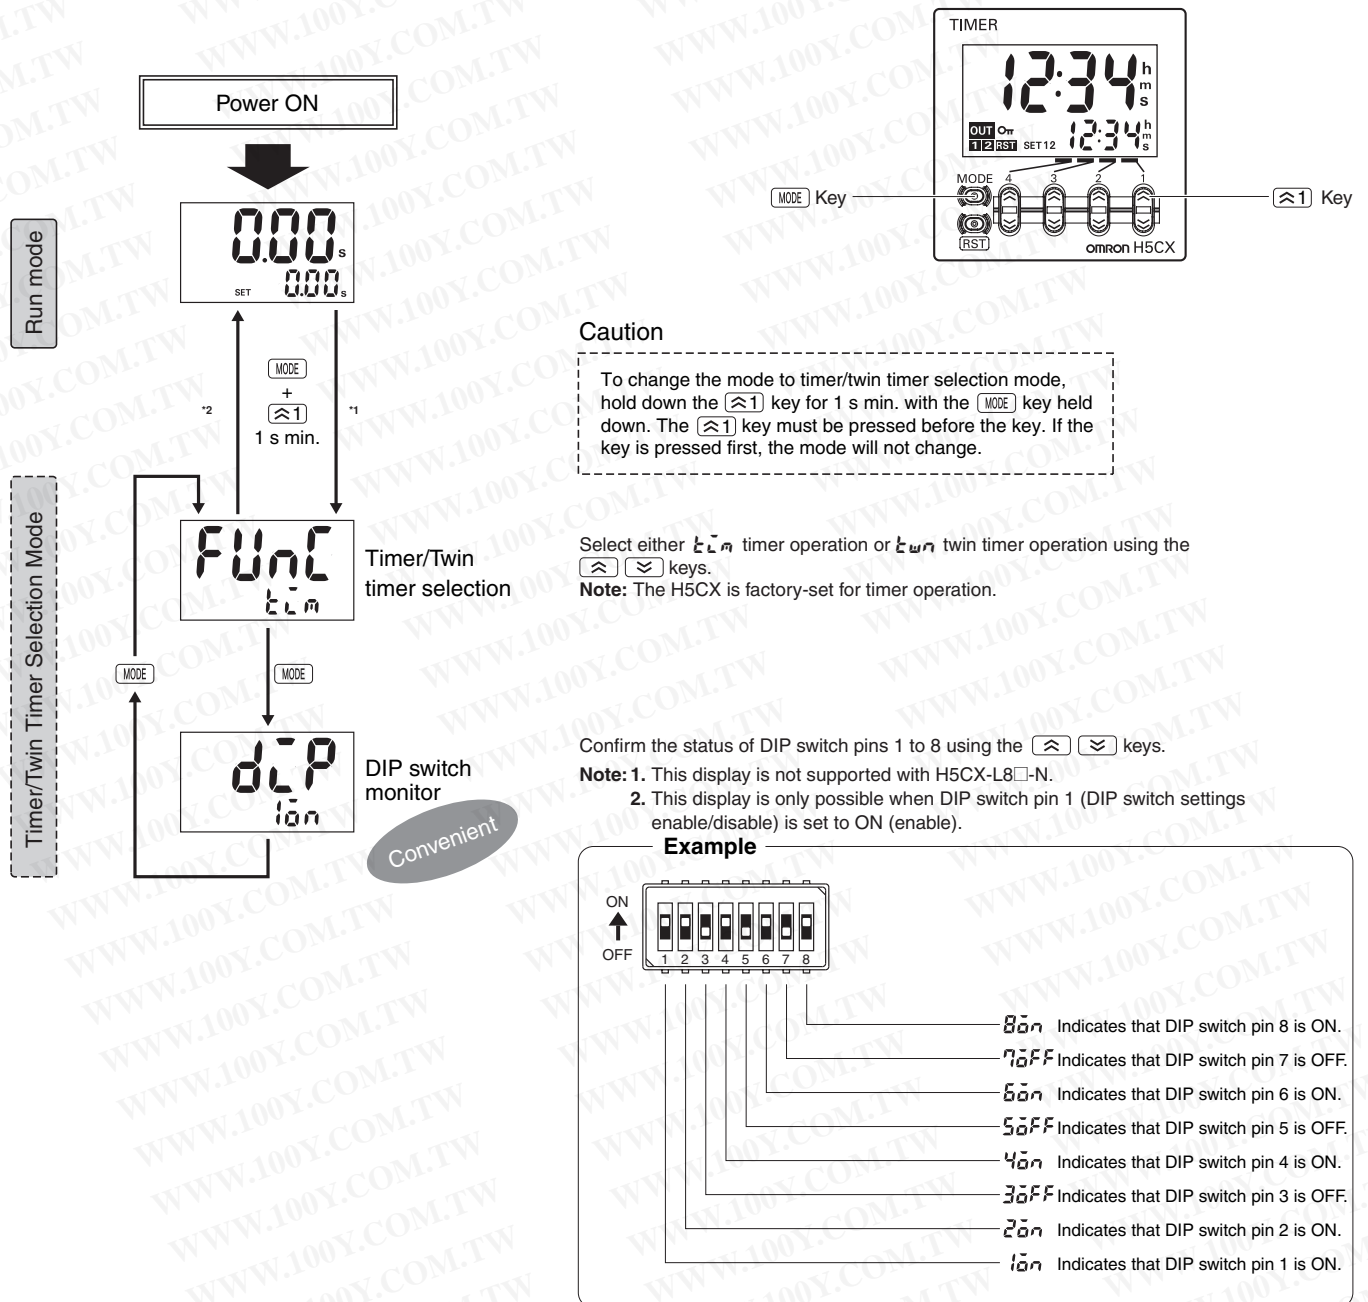


\*1. When the mode is changed to timer/twin timer selection mode, the present value is reset and output turns OFF. Timing operation is not performed in timer/twin timer selection mode.

\*2. Setting changes made in timer/twin timer selection mode are enabled when the mode is changed to run mode. If settings are changed, the H5CX is automatically reset (present value initialized, output turned OFF).



Key Protect Level

When the key-protect switch is set to ON, it is possible to prevent setting errors by prohibiting the use of certain operation keys by specifying the key protect level (KP-1 to KP-7).  
The key protect indicator is lit while the key-protect switch is set to ON.

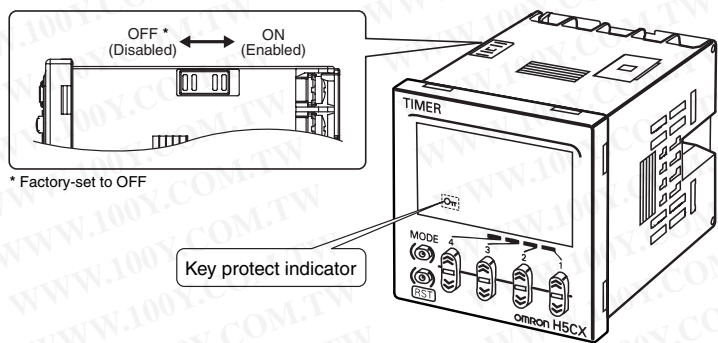

Level	Meaning	Details			
		Changing mode*	Switching display during operation	Reset Key	Up/down key
KP-1 (default setting)		Invalid	Valid	Valid	Valid
KP-2		Invalid	Valid	Invalid	Valid
KP-3		Invalid	Valid	Valid	Invalid
KP-4		Invalid	Valid	Invalid	Invalid
KP-5		Invalid	Invalid	Invalid	Invalid
KP-6		Invalid	Invalid	Valid	Valid
KP-7		Invalid	Invalid	Invalid	Valid

\* Changing mode to Timer/Twin Timer Selection Mode or Function Setting Mode.

Self-diagnostic Function

The following displays will appear if an error occurs.

Main display	Sub-display	Error	Output status	Correction method	Set value after reset
E1	Not lit	CPU	OFF	Either press the reset key or reset the power supply.	No change
E2	Not lit	Memory error (RAM)	OFF	Reset the power supply.	No change
E2	SUn	Memory error EEPROM *1	OFF	Reset Key	Factory setting
E3 *2	No change	Output ON count alarm set value exceeded	No change	Reset Key	No change

\*1. This includes times when the life of the EEPROM has expired.  
\*2. The normal display and E3 will appear alternately.  
When the Reset Key is pressed, E3 will no longer be displayed even if the alarm set value is exceeded. (Monitoring is possible, however, because the Timer will continue without clearing the output ON count.)



## Digital Timer H5CX-B□-N



- H5CX Digital Timers with 6-digit Display, 2-stage Setting, and Forecast Output (DIN 48 x 48-mm)
- Times the daily operating hours of machinery and tools, predicting and notifying when maintenance is required.
- Easy-to-read backlit negative LCD with 6 digits (displays to 99999.9 h).
- The 2-stage settings and forecast output are ideal for maintenance applications.



## Specifications

## Ratings

<b>Classification</b>		Digital Timer with 6-digit display, 2-stage setting, and forecast output
<b>Ratings</b>	<b>Power supply voltage</b>	12 to 24 VDC
	<b>Operating voltage fluctuation range</b>	90% to 110% rated supply voltage
	<b>Power consumption</b>	Approx. 2.3 W <sup>*1</sup>
<b>Mounting method</b>		Flush mounting
<b>External connections</b>		Screw terminals
<b>Degree of protection</b>		IEC IP66, UL508 Type 4X (indoors) for panel front surface only and only when Y92S-29 Waterproof Packing is used
<b>Digits</b>		6 digits
<b>Time range</b>		0.01 s to 9999.99 s, 1 s to 99 h 59 min 59 s, 0.1 min to 99999.9 min, 0.1 h to 99999.9 h
<b>Timer mode</b>		Elapsed time (Up)
<b>Inputs</b>	<b>Input signals</b>	Signal, reset, gate
	<b>Input method</b>	No-voltage Input    ON impedance    : 1 kΩ max. (Leakage current: 12 mA when 0 Ω) ON residual voltage : 3 V max. OFF impedance    : 100 kΩ min.
		Voltage Input        High (logic) level    : 4.5 to 30 VDC Low (logic) level    : 0 to 2 VDC (Input resistance: approx. 4.7 kΩ)
		No-voltage (NPN) input/voltage (PNP) input (switchable)
	<b>Signal, reset, gate</b>	Minimum input signal width: 1 or 20 ms (selectable, same for all input)
<b>Reset system</b>		Power resets (only for A mode), external and manual reset
<b>Power reset</b>		Minimum power-opening time: 0.5 s (except for F-1 mode)
<b>Reset voltage</b>		10% max. of rated supply voltage
<b>Sensor waiting time</b>		250 ms max. (Control output is turned OFF and no input is accepted during sensor waiting time.)
<b>Outputs</b>	<b>Output modes</b>	A, F-1
	<b>Output type</b>	Transistor output: NPN open collector, 100 mA at 30 VDC max. residual voltage: 1.5 VDC max. (Approx. 1 V) Leakage current: 0.1 mA max.
<b>Display</b>		7-segment, negative transmissive LCD; Present value: 10-mm-high characters, red Set value: 6-mm-high characters, green <sup>*2</sup>
<b>Memory backup</b>		EEPROM (overwrites: 100,000 times min.) that can store data for 10 years min.
<b>Operating temperature range</b>		-10 to 55°C (-10 to 50°C if counters are mounted side by side) (with no icing or condensation)
<b>Storage temperature range</b>		-25 to 70°C (with no icing or condensation)
<b>Operating humidity range</b>		25 to 85%
<b>Case color</b>		Black (N1.5)
<b>Attachments</b>		Waterproof packing, flush mounting adapter, unit label

\*1. Inrush current will flow for a short time when the power supply is turned ON.  
Inrush Current (Reference Values)

Voltage	Applied voltage	Inrush current (peak value)	Time
12 to 24 VDC	26.4 VDC	4.4 A	1.7 ms

\*2. The display is lit only when the power is ON.

勝特力材料 886-3-5753170  
勝特力电子(上海) 86-21-34970699  
勝特力电子(深圳) 86-755-83298787  
[Http://www.100y.com.tw](http://www.100y.com.tw)



## Characteristics

<b>Accuracy of operating time and setting error (including temperature and voltage influences)</b>		Power-ON start: $\pm 0.01\%$ $\pm 50$ ms max. (See note 1.) Signal start: $\pm 0.005\%$ $\pm 0.03$ ms max. (See note 1.) Signal start for transistor output model: $\pm 0.005\%$ $\pm 3$ ms max. (See note 1 and 2.) If the set value is within the sensor waiting time at startup the control output of the H5CX will not turn ON until the sensor waiting time passes. <b>Note:</b> 1. The values are based on the set value. 2. The value is applied for a minimum pulse width of 1 ms.
<b>Insulation resistance</b>		100 M $\Omega$ min. (at 500 VDC) between current-carrying terminal and exposed non-current-carrying metal parts
<b>Dielectric strength</b>		2,000 VAC, 50/60 Hz for 1 min between current-carrying metal parts and non-current-carrying metal parts 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuit
<b>Impulse withstand voltage</b>		1.0 kV (between power terminals) 1.5 kV (between current-carrying terminal and exposed non-current-carrying metal parts)
<b>Noise immunity</b>		$\pm 480$ V (between power terminals) and $\pm 600$ V (between input terminals), square-wave noise by noise simulator (pulse width: 100 ns/1 $\mu$ s, 1-ns rise)
<b>Static immunity</b>		Destruction: 15 kV Malfunction: 8 kV
<b>Vibration resistance</b>	<b>Destruction</b>	10 to 55 Hz with 0.75-mm single amplitude in three directions for 2 h each
	<b>Malfunction</b>	10 to 55 Hz with 0.35-mm single amplitude in three directions for 10 min each
<b>Shock resistance</b>	<b>Destruction</b>	300 m/s <sup>2</sup> in three directions, three cycles
	<b>Malfunction</b>	100m/s <sup>2</sup> in three directions, three cycles
<b>Weight</b>		Approx. 105 g (Timer only)

## Applicable Standards

<b>Approved safety standards</b>	UL508/Listing, CSA C22.2 No. 14, conforms to EN 61812-1 (pollution degree 2/overvoltage category III) Conforms to VDE0106/P100 (finger protection).	
<b>EMC</b>	(EMI)	EN61812-1
	Emission Enclosure:	EN55011 Group 1 class A
	(EMS)	EN61812-1
	Immunity ESD:	EN61000-4-2: 6 kV contact discharge (level 2) 8 kV air discharge (level 3)
	Immunity RF-interference:	EN61000-4-3: 10 V/m (Amplitude-modulated, 80 MHz to 1 GHz) (level 3); 10 V/m (Pulse-modulated, 900 MHz 5 MHz) (level 3)
	Immunity Conducted Disturbance:	EN61000-4-6: 10 V (0.15 to 80 MHz) (level 3)
Immunity Burst:		EN61000-4-4: 2 kV power-line (level 3); 1 kV I/O signal-line (level 4)
Immunity Surge:		EN61000-4-5: 1 kV line to lines (power and output lines) (level 3); 2 kV line to ground (power and output lines) (level 3)

## I/O Functions

<b>Inputs</b>	<b>Start signal</b>		Starts timing.
	<b>Reset</b>		<ul style="list-style-type: none"> <li>Resets present value. (The present value returns to 0.)</li> <li>Timing stops and control output turns OFF while reset input is ON.</li> <li>Reset indicator is lit while reset input is ON.</li> </ul>
	<b>Gate</b>		Inhibits timer operation.
<b>Outputs</b>	<b>Forecast value setting</b>	<b>Control output (OUT2)</b>	Turns ON when the present value reaches the set value.
		<b>Forecast output (OUT1)</b>	Turns ON when the present value reaches the forecast value.
	<b>Absolute value setting</b>	<b>Control output 2 (OUT2)</b>	Turns ON when the present value reaches set value 2.
		<b>Control output 1 (OUT1)</b>	Turns ON when the present value reaches set value 1.

## Response Delay Time When Resetting (Transistor Output)


The following table shows the delay from when the reset signal is input until the output is turned OFF.  
(Reference value)

Minimum reset signal width	Output delay time
1 ms	0.8 to 1.2 ms
20 ms	15 to 25 ms




## Connections

### Block Diagram

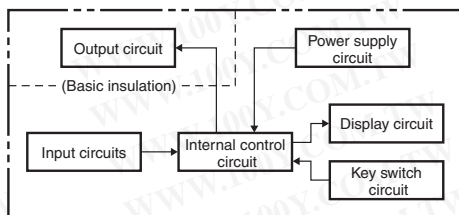

### Terminal Arrangement

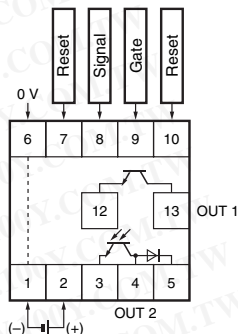


- Note:**
1. The power supply and input circuit are not isolated.
  2. Terminals 1 and 6 are connected internally.
  3. Terminals 7 and 10 have the same reset function. The same function will be performed whichever terminal is connected. Terminals 7 and 10 are not connected internally, however, so do not use them for cross-over wiring.


### Input Circuits

#### Signal, Reset, and Gate Input

No-voltage Inputs (NPN Inputs)

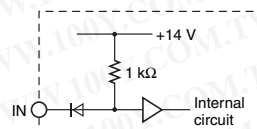


Voltage Inputs (PNP Inputs)

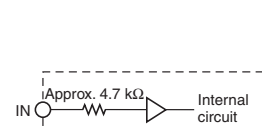



### Transistor Output

- The transistor output of the H5CX is insulated from the internal circuitry by a photocoupler, so the transistor output can be used as both NPN and PNP output.
- The diode connected to the collector of the output transistor is used to absorb inverted voltage that is generated when an inductive load is connected to the H5CX.

#### NPN Output

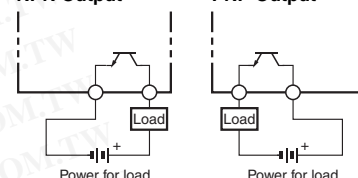

#### PNP Output

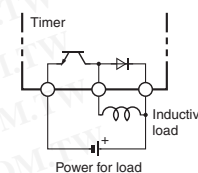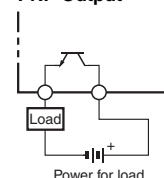


### Input Connections

The inputs of the H5CX-B are no-voltage (short-circuit or open) inputs or voltage inputs.


#### No-voltage Inputs (NPN Inputs)

##### Open Collector

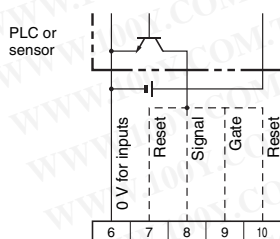


**Note:** Operate with transistor ON

##### Voltage Output

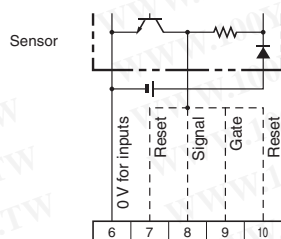


**Note:** Operate with transistor ON

##### Contact Input

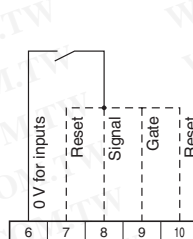

**Note:** Operate with relay ON

##### DC Two-wire Sensor

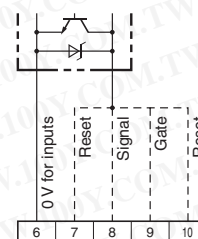

**Note:** Operate with transistor ON

#### No-voltage Input Signal Levels


No-contact input	Short-circuit level (Transistor ON)
	<ul style="list-style-type: none"> <li>• Residual voltage: 3 V max.</li> <li>• Impedance when ON: 1 kΩ max.</li> </ul> (The leakage current is approx. 12 mA when the impedance is 0 Ω.)
Contact input	Open level (Transistor OFF)
	<ul style="list-style-type: none"> <li>• Impedance when OFF: 100 kΩ min.</li> </ul> Use contacts which can adequately switch 5 mA at 10 V

#### Applicable Two-wire Sensor

- Leakage current: 1.5 mA max.
- Switching capacity: 5 mA min.
- Residual voltage: 3.0 VDC max.
- Operating voltage: 10 VDC


#### Voltage Inputs (PNP Inputs)

##### No-contact Input (NPN Transistor)

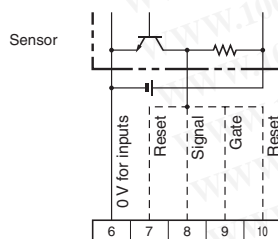


**Note:** Operate with transistor OFF

##### No-contact Input (PNP Transistor)

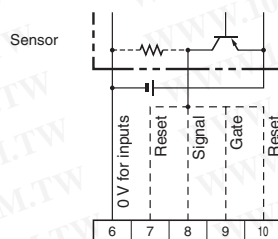

**Note:** Operate with transistor ON

##### Contact Input

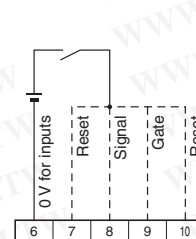

**Note:** Operate with relay ON

#### Voltage Input Signal Levels

High level (Input ON): 4.5 to 30 VDC

Low level (Input OFF): 0 to 2 VDC

- Note:**
1. The DC voltage must be 30 VDC max.
  2. Input resistance: Approx. 4.7 kΩ



# H5CX-B□-N

## Nomenclature



### Display Section

- 1. Key Protection Indicator** (orange)  
Lit when the reset input or Reset Key is ON.
- 2. Control Output Indicator** (orange)  
Forecast value setting  
Forecast output ON: OUT 1 is lit.  
Control output ON: OUT 2 is lit.  
Absolute value setting  
Control output 1 ON: OUT 1 is lit.  
Control output 2 ON: OUT 2 is lit.
- 3. Reset Indicator** (orange)  
Lit when the reset input or Reset Key is ON.
- 4. Present Value Display** (red)  
Character height: 10 mm  
If the time range is 0.0 min or 0.0 h, the decimal point flashes to indicate timing operation.
- 5. Time Unit Indicators** (green)
- 6. Set Value** (green)  
Character height: 6 mm
- 7. Set Value 1, 2 Indicator** (green)

Character Size  
for Present  
Value Display



Character Size  
for Set Value  
Display

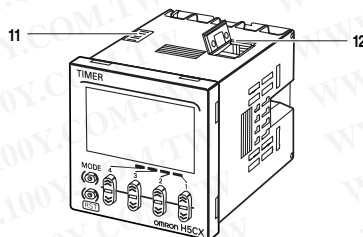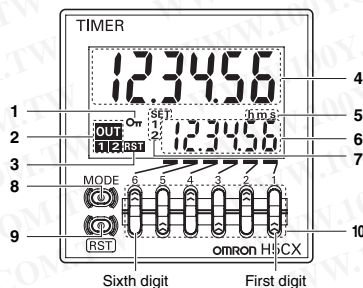

### Operation Key

- 8. Mode Key**  
(Changes modes and setting items)
- 9. Reset Key**  
Resets present value and output.
- 10. Up Keys 1 to 6**


### Switches

#### 11. Key-protect Switch

(Default setting) OFF (Disabled) ↔ ON (Enabled)



#### 12. DIP Switch



## Key Protect Level

When the Key-protect Switch is ON, key operations are prohibited according to the settings for DIP switch pins 6 to 8, thus preventing setting errors.

The Key-protect Switch can be turned ON and OFF while the power is ON.

The Key Protection Indicator is lit orange when the Key-protect Switch is ON.

If the key protect switch is ON, you will not be able to switch to Function Setting Mode.




## Dimensions

(unit: mm)

### Digital Timers

#### Digital Timers


##### H5CX-BWSD-N (Flush Mounting Models)

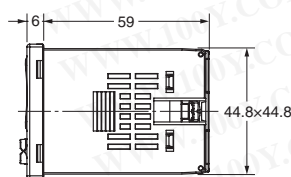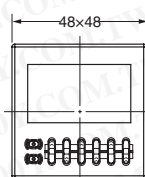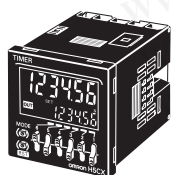

Note: M3.5 terminal screw (effective length: 6 mm)

#### Panel Cutouts




Panel cutouts areas shown below. (according to DIN43700)

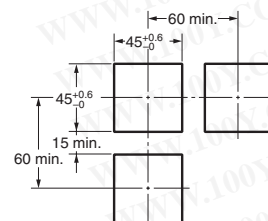

- Note:
1. The mounting panel thickness should be 1 to 5 mm.
  2. To allow easier operation, it is recommended that Adapters be mounted so that the gap between sides with hooks is at least 15 mm (i.e., with the panel cutouts separated by at least 60 mm).
  3. It is possible to mount Timers side by side, but only in the direction without the hooks. However, if Timers are mounted side by side, water resistance will be lost.

### Dimensions with Flush Mounting Adapter

##### H5CX-BWSD-N (Provided with Adapter and Waterproof Packing)

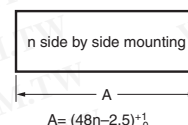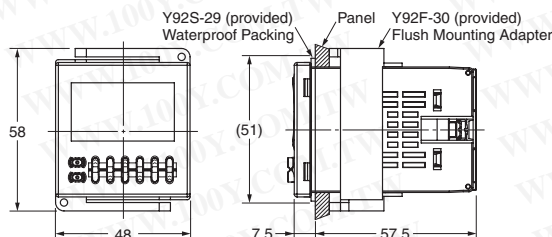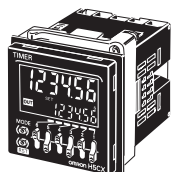

$$A = (48n - 2.5) \pm 0.5$$

With Y92A-48F1 attached.

$$A = (48n - 2.5 + (n-1) \times 4) \pm 0.5$$

With Y92A-48 attached.

$$A = (51n - 5.5) \pm 0.5$$

## Accessories (Order Separately)

Refer to page 12 for details.



Operating Procedures


DIP Switch Settings

All functions are set using the DIP switch.

	Item	OFF	ON
1	Time range	Refer to the table on the right.	
2			
3	Output modes	F-1 mode	A mode
4	Input signal width	20 ms	1 ms
5	NPN/PNP input mode	NPN (no-voltage)	PNP (voltage)
6	Reset Key protection	Disabled	Enabled
7	Up Key protection	Disabled	Enabled
8	Mode Key protection	Disabled	Enabled


Pin 1	Pin 2	Time range
OFF	OFF	0.1 h to 99999.9 h
ON	OFF	0.01 s to 9999.99 s
OFF	ON	0 h 00 min 01 s to 99 h 59 min 59 s
ON	ON	0.1 min to 99999.9 min

**Note:** 1. All the pins are factory-set to OFF.  
2. DIP switch settings are effective when the power is turned ON again. (Set the DIP switch before installation and power-up.)

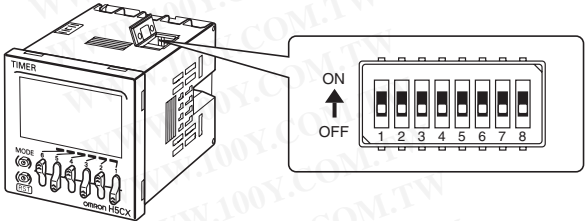


Operation in Run Mode

Set the digits for the set values using the corresponding Key.




Forecast Value Setting

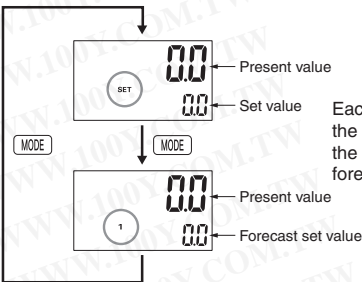

Each time the Key is pressed, the sub-display will switch between the set value ("SET" is lit) and the forecast set value ("1" is lit).

Absolute Value Setting

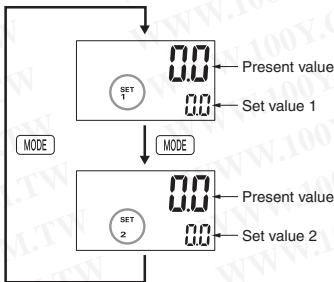


Each time the Key is pressed, the sub-display will switch between set value 1 ("SET 1" is lit) and set value 2 ("SET 2" is lit).



## Operation in Function Setting Mode


Settings that cannot be performed with the DIP switch are performed with the operation keys.

- Change to Function Setting Mode.

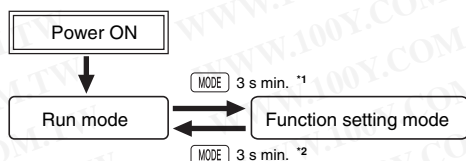

\*1. If the mode is switched to the function setting mode during operation, operation will continue.

\*2. Changes made to settings in function setting mode are enabled for the first time when the mode is changed to run mode. Also, when settings are changed, the timer is reset (time initialized and output turned OFF).

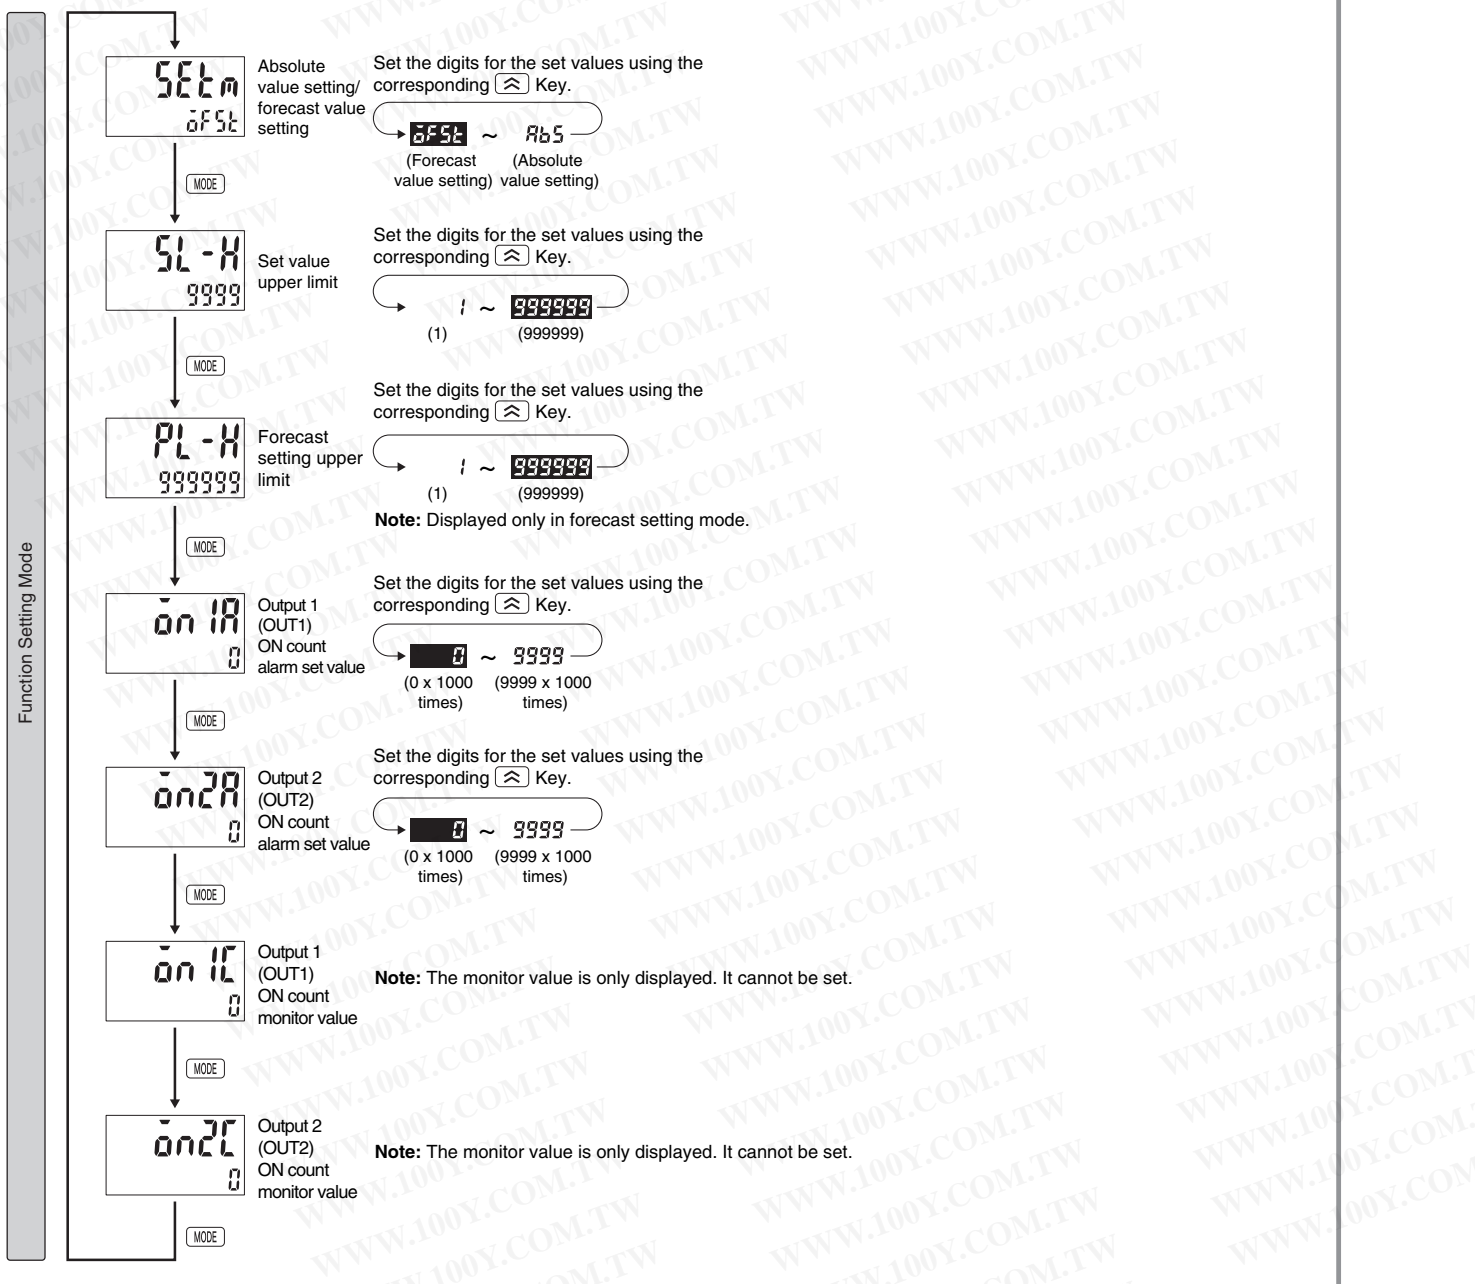




## Explanation of Functions

### Absolute value setting/forecast value setting (SET)

Set value 1 can be set as the forecast value setting (FFSE) or the absolute value setting (ABS).

#### Forecast Value Setting

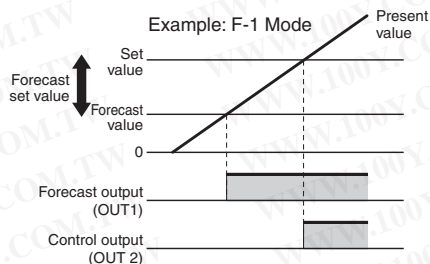

- OUT1 (forecast output) turns ON when the present value reaches the forecast value.  
Forecast value = Set value - Forecast set value  
**Note:** The forecast set value is used to set the deviation for the set value.
- OUT2 (control output) turns ON when the present value reaches the set value.
- If the forecast set value  $\geq$  set value, OUT1 (forecast output) will turn ON as soon as timing starts.

### Self-diagnostic Function

The following displays will appear if an error occurs.


Main display	Sub-display	Error	Output status	Correction method	Set value after reset
E1	Not lit	CPU	OFF	Either press the Reset Key or reset the power supply.	No change
E2	Not lit	Memory error (RAM)	OFF	Reset the power supply.	No change
E2	Sum	Memory error EEPROM *1	OFF	Reset Key.	Factory setting
E3 *2	No change	Output ON count alarm set value exceeded	No change	Reset Key	No change

\*1. This includes times when the life of the EEPROM has expired.

\*2. The normal display and E3 will appear alternately.

When the Reset Key is pressed, E3 will no longer be displayed even if the alarm set value is exceeded. (Monitoring is possible, however, because the Timer will continue without clearing the output ON count.)

### Absolute Value Setting


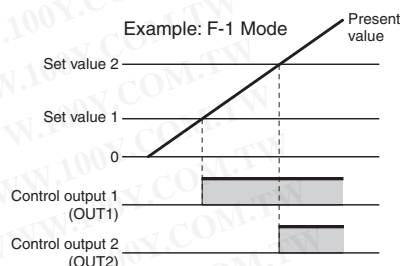




- OUT1 (control output 1) turns ON when the present value reaches set value 1.
- OUT2 (control output 2) turns ON when the present value reaches set value 2.

Refer to **pages 18 and 28** for information on other functions.



Timing Charts

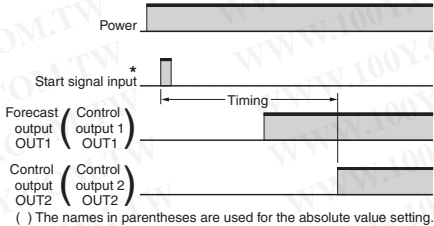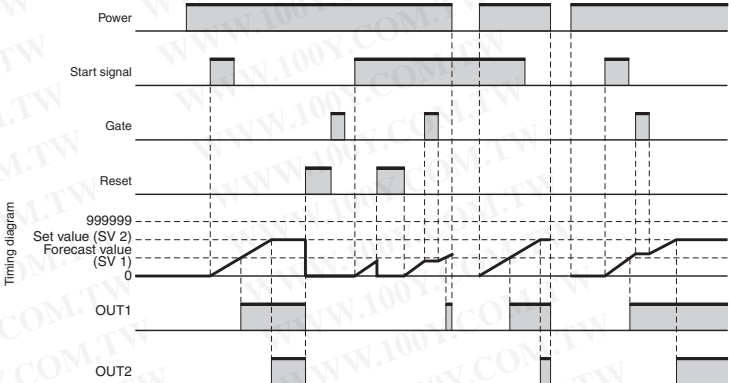Mode A: Signal ON delay (Timer resets when power comes ON.)	
Basic operation	Detailed operation
<div><p>Forecast output OUT1 (Control output 1) Control output OUT2 (Control output 2) ( ) The names in parentheses are used for the absolute value setting.</p><p>* Start signal input is disabled during timing.</p><ul style="list-style-type: none"><li>• Timing starts when the start signal goes ON.</li><li>• While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.</li><li>• A sustained control output is used.</li><li>• Timing stops when the time is up.</li></ul><p><b>Note:</b> Output is instantaneous when the set value is 0.</p></div>	<div><p>Timing diagram</p><p>999999 Set value (SV 2) Forecast value (SV 1) 0</p><p>OUT1 OUT2</p><p>The names in parentheses are used for the absolute value setting.</p></div>

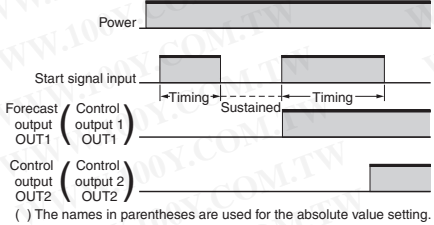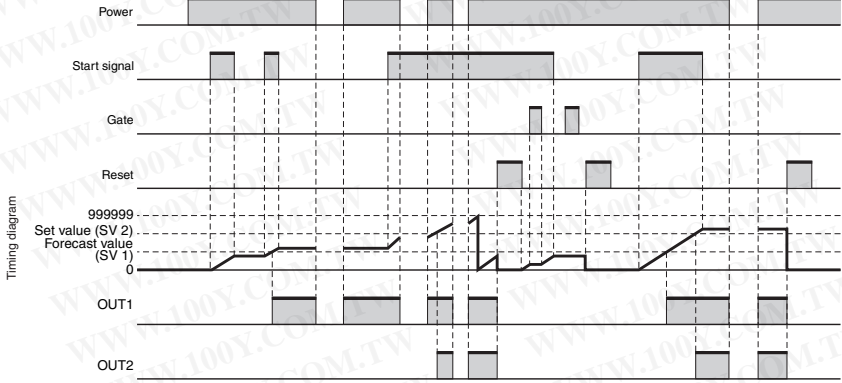Mode F-1: Cumulative (Timer does not reset when power comes ON.)	
Basic operation	Detailed operation
<div><p>Forecast output OUT1 (Control output 1) Control output OUT2 (Control output 2) ( ) The names in parentheses are used for the absolute value setting.</p><ul style="list-style-type: none"><li>• Start signal enables timing (timing is stopped when the start signal is OFF or when the power is OFF).</li><li>• A sustained control output is used.</li><li>• Timing continues even after the time is up.</li></ul><p><b>Note:</b> Output is instantaneous when the set value is 0.</p><p>When the H5CX is used with power start in mode F mode or F-1 (i.e., cumulative operation with output on hold), there will be a timer error (approximately 100 ms each time the H5CX is turned ON) due to the characteristics of the internal circuitry. Use the H5CX with signal start if timer accuracy is required.</p></div>	<div><p>Timing diagram</p><p>999999 Set value (SV 2) Forecast value (SV 1) 0</p><p>OUT1 OUT2</p><p>The names in parentheses are used for the absolute value setting.</p></div>

**Note:** 1. The forecast value = set value - forecast set value  
2. The forecast set value is used to set the deviation for the set value.



## Safety Precautions for All H5CX Series (Common)

### ⚠ CAUTION

Do not allow pieces of metal, wire clippings, or fine metallic shavings or fillings from installation to enter the product. Doing so may occasionally result in electric shock, fire, or malfunction.



Minor injury due to explosion may occasionally occur. Do not use the Timer where subject to flammable or explosive gas.



Fire may occasionally occur. Tighten the terminal screws to the rated torque.  
H5CX terminals: 6.55 to 7.97 lb-in (0.74 to 0.90 N·m)  
P2CF Socket terminals: 4.4 lb-in (0.5 N·m)



Minor injury due to electric shock may occasionally occur. Do not touch any of the terminals while power is being supplied. Be sure to mount the terminal cover after wiring.



The life expectancy of the output relay varies considerably according to its usage. Use the output relay within its rated load and electrical life expectancy. If the output relay is used beyond its life expectancy, its contacts may become fused or there may be a risk of fire. Also, be sure that the load current does not exceed the rated load current and when using a heater, be sure to use a thermal switch in the load circuit.




Minor electric shock, fire, or malfunction may occasionally occur. Do not disassemble, modify, or repair the Timer or touch internal components.




### Precautions for Safe Use

- The panel surface of the H5CX is water-resistant (conforming to NEMA4, IP66, UL Type 4X (Indoor Use Only). To protect the internal circuits from water penetration through the space between the H5CX and operating panel, waterproof packing is included. Attach the Y92F-30 Adapter with sufficient pressure with the reinforcing screws so that water does not penetrate the panel.



- When mounting the Timer to a panel, tighten the two mounting screws alternately, a little at a time, so as to keep them at an equal tightness. If the panel screws are tightened unequally, water may enter the panel.
- Store the Timer at the specified temperature. If the Time has been stored at a temperature of less than -10°C, allow the Time to stand at room temperature for at least 3 hours before use.
- Mounting the Timer side-by-side may reduce the life expectancies of internal components.
- Use the Timer within the specified ranges for the ambient operating temperature and humidity.
- Do not use in the following locations:
  - Locations subject to sudden or extreme changes in temperature.
  - Locations where high humidity may result in condensation.
- Do not use the Timer outside of the rated ranges for vibration, shock, water exposure, and oil exposure.
- Do not use this Timer in dusty environments, in locations where corrosive gasses are present, or in locations subject to direct sunlight.
- Install the Timer well away from any sources of static electricity, such as pipes transporting molding materials, powders, or liquids.

- Internal elements may be destroyed if a voltage outside the rated voltage range is applied.
- Be sure that polarity is correct when wiring the terminals.
- Separate the Timer from sources of noise, such as devices with input signals from power lines carrying noise, and wiring for I/O signals.
- Do not connect more than two crimp terminals to the same terminal.
- Up to two wires of the same size and type can be inserted into a single terminals.
- Use the specified wires for wiring. Applicable Wires: AWG 18 to AWG 22, solid or twisted, copper.
- Install a switch or circuit breaker that allows the operator to immediately turn OFF the power, and label it to clearly indicate its function.
- When the Timer is operated with no-voltage input (NPN input), approximately 14 V is output from the input terminals. Use a sensor that contains a diode.

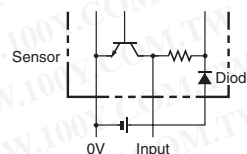

- Use a switch, relay, or other contact so that the rated power supply voltage will be reached within 0.1 seconds. If the power supply voltage is not reached quickly enough, the Timer may malfunction or outputs may be unstable.
- Use a switch, relay, or other contact to turn the power supply OFF instantaneously. Outputs may malfunction and memory errors may occur if the power supply voltage is decreased gradually.
- H5CX-A□-N/-L□-N:
 

When changing the set value during a timing operation, the output will turn ON if the set value is changed as follows because of the use of a constant read-in system:

Elapsed time (UP) mode: Present value  $\geq$  Set value  
Remaining time (DOWN) mode: Elapsed time  $\geq$  Set value (The present value is set to 0.)

When in the remaining time mode, the amount the set value is changed is added to or subtracted from the present value.

Operation with a set value of 0 will vary with the output mode. Refer to the timing charts on **page 20**.
- H5CX-B□-N:
 

When changing the set value during a timing operation, the output will turn ON if the set value is changed as follows because of the use of a constant read-in system:

  - Forecast Value Setting
 

When the present value  $\geq$  the set value, OUT2 (control output) turns ON.

When the present value  $\geq$  the forecast value (forecast value = set value - forecast set value), OUT1 (forecast output) turns ON.
  - Absolute Value Setting
 

When the present value  $\geq$  set value 2, OUT2 (control output 2) turns ON.


When the present value  $\geq$  the forecast value (forecast value = set value - forecast set value), OUT1 (control output 1) turns ON.

When the set value is 0, the output turns ON the moment the signal is input. The reset operation turns OFF the output.
- Do not use organic solvents (such as paint thinners or benzene), strong alkali, or strong acids. They will damage the external finish.
- Confirm that indications are working normally, including the backlight LED, and LCD. The indicator LEDs, LCD, and resin parts may deteriorate more quickly depending on the application environment, preventing normal indications. Periodic inspection and replacement are required.
- The waterproof packing may deteriorate, shrink, or harden depending on the application environment. Periodic inspection and replacement are required.




### Precautions for Correct Use

- H5CX models with a 24-VDC/12 to 24-VDC power supply use a transformer-free power supply method in which the power supply terminals are not isolated from the signal input terminals. If a non-isolating DC power supply is used, unwanted current paths may occasionally burn or destroy internal components depending on the wiring. Always check the wiring sufficiently before use.
- An inrush current of approx. 10 A will flow for a short time when the power supply is turned ON. If the capacity of the power supply is not sufficient, the Timer may not start. Be sure to use a power supply with sufficient capacity.
- Maintain voltage fluctuations in the power supply within the specified operating voltage range.
- When turning the power ON and OFF, input signal reception is possible, unstable, or impossible as shown in the diagram below.



- To allow for the startup time of peripheral devices (sensors, etc.), the Timer starts timing operation between 200 to 250 ms after power is turned ON. For this reason, in operations where timing starts from power ON, the time display will actually start from 249 ms. If the set value is 249 ms or less, the time until output turns ON will be a fixed value between 200 and 250. The present value display will start from 250 ms. (Normal operation is possible for set values of 250 ms or more.) In applications where a set value of 249 ms or less is required, use start timing with signal input.
- Inrush current generated by turning ON or OFF the power supply may deteriorate contacts on the power supply circuit. Turn ON or OFF to a device with the rated current of more than 10 A.
- Make sure that all settings are appropriate for the application. Unexpected operation resulting in property damage or accidents may occur if the settings are not appropriate.
- Do not leave the Timer for long periods at a high temperature with output current in the ON state. Doing so may result in the premature deterioration of internal components (e.g., electrolytic capacitors).
- EEPROM is used as backup memory when the power is interrupted. The write life of the EEPROM is 100,000 writes. The EEPROM is written at the following times:
  - When the power supply is turned OFF
  - When switching from Timer/Twin Timer Selection Mode or Function Setting Mode to Run Mode
- Dispose of the product according to local ordinances as they apply.
- Attach the front panel when using the Timer. The tabs in the middle of each of four sides secure the front panel to the main body. To remove the panel, widen the four tabs and pull the panel toward you. To mount the panel, fit all four tabs correctly into the grooves on the main body.

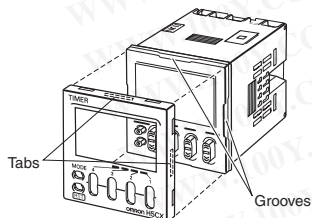

### ⚠ Conformance to EN/IEC Standards

- When conforming to EMC standards, refer to the information provided in this datasheet for cable selection and other conditions.
- This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.
- H5CX-A□-N/-L□-N:  
Basic insulation is provided between the power supply and input terminals. (No insulation is provided between the power supply and input terminals for the H5CX-□D-N.)  
Basic insulation is provided between power supply and output terminals, and between input and output terminals.
- H5CX-B□-N:  
No insulation is provided between the power supply and input terminals.  
Basic insulation is provided between the power supply and output terminals.
- When double insulation or reinforced insulation is required, apply double insulation or reinforced insulation as defined in IEC 60664 that is suitable for the maximum operating voltage with clearances or solid insulation.
- Connect the input and output terminals to devices that do not have any exposed charged parts.

勝特力材料 886-3-5753170  
 勝特力电子(上海) 86-21-34970699  
 勝特力电子(深圳) 86-755-83298787  
[Http://www.100y.com.tw](http://www.100y.com.tw)



## Product Discontinuation Notice

### H5CX Digital Timer

May 22, 2009

No. KA1-090205

## Discontinuation Notice of H5CX Series due to renewal

### Product Discontinuation

Digital Timer



Model H5CX-A

Model H5CX-L8

Model H5CX-BWSD



### Recommended Replacement

Digital Timer

(Schedule to be released on August, 2009)

Model H5CX-A -N

Model H5CX-L8 -N

Model H5CX-BWSD-N

**Discontinuation Date: The end of March, 2010**

### Caution on Recommended Replacement

- Shorter depth.  
<Terminal Block Type>  
Supply voltage of **AC**: from 100mm to **78mm**, **DC**: from 64mm to **59mm**.
- <Socket Type except L8>  
Supply voltage of **AC**: from 72.5mm to **63.7mm**.
- Between power and input of supply voltage of 100-240VAC is **insulated**.
- Change of description by adding **-N** in the end.

勝特力材料 886-3-5753170  
勝特力电子(上海) 86-21-34970699  
勝特力电子(深圳) 86-755-83298787  
[Http://www.100y.com.tw](http://www.100y.com.tw)



## Difference from Discontinued Product

Model	Body Color	Dimensions	Wiring Connections	Mounting Dimension	Characteristics	Operation Characteristics	Operation Method
H5CX	*	*	**	*	**	**	*

\*\* : Fully compatible

\* : Almost compatible/Few changes

-- : Not compatible

- : No corresponding specification

## Models to be Discontinued Model and Recommended Replacement


Models to be discontinued	Recommended replacement
H5CX-A	H5CX-A-N
H5CX-AS	H5CX-AS-N
H5CX-AD	H5CX-AD-N
H5CX-ASD	H5CX-ASD-N
H5CX-L8	H5CX-L8-N
H5CX-L8S	H5CX-L8S-N
H5CX-L8D	H5CX-L8D-N
H5CX-L8SD	H5CX-L8SD-N
H5CX-A11	H5CX-A11-N
H5CX-A11S	H5CX-A11S-N
H5CX-A11D	H5CX-A11D-N
H5CX-A11SD	H5CX-A11SD-N
H5CX-BWSD	H5CX-BWSD-N
H5CX-A-G	H5CX-A-N + Y92P-CXT4G
H5CX-AS-G	H5CX-AS-N + Y92P-CXT4G
H5CX-AD-G	H5CX-AD-N + Y92P-CXT4G
H5CX-ASD-G	H5CX-ASD-N + Y92P-CXT4G
H5CX-L8-G	H5CX-L8-N + Y92P-CXT4G
H5CX-L8S-G	H5CX-L8S-N + Y92P-CXT4G
H5CX-L8D-G	H5CX-L8D-N + Y92P-CXT4G
H5CX-L8SD-G	H5CX-L8SD-N + Y92P-CXT4G
H5CX-A11-G	H5CX-A11-N + Y92P-CXT4G
H5CX-A11S-G	H5CX-A11S-N + Y92P-CXT4G
H5CX-A11D-G	H5CX-A11D-N + Y92P-CXT4G
H5CX-A11SD-G	H5CX-A11SD-N + Y92P-CXT4G



## Front Design

### Model to be discontinued Model H5CX-A , -L8 Series

#### < 4-Digit Display >

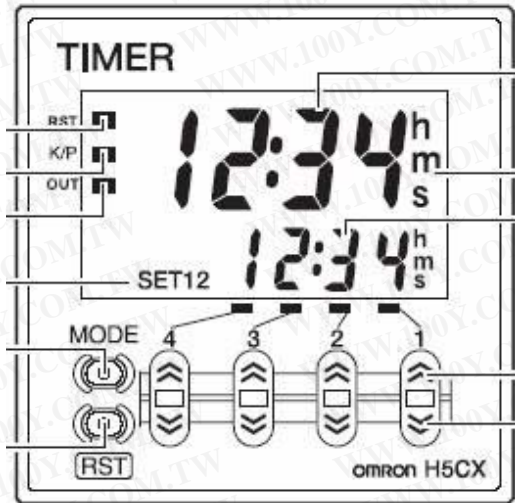

#### <Front>

Flat display around LCD area.  
Display the RST, K/P, OUT in the front panel.

#### <LCD Display>

Character height of present value: 11.5mm  
Use single light to indicate the function of RST, K/P, OUT

### Recommended replacement Model H5CX-A -N, -L8 -N Series



#### <Front>


Rounded 3D display around LCD area.  
Deletion of the RST, K/P, OUT display.

#### <LCD Display>

Character height of present value: **12mm**  
Deletion of single light display and add RST, Key logo, RST in the LCD. (a)  
Addition of segment (line) in the displayed number. (b)

### Model to be discontinued Model H5CX-BWSD

#### < 6-Digit Display >

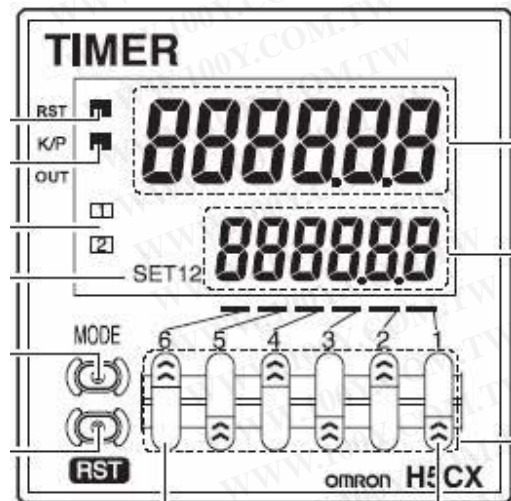

#### <Front>

Flat display around LCD area.  
Display the RST, K/P, OUT in the front panel.

#### <LCD Display>

Character height of present value: 9mm  
Use single light to indicate the function of RST, K/P, OUT.

### Recommended replacement Model H5CX-BWSD-N



#### <Front>




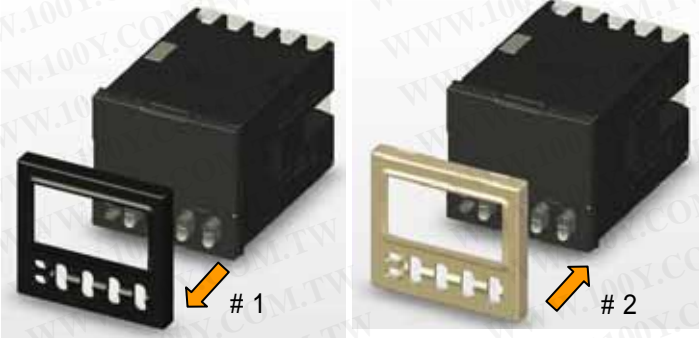
Rounded 3D display around LCD area.  
Deletion of the RST, K/P, OUT display.

#### <LCD Display>

Character height of present value: **10mm**  
Deletion of single light display and add RST, Key logo, OUT, h, m, s in the LCD. (a)  
Addition of segment (line) in the displayed number. (b)











## Colors

Model to be discontinued Model H5CX- Series	Recommended replacement Model H5CX- -N Series
<p>Key-protect switch: Light grey</p> 	<p>Key-protect switch: <b>Silver</b></p> 
Model to be discontinued Model H5CX- -G	Recommended replacement Model H5CX- -N + Model Y92P-CXT4G
<p>Front: Light grey Body Light grey</p> 	<p>Remove the attached front cover and mount light grey cover ( new optional model <b>Y92P-CXT4G</b>)</p> <p>* Model Y92P-CXT4G: 4-digit timer/light grey</p> <p>&lt; Product Image&gt;</p>  <p>Front: Light grey Body: Black</p> <p>&lt; Switching of front cover&gt;</p>  <p>#1 Remove the black front cover (standard cover).</p> <p>#2 Mount the optional light grey front cover.</p>



## Dimensions

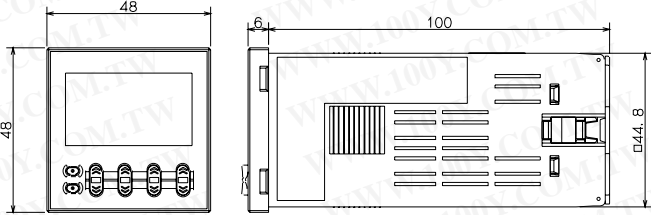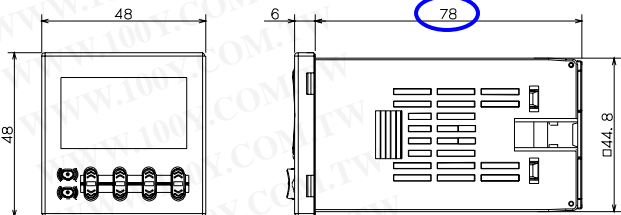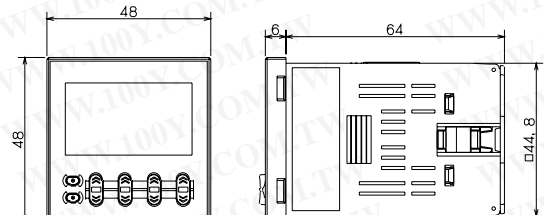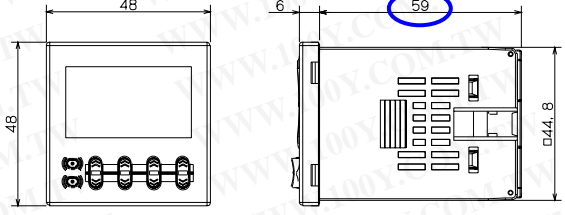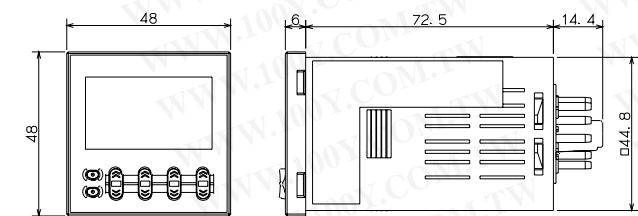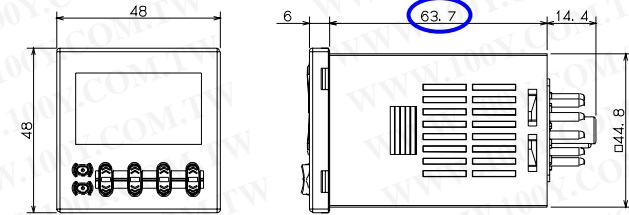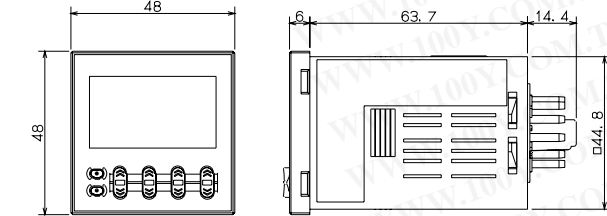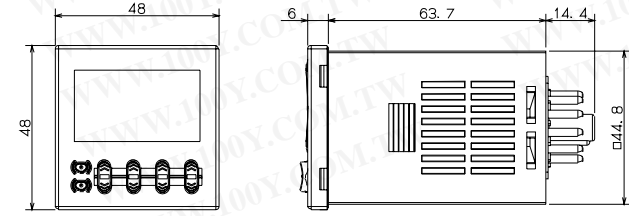
<b>Model to be discontinued</b> <b>Model H5CX-A/-AS</b>	<b>Recommended replacement</b> <b>Model H5CX-A/-AS -N</b>
<p>Terminal Block Type (Flush Mounting Models)</p> 	 <p>Depth of <b>78mm</b>. Change of slit shape.</p>
<b>Model to be discontinued</b> <b>Model H5CX-AD/-ASD/-BWSD</b>	<b>Recommended replacement</b> <b>Model H5CX-AD/-ASD/-BWSD -N</b>
<p>Terminal Block Type (Flush Mounting Models)</p> 	 <p>Depth of <b>59mm</b>. Change of slit shape.</p>
<b>Model to be discontinued</b> <b>Model H5CX-A11/-A11S</b>	<b>Recommended replacement</b> <b>Model H5CX-A11/-A11S -N</b>
<p>Socket Type (Flush Mounting/Surface Mounting Models)</p> 	 <p>Depth of <b>63.7mm</b>. Change of slit shape.</p>
<b>Model to be discontinued</b> <b>Model H5CX-A11D/-A11SD/-L8</b>	<b>Recommended replacement</b> <b>Model H5CX-A11D/-A11SD/-L8 -N</b>
<p>Socket Type (Flush Mounting/Surface Mounting Models)</p> 	 <p>No change of size Change of slit shape.</p>




## Mounting Dimensions

### Model to be discontinued Model H5CX-A/-AS

#### Terminal Block Type (Flush Mounting Models)

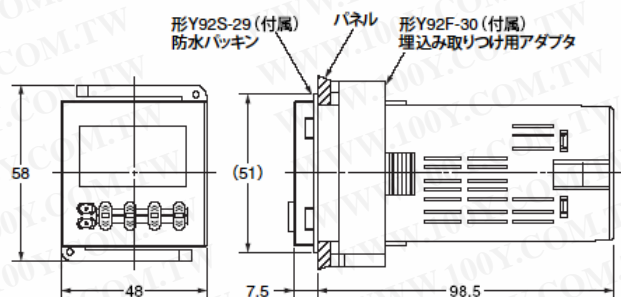


### Recommended replacement Model H5CX-A/-AS -N

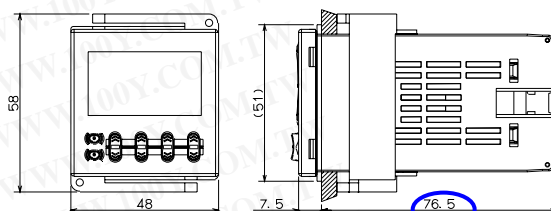


Depth of **76.5mm**.

### Model to be discontinued Model H5CX-AD/-ASD/-BWSD

#### Terminal Block Type (Flush Mounting Models)

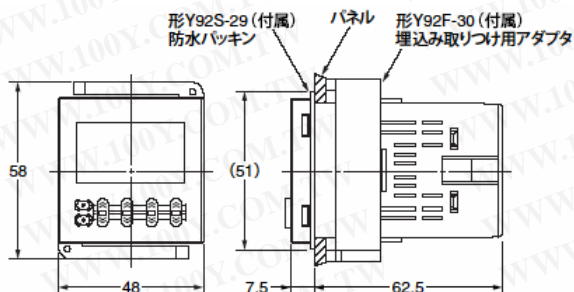


### Recommended replacement Model H5CX-AD/-ASD /-BWSD-N

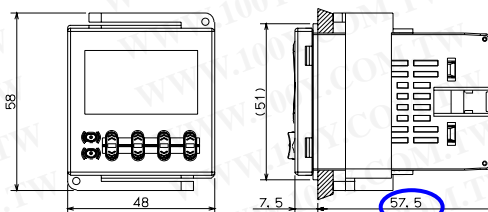


Depth of **57.5mm**.

### Model to be discontinued Model H5CX-A11/-A11S



#### Socket Type (Flush Mounting/Surface Mounting Models)

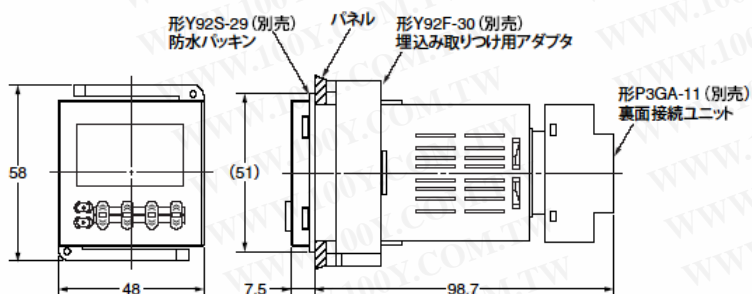

### Recommended replacement Model H5CX-A11/-A11S -N

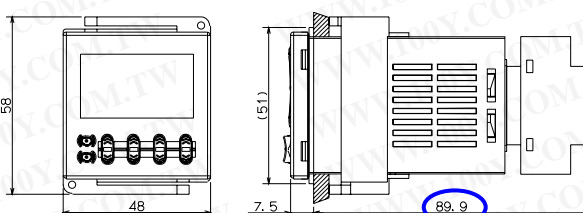

Depth of **89.9mm**.

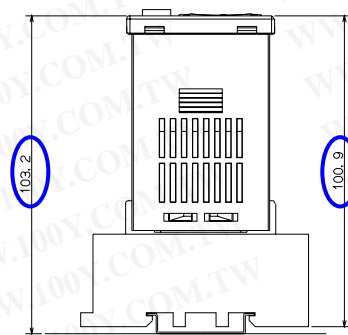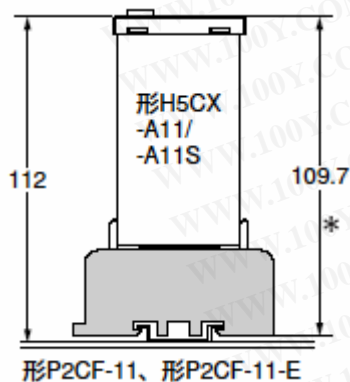







Mounting dimensions is **100.9mm and 103.2mm**.




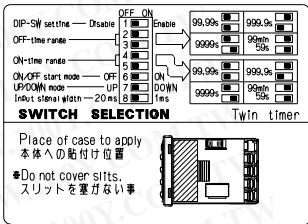

## Wiring Connections

Item	Model	Model to be discontinued Model H5CX-A (Terminal block type)	Recommended replacement Model H5CX-A -N (Terminal block type)
Recommended tightening Torque		About 0.5N·m	<b>0.74-0.90N·m</b> <b>The screw torque value is changed for UL standard recognition. The performance of the terminal block is the same as the production expected completion model.</b>
application electric wire		<b>AWG18-24</b>	<b>AWG18-22</b> <b>The application electric wire is changed for the UL standard recognition. The performance of the terminal block is the same as the production expected completion model.</b>

## Specifications

Item	Model	Model to be discontinued Model H5CX-A/-AS/-L8/-L8S Series (except the model with D)	Recommended replacement Model H5CX-A/-AS/-L8/-L8S -N Series (except the model with D)
Insulation between power and input.		Non-insulated	Insulated
Item	Model	Model to be discontinued Model H5CX-A (Terminal block type)	Recommended replacement Model H5CX-A -N (Terminal block type)
Switching of display color of Present Value		Programmable of red or green.	Programmable of three colors: <b>red, green, and orange.</b> <div> <div>&lt; 4-Digit Display &gt;</div> <div>    </div> <div>&lt; 6-Digit Display &gt;</div> <div>    </div> </div>
Item	Model	Model to be discontinued Model H5CX- Series	Recommended replacement Model H5CX- -N Series (except the model with SD)
Safety Standard		Not comply with CCC	<b>Comply with CCC</b> <b>(August, 2009 acquisition)</b>



Model Item	Model to be discontinued Model H5CX-A	Recommended replacement Model H5CX-A -N
DIPswitch label	<p>Enclose with the product. (accessories) Explains the setting of both Timer and Twin-timer on the sticker.</p> 	<p>Enclose with the product. (accessories) Explains the setting of Twin-timer on the sticker while the setting of Timer is printed on the product directory.</p> <p>&lt;DIP Switch label&gt;</p> 
Model Item	Model to be discontinued Model H5CX-BWSD	Recommended replacement Model H5CX-BWSD-N
Unit label	<p>Enclose with the product. (accessories)</p> 	<p>Deletion of the label.</p> <p>Not required as the “h, m, s” are added in the LCD display..</p>

## Operation

Model Item	Model to be discontinued	Recommended replacement
	<p>Although the setting items of function setting mode are slightly added due to new functions, the basic operation remain the same.</p>	

## Instruction Manual

Model to be discontinued Model H5CX- Series	Recommended replacement Model H5CX- -N Series
<p>Content is updated for a renewal.</p>	



# PRODUCT NEWS

Correction Reissue

# OMRON

## Product Discontinuation Notice

**H7CX**Digital Counter/Tachometer

May 22, 2009

No. KA1-090206

### Discontinuation Notice of H7CX Series due to renewal

#### Product Discontinuation

Digital Counter/Tachometer



Model H7CX-A

Model H7CX-R



#### Recommended Replacement

Digital Counter/Tachometer

(Schedule to be released on August, 2009)

Model H7CX-A -N

Model H7CX-R -N

勝特力材料 886-3-5753170  
勝特力电子(上海) 86-21-34970699  
勝特力电子(深圳) 86-755-83298787  
[Http://www.100y.com.tw](http://www.100y.com.tw)

**Discontinuation Date: The end of March, 2010**

#### Caution on Recommended Replacement

- Shorter depth.  
<Terminal Block Type> Supply voltage of **AC**: from 100mm to **78mm**, **DC**: from 64mm to **59mm**  
<Socket Type except L8> Supply voltage of **AC**: from 72.5mm to **63.7mm**
- Change of description by adding **-N** in the end.

#### Difference from Discontinued Product

Model	Body Color	Dimensions	Wiring Connections	Mounting Dimension	Characteristics	Operation Characteristics	Operation Method
H7CX	*	*	**	*	**	**	*

\*\* : Fully compatible

\* : Almost compatible/Few changes

-- : Not compatible

- : No corresponding specification



## Models to be discontinued and Recommended Replacement


Models to be discontinued	Recommended replacement
H7CX-A11	H7CX-A11-N
H7CX-A11S	H7CX-A11S-N
H7CX-A11D1	H7CX-A11D1-N
H7CX-A11SD1	H7CX-A11SD1-N
H7CX-A114	H7CX-A114-N
H7CX-A114S	H7CX-A114S-N
H7CX-A114D1	H7CX-A114D1-N
H7CX-A	H7CX-A-N
H7CX-AS	H7CX-AS-N
H7CX-AD	H7CX-AD-N
H7CX-ASD	H7CX-ASD-N
H7CX-A4	H7CX-A4-N
H7CX-A4S	H7CX-A4S-N
H7CX-A4D	H7CX-A4D-N
H7CX-A4SD	H7CX-A4SD-N
H7CX-AW	H7CX-AW-N
H7CX-AWS	H7CX-AWS-N
H7CX-AWD1	H7CX-AWD1-N
H7CX-AWSD1	H7CX-AWSD1-N
H7CX-AWSD	H7CX-AWSD-N
H7CX-A4W	H7CX-A4W-N
H7CX-A4WSD	H7CX-A4WSD-N
H7CX-R11	H7CX-R11-N
H7CX-R11D1	H7CX-R11D1-N
H7CX-A11-G	H7CX-A11-N + Y92P-CXC6G
H7CX-A11S-G	H7CX-A11S-N + Y92P-CXC6G
H7CX-A11D1-G	H7CX-A11D1-N + Y92P-CXC6G
H7CX-A11SD1-G	H7CX-A11SD1-N + Y92P-CXC6G
H7CX-A114-G	H7CX-A114-N + Y92P-CXC4G
H7CX-A114S-G	H7CX-A114S-N + Y92P-CXC4G
H7CX-A114D1-G	H7CX-A114D1-N + Y92P-CXC4G
H7CX-A-G	H7CX-A-N + Y92P-CXC6G
H7CX-AS-G	H7CX-AS-N + Y92P-CXC6G
H7CX-AD-G	H7CX-AD-N + Y92P-CXC6G
H7CX-ASD-G	H7CX-ASD-N + Y92P-CXC6G
H7CX-A4-G	H7CX-A4-N + Y92P-CXC4G
H7CX-A4S-G	H7CX-A4S-N + Y92P-CXC4G
H7CX-A4D-G	H7CX-A4D-N + Y92P-CXC4G
H7CX-A4SD-G	H7CX-A4SD-N + Y92P-CXC4G
H7CX-AW-G	H7CX-AW-N + Y92P-CXC6G
H7CX-AWS-G	H7CX-AWS-N + Y92P-CXC6G
H7CX-AWD1-G	H7CX-AWD1-N + Y92P-CXC6G
H7CX-AWSD1-G	H7CX-AWSD1-N + Y92P-CXC6G
H7CX-AWSD-G	H7CX-AWSD-N + Y92P-CXC6G
H7CX-A4W-G	H7CX-A4W-N + Y92P-CXC4G
H7CX-A4WSD-G	H7CX-A4WSD-N + Y92P-CXC4G



## Front Design

### Model to be discontinued Model H7CX-A 4 Series

#### < 4-Digit Display >

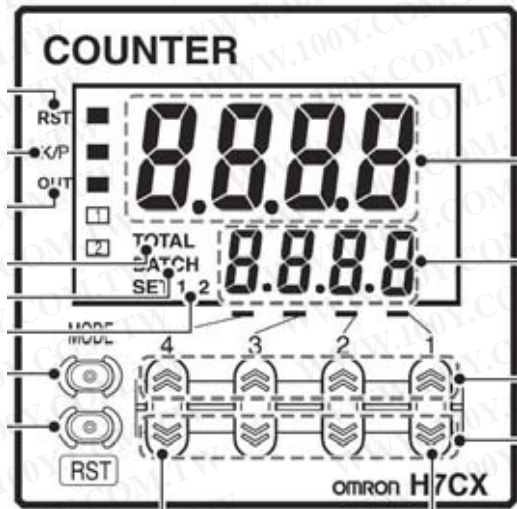

#### <Front>

Flat display around LCD area.  
Display the RST, K/P, OUT in the front panel.

#### <LCD Display>

Character height of present value: 11.5mm  
Use single light to indicate the function of RST, K/P, OUT

### Recommended replacement Model H7CX-A 4 -N Series



#### <Front>


Rounded 3D display around LCD area.  
Deletion of the RST, K/P, OUT display.

#### <LCD Display>

Character height of present value: **12mm**  
Deletion of single light display and add RST, Key logo, RST in the LCD.(a)  
Addition of segment (line) in the displayed number.(b)

### Model to be discontinued Model H7CX-A /- AW Series

#### < 6-Digit Display >

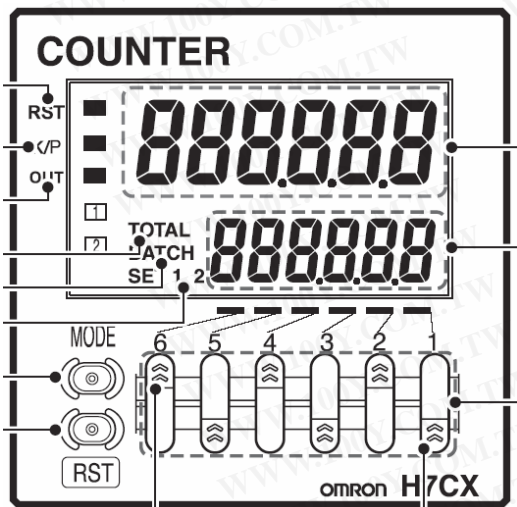

#### <Front>

Flat display around LCD area.  
Display the RST, K/P, OUT in the front panel.

#### <LCD Display>

Character height of present value: 9mm  
Use single light to indicate the function of RST, K/P, OUT.

### Recommended replacement Model H7CX-A ,/-AW -N Series





#### <Front>

Rounded 3D display around LCD area.  
Deletion of RST, K/P, OUT display.

#### <LCD Display>



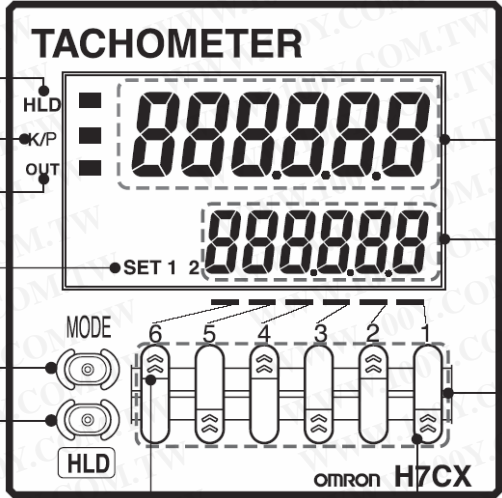


Character height of present value: **10mm**  
Deletion of single light display and add RST, Key logo, OUT in the LCD.(a)  
Addition of segment (line) in the displayed number. (b)



Model to be discontinued Model H7CX-R Series	Recommended replacement Model H7CX-R -N Series
<p>&lt;Tachometer&gt;</p>  <p>&lt;Front&gt; Flat display around LCD area. Display the HLD, K/P, OUT in the front panel.</p> <p>&lt;LCD Display&gt; Character height of present value: 9mm Use single light to indicate the function of HLD, K/P, OUT.</p>	 <p>&lt;Front&gt; Rounded 3D display around LCD area. Deletion of HLD, K/P, OUT display.</p> <p>&lt;LCD Display&gt; Character height of present value: <b>10mm</b> Deletion of single light display and add HLD, Key logo, OUT in the LCD.(a) Addition of segment (line) in the displayed number. (b)</p>









## Colors

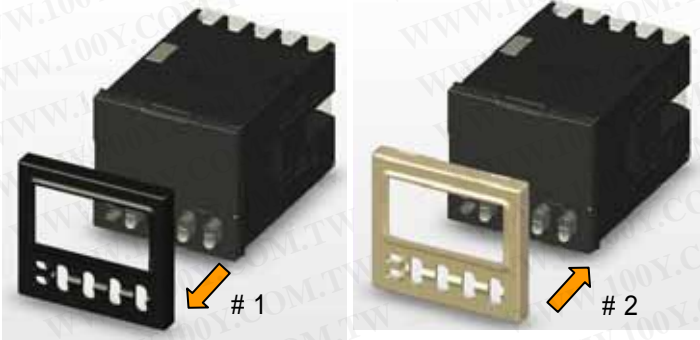Model to be discontinued Model H7CX- Series	Recommended replacement Model H7CX- -N Series
<p>Key-protect switch: Light grey</p> 	<p>Key-protect switch: <b>Silver</b></p> 
Model to be discontinued Model H7CX- -G Series	Recommended replacement Model H7CX-A -N Series + Model Y92P-CXC G
<p>Front: Light grey Body Light grey</p> 	<p>Remove the attached front cover and mount light grey cover ( new optional model <b>Y92P-CXC G</b>)</p> <ul style="list-style-type: none"> <li>* Model <b>Y92P-CXC4G</b>: 4-digit counter/light grey</li> <li>* Model <b>Y92P-CXC6G</b>: 6-digit counter/light grey</li> </ul> <p>&lt; Product Image&gt;</p>  <p>Front: Light grey Body: Black</p> <p>&lt; Switching of front cover&gt;</p>  <p>#1 Remove the black front cover (standard cover). #2 Mount the optional light grey front cover.</p>



## Dimensions

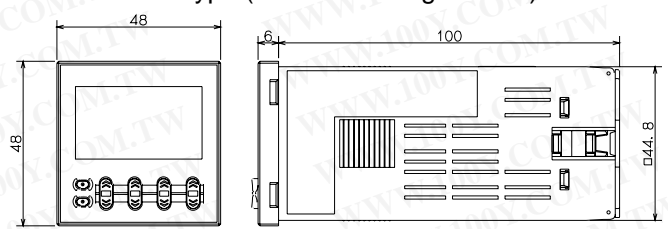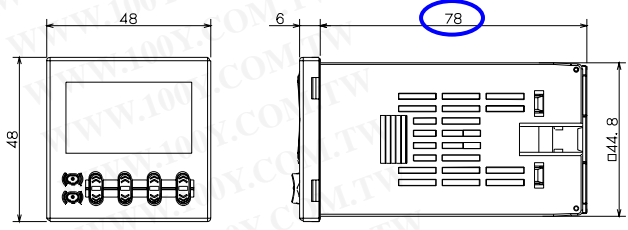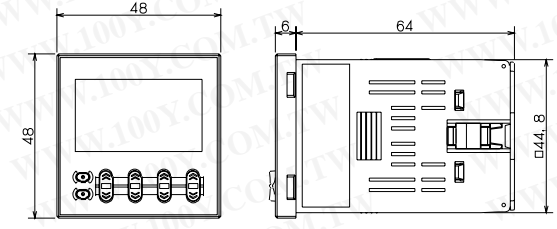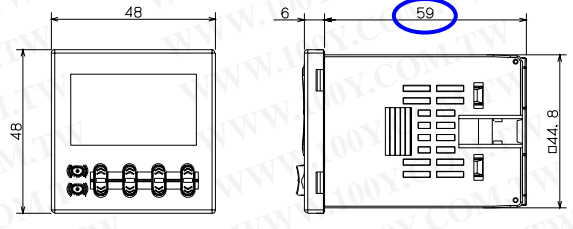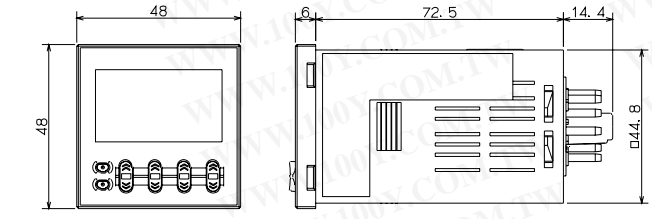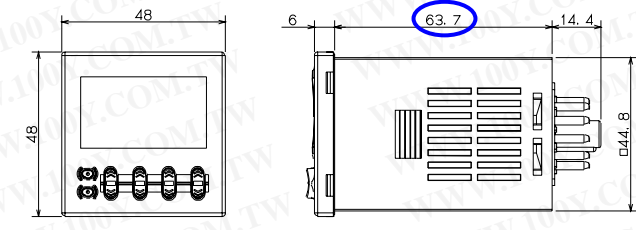
<p><b>Model to be discontinued</b>  <b>Model H7CX-A/-AS/-AW/-AWS/-AWD1/-</b>  <b>-AWS1/-A4/-A4S/-A4W</b></p>	<p><b>Recommended replacement</b>  <b>Model H7CX-A/-AS/-AW/-AWS/-AWD1/-</b>  <b>-AWS1/-A4/-A4S/-A4W -N</b></p>
<p>Terminal Block Type (Flush Mounting Models)</p> 	 <p>Depth of <b>78mm</b>.  Change of slit shape.</p>
<p><b>Model to be discontinued</b>  <b>Model H7CX-AD/-ASD/-AWS1/-A4D/-A4SD/-A4WSD</b></p>	<p><b>Recommended replacement</b>  <b>Model H7CX-AD/-ASD/-AWS1/-A4D/-A4SD/-A4WSD -N</b></p>
<p>Terminal Block Type (Flush Mounting Models)</p> 	 <p>Depth of <b>59mm</b>.  Change of slit shape.</p>
<p><b>Model to be discontinued</b>  <b>Model</b>  <b>H7CX-A11/-A11S/-A11D1/-A11SD1/-A114/-A114S/-</b>  <b>-A114D1/-R11/-R11D1</b></p>	<p><b>Recommended replacement</b>  <b>Model</b>  <b>H7CX-A11/-A11S/-A11D1/-A11SD1/-A114/-A114S/-</b>  <b>-A114D1/-R11/-R11D1 -N</b></p>
<p>Socket Type (Flush Mounting/Surface Mounting Models)</p> 	 <p>Depth of <b>63.7mm</b>.  Change of slit shape.</p>




## Mounting Dimensions

### Model to be discontinued Model H7CX-A/-AS/-AW/-AWS/-AWD1/-AWSD1/ -A4/-A4S/-A4W

Terminal Block Type (Flush Mounting Models)

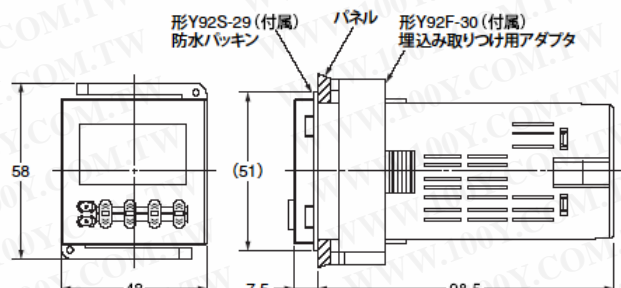


### Recommended replacement Model H7CX-A/-AS/-AW/-AWS/-AWD1/-AWSD1/ -A4/-A4S/-A4W -N

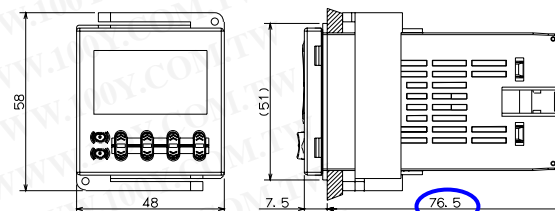


Depth of 76.5mm.

### Model to be discontinued Model H7CX-AD/-ASD/-AWSD/-A4D/-A4SD/-A4WSD

Terminal Block Type (Flush Mounting Models)

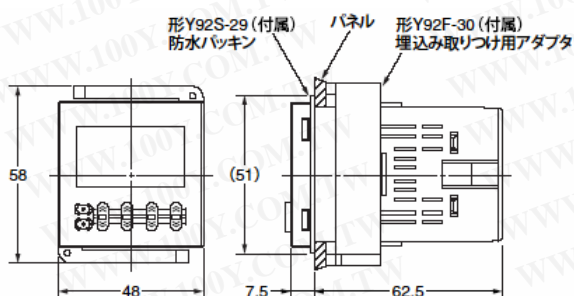


### Recommended replacement Model H7CX-AD/-ASD/-AWSD/-A4D/-A4SD/-A4WSD-N

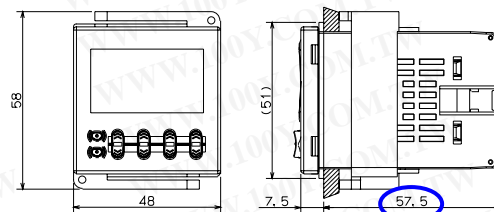


Depth of 57.5mm.

### Model to be discontinued Model H7CX-A11/-A11S/-A11D1/-A11SD1/ -A114/-A114S/-A114D1/-R11/-R11D1



Socket Type (Flush Mounting/Surface Mounting Models)

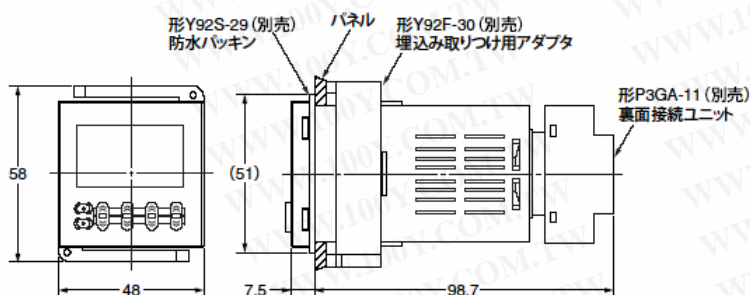

### Recommended replacement Model H7CX-A11/-A11S/-A11D1/-A11SD1/ -A114/-A114S/-A114D1/-R11/-R11D1 -N

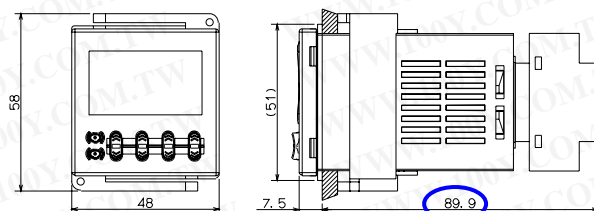

Depth of 89.9mm.

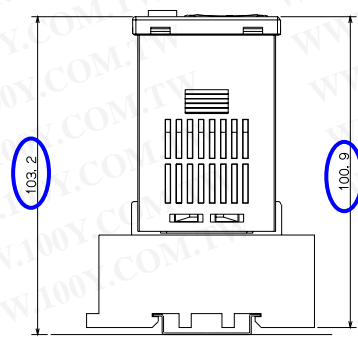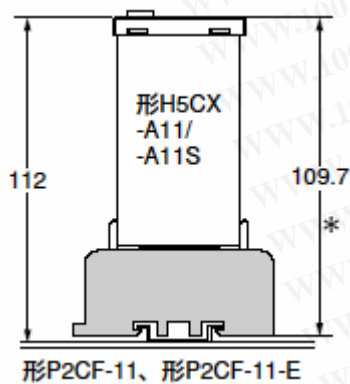







Mounting dimensions is 100.9mm and 103.2mm.



## Wiring Connections



Item	Model	Model to be discontinued Model H7CX-A (Terminal block type)	Recommended replacement Model H7CX-A -N (Terminal block type)
Recommended tightening Torque		About 0.5N·m	<b>0.74-0.90N·m</b> <b>The screw torque value is changed for UL standard recognition. The performance of the terminal block is the same as the production expected completion model.</b>
application electric wire		<b>AWG18-24</b>	<b>AWG18-22</b> <b>The application electric wire is changed for the UL standard recognition. The performance of the terminal block is the same as the production expected completion model.</b>

## Specifications

Item	Model	Model to be discontinued Model H7CX-A (Terminal block type)	Recommended replacement Model H7CX-A -N (Terminal block type)
Switching of display color of Present Value	of	Programmable of red or green.	Programmable of three colors: <b>red, green, and orange.</b>  <div> <div>&lt; 4-Digit Display &gt;</div> <div>    </div> <div> <div>&lt; 6-Digit Display &gt;</div> <div>    </div> </div> </div>

勝特力材料 886-3-5753170  
 勝特力电子(上海) 86-21-34970699  
 勝特力电子(深圳) 86-755-83298787  
[Http://www.100y.com.tw](http://www.100y.com.tw)

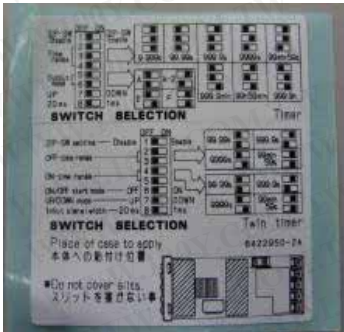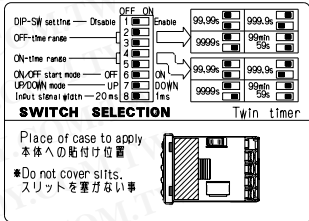

Model Item	Model to be discontinued Model H7CX-AW Series	Recommended replacement Model H7CX-AS -N Series
DIPswitch Label	<p>Enclose with the product. (accessories) Explains the setting of both Timer and Twin-timer on the sticker.</p> 	<p>Enclose with the product. (accessories) Explains the setting of Twin-timer on the sticker while the setting of Timer is printed on the product directory.</p> <p>&lt;DIP Switch label&gt;</p> 

## Operation

Model Item	Model to be discontinued	Recommended replacement
	<p>Although the setting items of function setting mode are slightly added due to new functions, the basic operation remain the same.</p>	

## Instruction Manual

Model to be discontinued Model H7CX- Series	Recommended replacement Model H7CX- -N Series
<p>Content is updated for a renewal.</p>	

勝特力材料 886-3-5753170  
 勝特力电子(上海) 86-21-34970699  
 勝特力电子(深圳) 86-755-83298787  
[Http://www.100y.com.tw](http://www.100y.com.tw)