June 2003



勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

LMV321/LMV358/LMV324 Single/Dual/Quad General Purpose, Low Voltage, Rail-to-Rail Output Operational Amplifiers

# **General Description**

The LMV358/324 are low voltage (2.7–5.5V) versions of the dual and quad commodity op amps, LM358/324, which currently operate at 5–30V. The LMV321 is the single version.

The LMV321/358/324 are the most cost effective solutions for the applications where low voltage operation, space saving and low price are needed. They offer specifications that meet or exceed the familiar LM358/324. The LMV321/358/324 have rail-to-rail output swing capability and the input common-mode voltage range includes ground. They all exhibit excellent speed-power ratio, achieving 1MHz of bandwidth and 1V/µs of slew rate with low supply current.

The LMV321 is available in space saving SC70-5, which is approximately half the size of SOT23-5. The small package saves space on pc boards, and enables the design of small portable electronic devices. It also allows the designer to place the device closer to the signal source to reduce noise pickup and increase signal integrity.

The chips are built with National's advanced submicron silicon-gate BiCMOS process. The LMV321/358/324 have bipolar input and output stages for improved noise performance and higher output current drive.

### **Features**

(For  $V^+ = 5V$  and  $V^- = 0V$ , Typical Unless Otherwise Noted)

- Guaranteed 2.7V and 5V Performance
- No Crossover Distortion

Space Saving Package
 Industrial Temp. Range
 Gain-Bandwidth Product
 SC70-5 2.0x2.1x1.0mm
 −40°C to +85°C
 1MHz

■ Low Supply Current

— LMV321
 — LMV358
 — LMV324
 130μA
 210μA
 410μA


■ Rail-to-Rail Output Swing @ 10kΩ V+ −10mV V- +65mV

 $\blacksquare$  V<sub>CM</sub> -0.2V to V<sup>+</sup>-0.8V


### **Applications**

- Active Filters
- General Purpose Low Voltage Applications
- General Purpose Portable Devices

### Gain and Phase vs. Capacitive Load

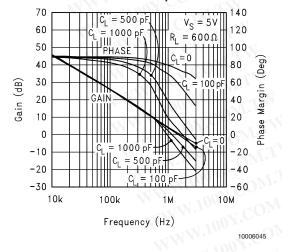

### **Output Voltage Swing vs. Supply Voltage**

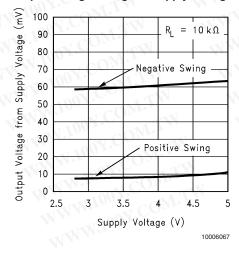

### **Absolute Maximum Ratings** (Note 1)

If Military/Aerospace specified devices are required, please contact the National Semiconductor Sales Office/ Distributors for availability and specifications.

-65°C to 150°C 150°C

**Operating Ratings** (Note 1)

Machine Model 100V

Human Body Model

2000V LMV358/324

LMV321 900V

Differential Input Voltage ± Supply Voltage Supply Voltage (V+-V -) 5.5V Output Short Circuit to V + (Note 3)

Output Short Circuit to V -Soldering Information

ESD Tolerance (Note 2)

Infrared or Convection (20 sec)

Supply Voltage 2.7V to 5.5V

Temperature Range

Storage Temp. Range

Junction Temperature(Note 5)

LMV321, LMV358, LMV324 -40°C to +85°C

Thermal Resistance (θ <sub>JA</sub>)(Note 10) 478°C/W 5-pin SC70-5 265°C/W 5-pin SOT23-5 8-Pin SOIC 190°C/W 8-Pin MSOP 235°C/W 14-Pin SOIC 145°C/W 14-Pin TSSOP 155°C/W

2.7V DC Electrical Characteristics

Unless otherwise specified, all limits guaranteed for T  $_J$  = 25°C, V<sup>+</sup> = 2.7V, V<sup>-</sup> = 0V, V<sub>CM</sub> = 1.0V, V<sub>O</sub> = V<sup>+</sup>/2 and R<sub>L</sub> > 1M $\Omega$ .

(Note 4)

235°C

Symbol	Parameter	Conditions	Typ (Note 6)	Limit (Note 7)	Units
V <sub>os</sub>	Input Offset Voltage	WWW.100Y.COM.T	1.7	NWW.100Y.COM	mV max
TCV <sub>os</sub>	Input Offset Voltage Average Drift	MAM. TOOK. COM.	5	MMM.100X.CO	μV/°C
I <sub>B</sub>	Input Bias Current	MMM.TOOX.COM	LTV11	250	nA max
l <sub>os</sub>	Input Offset Current	WWW.1007.CC	5	50	nA max
CMRR	Common Mode Rejection Ratio	$0V \le V_{CM} \le 1.7V$	63	50	dB min
PSRR	Power Supply Rejection Ratio	$2.7V \le V^+ \le 5V$ $V_O = 1V$	60	50	dB min
$V_{CM}$	Input Common-Mode Voltage Range	For CMRR≥50dB	-0.2	N O WWW.Id	V min
	WWW.100Y.COM	TW WWW.10	(1.9	1.7 WW	V
V <sub>O</sub>	Output Swing	$R_L = 10k\Omega$ to 1.35V	V+ -10	V+ -100	mV min
	WWW.1001.	OM.TW WWW	60	180 WW	mV max
I <sub>S</sub>	Supply Current	LMV321	80	OM.TW170	μA max
	MMM.100X	LMV358 Both amplifiers	140	340	μA max
	WWW.10	LMV324 All four amplifiers	260	680	μA max

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www. 100y. com. tw

### 2.7V AC Electrical Characteristics

Unless otherwise specified, all limits guaranteed for T  $_J$  = 25°C, V<sup>+</sup> = 2.7V, V<sup>-</sup> = 0V, V $_{CM}$  = 1.0V, V $_{O}$  = V<sup>+</sup>/2 and R $_{L}$  > 1M $\Omega$ .

Symbol	Parameter	Conditions	Typ (Note 6)	Limit (Note 7)	Units
GBWP	Gain-Bandwidth Product	C <sub>L</sub> = 200pF	1	Jan COM.	MHz
$\Phi_{m}$	Phase Margin	100Y. OM.TW	60	V1001.	Deg
G <sub>m</sub>	Gain Margin	W. CO. TW	10	TIME	dB
en	Input-Referred Voltage Noise	f = 1kHz	46	M. 100X.COW.TA	<u>nV</u> √Hz
i <sub>n</sub>	Input-Referred Current Noise	f = 1kHz	0.17	MM.100X.COW.	pA √Hz

### **5V DC Electrical Characteristics**

Unless otherwise specified, all limits guaranteed for T  $_J$  = 25°C, V<sup>+</sup> = 5V, V<sup>-</sup> = 0V, V $_{CM}$  = 2.0V, V $_O$  = V<sup>+</sup>/2 and R  $_L$  > 1M $\Omega$ . **Boldface** limits apply at the temperature extremes.

Symbol	Parameter	Conditions	Typ (Note 6)	Limit (Note 7)	Units
V <sub>os</sub>	Input Offset Voltage	MMM.1001.C	OM. 11.7	7	mV max
TCV <sub>os</sub>	Input Offset Voltage Average Drift	MMM.100X;	CD 5	MMM:100	μV/°C
I <sub>B</sub>	Input Bias Current	N WWW.1003	15	250 <b>500</b>	nA max
l <sub>os</sub>	Input Offset Current	TW WWW.100	V.C.5	50 <b>150</b>	nA max
CMRR	Common Mode Rejection Ratio	$0V \le V_{CM} \le 4V$	65	50	dB min
PSRR	Power Supply Rejection Ratio	$2.7V \le V^{+} \le 5V$ $V_{O} = 1V \ V_{CM} = 1V$	60	50	dB min
$V_{CM}$	Input Common-Mode Voltage Range	For CMRR≥50dB	-0.2	W.TW O	V min
	WWW.100X.	CON.TW WW	4.2	OM.TV4	V max
A <sub>V</sub>	Large Signal Voltage Gain (Note 8)	$R_L = 2k\Omega$	100	15 10	V/mV min
V <sub>O</sub>	Output Swing	$R_L = 2k\Omega$ to 2.5V	V <sup>+</sup> -40	V <sup>+</sup> -300 <b>V<sup>+</sup> -400</b>	mV min
	WWW.1	ON.COM.TW	120	300 <b>400</b>	mV max
	MMM	$R_L = 10k\Omega$ to 2.5V	V+ -10	V <sup>+</sup> -100 V <sup>+</sup> -200	mV min
	WW	W.100Y.COM.TW	65	180 <b>280</b>	mV max
lo	Output Short Circuit Current	Sourcing, V <sub>O</sub> = 0V	60	5	m min
	W	Sinking, V <sub>O</sub> = 5V	160	10	mA min
I <sub>s</sub>	Supply Current	LMV321	130	250 <b>350</b>	μA max
		LMV358 Both amplifiers	210	440 <b>615</b>	μA max
		LMV324 All four amplifiers	410	830 <b>1160</b>	μA

### 5V AC Electrical Characteristics

Unless otherwise specified, all limits guaranteed for T  $_J$  = 25°C, V<sup>+</sup> = 5V, V<sup>-</sup> = 0V, V $_{CM}$  = 2.0V, V $_{O}$  = V<sup>+</sup>/2 and R  $_L$  > 1M $\Omega$ . **Boldface** limits apply at the temperature extremes.

Symbol	Parameter	Conditions	Typ (Note 6)	Limit (Note 7)	Units
SR	Slew Rate	(Note 9)	1007	MITH	V/µs
GBWP	Gain-Bandwidth Product	C <sub>L</sub> = 200pF	1	COPY	MHz
$\Phi_{m}$	Phase Margin	COM	60	S COM.	Deg
G <sub>m</sub>	Gain Margin	Dr. ONITH	10	COMIT	dB
e <sub>n</sub> V.C	Input-Referred Voltage Noise	f = 1kHz	39	OY.COM.TW	<u>nV</u> √Hz
J <sub>n</sub>	Input-Referred Current Noise	f = 1kHz	0.21	TOOX.COM.TW	pA √Hz


- Note 1: Absolute Maximum Ratings indicate limits beyond which damage to the device may occur. Operating Ratings indicate conditions for which the device is intended to be functional, but specific performance is not guaranteed. For guaranteed specifications and the test conditions, see the Electrical Characteristics.
- **Note 2:** Human body model,  $1.5k\Omega$  in series with 100pF. Machine model,  $0\Omega$  in series with 200pF.
- Note 3: Shorting output to V+ will adversely affect reliability.
- Note 4: Shorting output to V will adversely affect reliability.
- Note 5: The maximum power dissipation is a function of  $T_{J(MAX)}$ ,  $\theta_{JA}$ , and  $T_A$ . The maximum allowable power dissipation at any ambient temperature is  $P_D$  = (T<sub>J(MAX)</sub>-T<sub>A</sub>)/θ<sub>JA</sub>. All numbers apply for packages soldered directly into a PC board.
- Note 6: Typical values represent the most likely parametric norm.
- Note 7: All limits are guaranteed by testing or statistical analysis.
- **Note 8:**  $R_L$  is connected to  $V^-$ . The output voltage is  $0.5V \le V_O \le 4.5V$ .
- Note 9: Connected as voltage follower with 3V step input. Number specified is the slower of the positive and negative slew rates.
- Note 10: All numbers are typical, and apply for packages soldered directly onto a PC board in still air.

WWW.100Y.COM.TV WWW.100Y.COM.T 勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw W.100Y.COM.TW


WWW.100Y.COM.TW

# **Typical Performance Characteristics** Unless otherwise specified, $V_S = +5V$ , single supply, $T_A = 25^{\circ}C$ .


### Supply Current vs. Supply Voltage (LMV321)

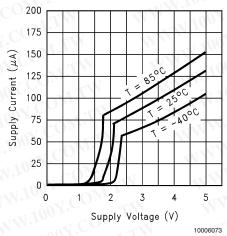


### Sourcing Current vs. Output Voltage

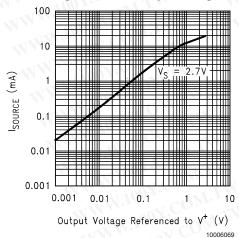


### Sinking Current vs. Output Voltage

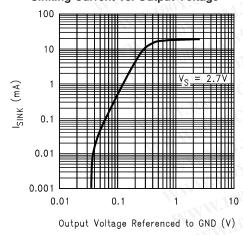


### Input Current vs. Temperature

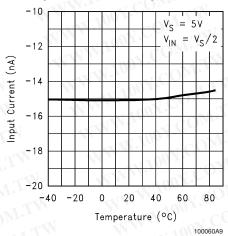

### Sourcing Current vs. Output Voltage

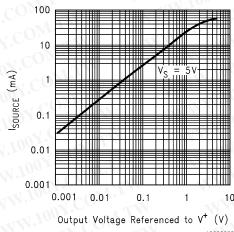

### Sinking Current vs. Output Voltage

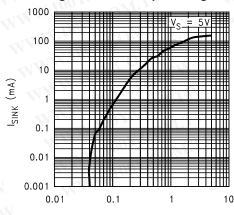


Output Voltage Referenced to GND (V)


勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

 $T_A = 25$ °C. (Continued)


### **Output Voltage Swing vs. Supply Voltage**

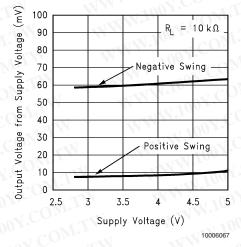


### Input Voltage Noise vs. Frequency

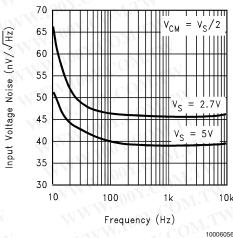


### Input Current Noise vs. Frequency

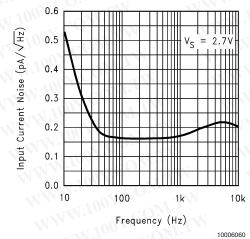


### Input Current Noise vs. Frequency

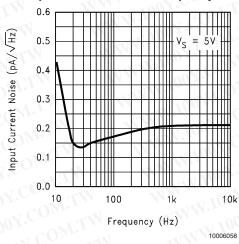

### Crosstalk Rejection vs. Frequency

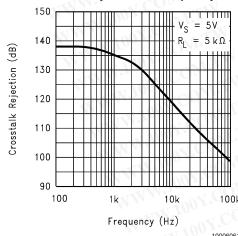

### PSRR vs. Frequency

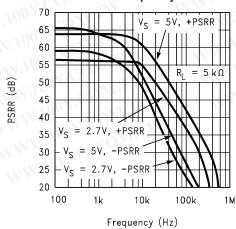


1000605


勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw


 $T_A = 25$ °C. (Continued)



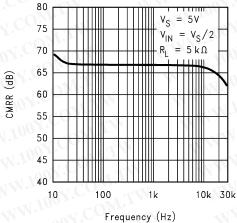


### CMRR vs. Input Common Mode Voltage

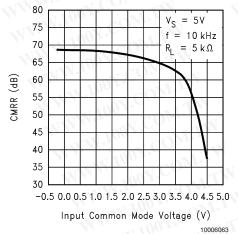


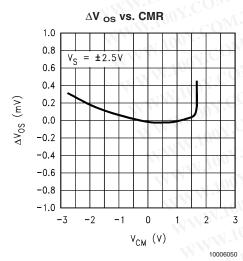


### **CMRR vs. Input Common Mode Voltage**

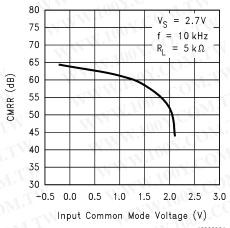

10006064

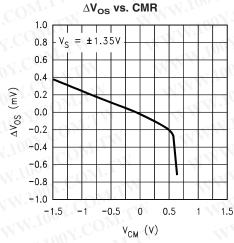

### Input Voltage vs. Output Voltage

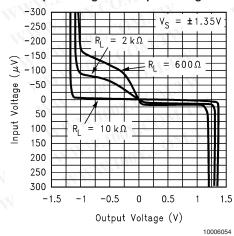


勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787

Http://www. 100y. com. tw


7

 $T_A = 25$ °C. (Continued)


### Input Voltage vs. Output Voltage

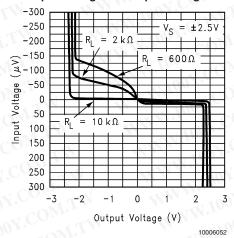


### **Open Loop Frequency Response**

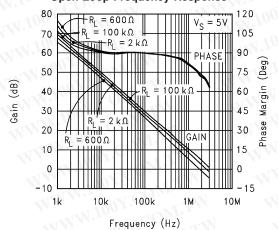


### Gain and Phase vs. Capacitive Load

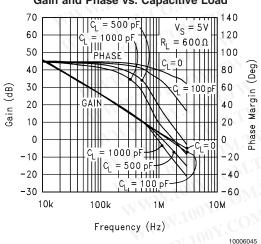


### **Open Loop Frequency Response**

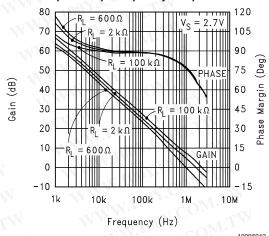

### Open Loop Frequency Response vs. Temperature

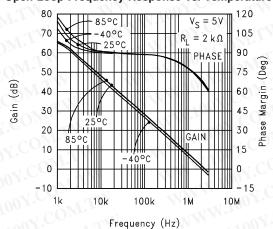

### Gain and Phase vs. Capacitive Load

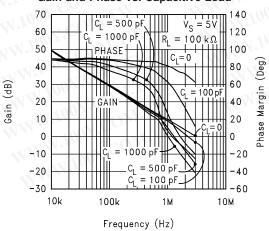


10006044

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787


Http://www.100y.com.tw

 $T_A = 25$ °C. (Continued)

### Slew Rate vs. Supply Voltage

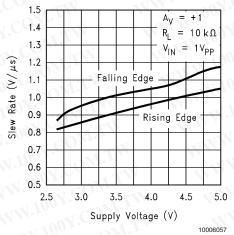


### Non-Inverting Large Signal Pulse Response

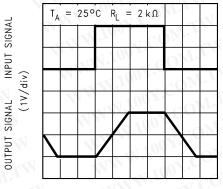

TIME  $(1 \mu s/div)$ 


10006088

### Non-Inverting Large Signal Pulse Response

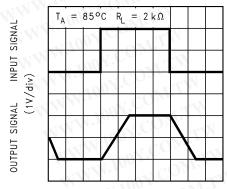

TIME (1  $\mu$ s/div) 100060A1


### Non-Inverting Large Signal Pulse Response

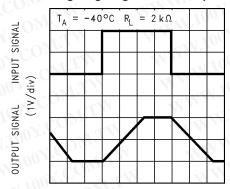

TIME (1  $\mu$ s/div)


100060A0

### Non-Inverting Small Signal Pulse Response

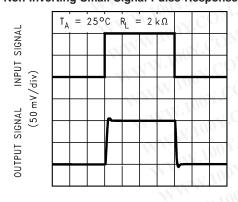

TIME (1  $\mu$ s/div)

### Non-Inverting Small Signal Pulse Response

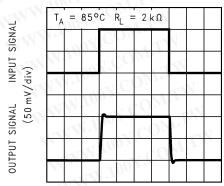

TIME  $(1 \mu s/div)$ 


100060A2

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

9


 $T_A = 25$ °C. (Continued)

### Non-Inverting Small Signal Pulse Response

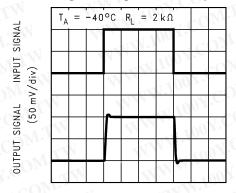


TIME  $(1 \mu s/div)$ 

### **Inverting Large Signal Pulse Response**

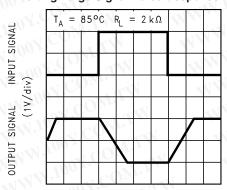


TIME  $(1 \mu s/div)$ 

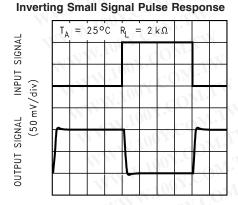

TIME (1  $\mu$ s/div)


100060A4

### **Inverting Large Signal Pulse Response**

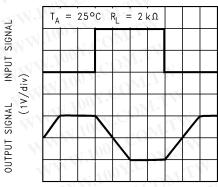


TIME (1 µs/div)

### **Inverting Large Signal Pulse Response**

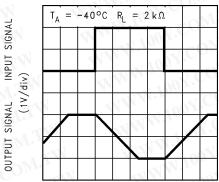

TIME (1  $\mu$ s/div)

100060A5

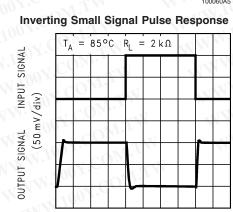

TIME  $(1 \mu s/div)$ 


100060A6

特力材料886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787

Http://www.100y.com.tw


 $T_A = 25$ °C. (Continued)

### **Inverting Small Signal Pulse Response**

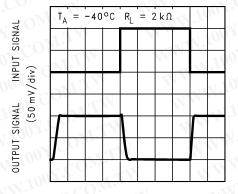


TIME (1  $\mu$ s/div)


### Stability vs. Capacitive Load

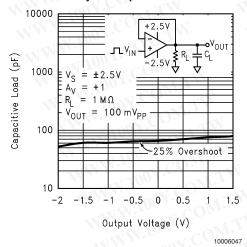


Stability vs. Capacitive Load

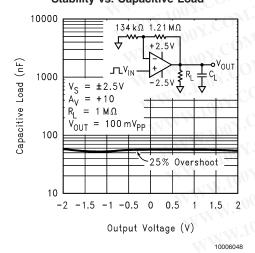

### Stability vs. Capacitive Load

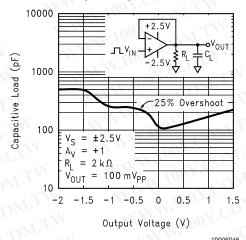


### Stability vs. Capacitive Load

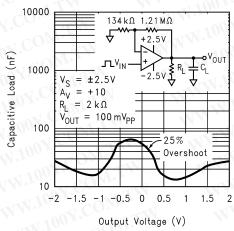

10006049

### THD vs. Frequency

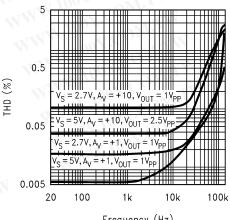


Frequency (Hz)

10006059


特力材料886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

 $T_A = 25$ °C. (Continued)

### Open Loop Output Impedance vs. Frequency

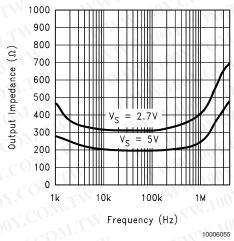


### Short Circuit Current vs. Temperature (Sourcing)

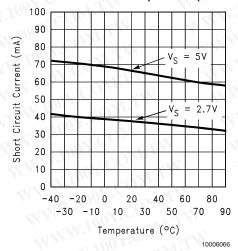

WWW.100Y.COM.

WWW.100Y.CO

### Short Circuit Current vs. Temperature (Sinking)

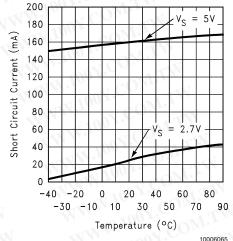

10006065

WWW.100Y.COM.T 特力材料886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www. 100y. com. tw

### **Application Notes**

### 1.0 BENEFITS OF THE LMV321/358/324

Size: The small footprints of the LMV321/358/324 packages save space on printed circuit boards, and enable the design of smaller electronic products, such as cellular phones, pagers, or other portable systems. The low profile of the LMV321/358/324 make them possible to use in PCMCIA type III cards.

### Signal Integrity

Signals can pick up noise between the signal source and the amplifier. By using a physically smaller amplifier package, the LMV321/358/324 can be placed closer to the signal source, reducing noise pickup and increasing signal integrity.

### Simplified Board Layout

These products help you to avoid using long pc traces in your pc board layout. This means that no additional components, such as capacitors and resistors, are needed to filter out the unwanted signals due to the interference between the long pc traces.

### **Low Supply Current**

These devices will help you to maximize battery life. They are ideal for battery powered systems.

### **Low Supply Voltage**

National provides guaranteed performance at 2.7V and 5V. These guarantees ensure operation throughout the battery lifetime.

### Rail-to-Rail Output

Rail-to-rail output swing provides maximum possible dynamic range at the output. This is particularly important when operating on low supply voltages.

### Input Includes Ground

Allows direct sensing near GND in single supply operation.

The differential input voltage may be larger than V+ without damaging the device. Protection should be provided to prevent the input voltages from going negative more than -0.3V (at 25°C). An input clamp diode with a resistor to the IC input terminal can be used.

### **Ease Of Use & Crossover Distortion**

The LMV321/358/324 offer specifications similar to the familiar LM324. In addition, the new LMV321/358/324 effectively eliminate the output crossover distortion. The scope photos in Figure 1 and Figure 2 compare the output swing of the LMV324 and the LM324 in a voltage follower configuration, with V  $_{\rm S}$ =  $\pm$  2.5V and R $_{\rm L}$  (= 2k $\Omega$ ) connected to GND. It is apparent that the crossover distortion has been eliminated in the new LMV324.

> 特力材料886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www. 100y. com. tw

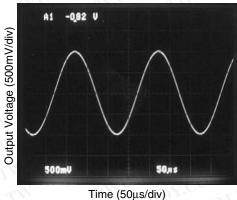


FIGURE 1. Output Swing of LMV324

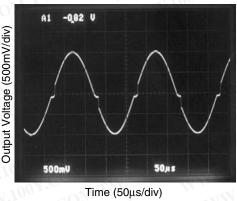


FIGURE 2. Output Swing of LM324

### 2.0 CAPACITIVE LOAD TOLERANCE

The LMV321/358/324 can directly drive 200pF in unity-gain without oscillation. The unity-gain follower is the most sensitive configuration to capacitive loading. Direct capacitive loading reduces the phase margin of amplifiers. The combination of the amplifier's output impedance and the capacitive load induces phase lag. This results in either an underdamped pulse response or oscillation. To drive a heavier capacitive load, circuit in Figure 3 can be used.

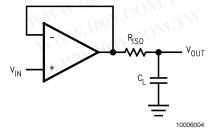


FIGURE 3. Indirectly Driving A Capacitive Load Using **Resistive Isolation** 

In Figure 3, the isolation resistor  $R_{\rm ISO}$  and the load capacitor  $C_L$  form a pole to increase stability by adding more phase margin to the overall system. The desired performance depends on the value of  $R_{\rm ISO}$ . The bigger the  $R_{\rm ISO}$  resistor value, the more stable  $V_{\rm OUT}$  will be. Figure 4 is an output waveform of Figure 3 using 620 $\Omega$  for  $R_{\rm ISO}$  and 510pF for  $C_L$ .

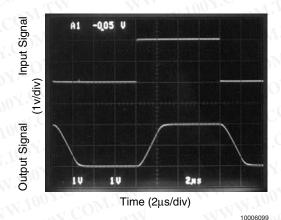


FIGURE 4. Pulse Response of the LMV324 Circuit in Figure 3

The circuit in Figure 5 is an improvement to the one in Figure 3 because it provides DC accuracy as well as AC stability. If there were a load resistor in Figure 3, the output would be voltage divided by  $R_{\rm ISO}$  and the load resistor. Instead, in Figure 5,  $R_{\rm F}$  provides the DC accuracy by using feed-forward techniques to connect  $V_{\rm IN}$  to  $R_{\rm L}$ . Caution is needed in choosing the value of  $R_{\rm F}$  due to the input bias current of the LMV321/358/324.  $C_{\rm F}$  and  $R_{\rm ISO}$  serve to counteract the loss of phase margin by feeding the high frequency component of the output signal back to the amplifier's inverting input, thereby preserving phase margin in the overall feedback loop. Increased capacitive drive is possible by increasing the value of C  $_{\rm F}$ . This in turn will slow down the pulse response.

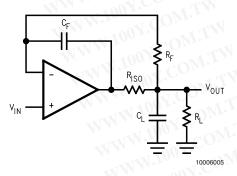


FIGURE 5. Indirectly Driving A Capacitive Load with DC Accuracy

### 3.0 INPUT BIAS CURRENT CANCELLATION

The LMV321/358/324 family has a bipolar input stage. The typical input bias current of LMV321/358/324 is 15nA with 5V supply. Thus a  $100k\Omega$  input resistor will cause 1.5mV of error voltage. By balancing the resistor values at both inverting and non-inverting inputs, the error caused by the amplifier's

input bias current will be reduced. The circuit in *Figure 6* shows how to cancel the error caused by input bias current.


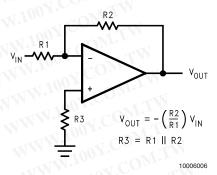


FIGURE 6. Cancelling the Error Caused by Input Bias
Current

### 4.0 TYPICAL SINGLE-SUPPLY APPLICATION CIRCUITS

### 4.1 Difference Amplifier

The difference amplifier allows the subtraction of two voltages or, as a special case, the cancellation of a signal common to two inputs. It is useful as a computational amplifier, in making a differential to single-ended conversion or in rejecting a common mode signal.

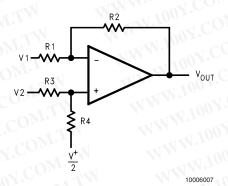

 $\begin{aligned} & V_{OUT} = \left(\frac{R1 + R2}{R3 + R4}\right) \frac{R4}{R1} V_2 - \frac{R2}{R1} V_1 + \left(\frac{R1 + R2}{R3 + R4}\right) \frac{R3}{R1} \cdot \frac{V^+}{2} \\ & \text{for R1} = R3 \text{ and } R2 = R4 \\ & V_{OUT} = \frac{R2}{R1} \left(V_2 - V_1\right) + \frac{V^+}{2} \end{aligned}$ 

FIGURE 7. Difference Amplifier

### 4.2 Instrumentation Circuits

The input impedance of the previous difference amplifier is set by the resistors  $R_1$ ,  $R_2$ ,  $R_3$ , and  $R_4$ . To eliminate the problems of low input impedance, one way is to use a voltage follower ahead of each input as shown in the following two instrumentation amplifiers.

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

### 4.2.1 Three-Op-Amp Instrumentation Amplifier

The quad LMV324 can be used to build a three-op-amp instrumentation amplifier as shown in Figure 8.


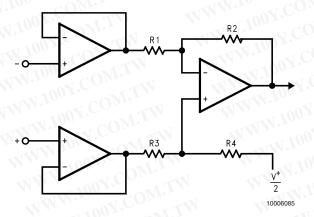


FIGURE 8. Three-op-amp Instrumentation Amplifier

The first stage of this instrumentation amplifier is a differential-input, differential-output amplifier, with two voltage followers. These two voltage followers assure that the input impedance is over 100 M $\Omega$ . The gain of this instrumentation amplifier is set by the ratio of R2/R1. R $_3$  should equal R $_1$ , and R $_4$  equal R $_2$ . Matching of R $_3$  to R $_1$  and R $_4$  to R $_2$  affects the CMRR. For good CMRR over temperature, low drift resistors should be used. Making R $_4$  slightly smaller than R $_2$  and adding a trim pot equal to twice the difference between R $_2$  and R $_4$  will allow the CMRR to be adjusted for optimum.

### 4.2.2 Two-op-amp Instrumentation Amplifier

A two-op-amp instrumentation amplifier can also be used to make a high-input-impedance dc differential amplifier ( $Figure\ 9$ ). As in the three-op-amp circuit, this instrumentation amplifier requires precise resistor matching for good CMRR.  $R_4$  should equal to  $R_1$  and  $R_3$  should equal  $R_2$ .

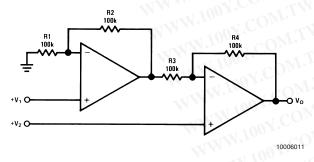

 $V_0 = \left(1 + \frac{R4}{R3}\right) \left(V_2 - V_1\right)$ , where R1 = R4 and R2 = R3 As shown:  $V_0 = 2\left(V_2 - V_1\right)$ 

FIGURE 9. Two-Op-amp Instrumentation Amplifier

### 4.3 Single-Supply Inverting Amplifier

There may be cases where the input signal going into the amplifier is negative. Because the amplifier is operating in single supply voltage, a voltage divider using  $R_3$  and  $R_4$  is implemented to bias the amplifier so the input signal is within the input common-mode voltage range of the amplifier. The capacitor  $C_1$  is placed between the inverting input and resistor  $R_1$  to block the DC signal going into the AC signal source,  $V_{\text{IN}}$ . The values of  $R_1$  and  $C_1$  affect the cutoff frequency, fc =  $1/2\pi R_1 C_1$ .

As a result, the output signal is centered around mid-supply (if the voltage divider provides V<sup>+</sup>/2 at the non-inverting input). The output can swing to both rails, maximizing the signal-to-noise ratio in a low voltage system.

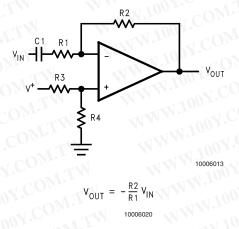



FIGURE 10. Single-Supply Inverting Amplifier

### **4.4 ACTIVE FILTER**

### 4.4.1 Simple Low-Pass Active Filter

The simple low-pass filter is shown in Figure 11. Its low-frequency gain  $(\omega \to 0)$  is defined by  $\text{-R}_3/\text{R}_1.$  This allows low-frequency gains other than unity to be obtained. The filter has a -20dB/decade roll-off after its corner frequency fc.  $\text{R}_2$  should be chosen equal to the parallel combination of  $\text{R}_1$  and  $\text{R}_3$  to minimize errors due to bias current. The frequency response of the filter is shown in Figure 12.

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

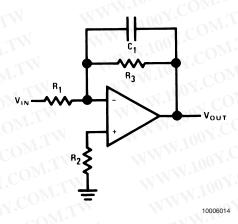

 $A_{L} = -\frac{R_{3}}{R_{1}}$   $f_{c} = \frac{1}{2\pi R_{3}C_{1}}$   $R_{2} = R_{1} || R_{3}$ 

FIGURE 11. Simple Low-Pass Active Filter

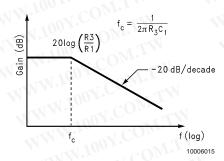


FIGURE 12. Frequency Response of Simple Low-Pass
Active Filter in Figure 11

Note that the single-op-amp active filters are used in to the applications that require low quality factor,  $Q(\le 10)$ , low frequency ( $\le 5$  kHz), and low gain ( $\le 10$ ), or a small value for the product of gain times  $Q(\le 100)$ . The op amp should have an open loop voltage gain at the highest frequency of interest at least 50 times larger than the gain of the filter at this frequency. In addition, the selected op amp should have a slew rate that meets the following requirement:

Slew Rate  $\geq$  0.5 x ( $\omega$ <sub>H</sub>V<sub>OPP</sub>) x 10<sup>-6</sup> V/ $\mu$ sec where  $\omega$ <sub>H</sub> is the highest frequency of interest, and V<sub>opp</sub> is the output peak-to-peak voltage.

### 4.4.2 Sallen-Key 2nd-Order Active Low-Pass Filter

The Sallen-Key 2nd-order active low-pass filter is illustrated in *Figure 13*. The dc gain of the filter is expressed as

$$A_{LP} = \frac{R_3}{R_4} + 1 \tag{1}$$

Its transfer function is

$$\frac{V_{\text{OUT}}}{V_{\text{IN}}}(S) = \frac{\frac{1}{C_1 C_2 R_1 R_2} A_{\text{LP}}}{S^2 + S\left(\frac{1}{C_1 R_1} + \frac{1}{C_1 R_2} + \frac{1}{C_2 R_2} - \frac{A_{\text{LP}}}{C_2 R_2}\right) + \frac{1}{C_1 C_2 R_1 R_2}}$$
(2)

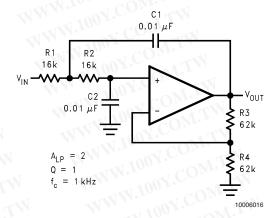


FIGURE 13. Sallen-Key 2nd-Order Active Low-Pass Filter

The following paragraphs explain how to select values for  $R_1$ ,  $R_2$ ,  $R_3$ ,  $R_4$ ,  $C_1$ , and  $C_2$  for given filter requirements, such as  $A_{LP}$ , Q, and  $f_c$ .

The standard form for a 2nd-order low pass filter is

$$\frac{V_{\text{OUT}}}{V_{\text{IN}}}(S) = \frac{A_{\text{LP}} \omega_{\text{c}}^2}{S^2 + \left(\frac{\omega_{\text{c}}}{Q}\right) S + \omega_{\text{c}}^2}$$
(3)

where

Q: Pole Quality Factor

ω<sub>C</sub>: Corner Frequency

Comparison between the Equation (2) and Equation (3) yields

$$\omega_{c}^{2} = \frac{1}{C_{1} C_{2} R_{1} R_{2}}$$
 (4)

$$\frac{\omega_{c}}{Q} = \frac{1}{C_{1} R_{1}} + \frac{1}{C_{1} R_{2}} + \frac{1}{C_{2} R_{2}} - \frac{A_{LP}}{C_{2} R_{2}}$$
(5)

To reduce the required calculations in filter design, it is convenient to introduce normalization into the components and design parameters. To normalize, let  $\omega_C=\omega_n=1 \text{rad/s},$  and  $C_1=C_2=C_n=1 \text{F},$  and substitute these values into Equation (4) and Equation (5). From Equation (4), we obtain

$$R_1 = \frac{1}{R_2} \tag{6}$$

From Equation (5), we obtain

$$R_2 = \frac{1 \pm \sqrt{1 - 4Q^2(2 - A_{LP})}}{2Q}$$
 (7)

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787

For minimum dc offset,  $V^+ = V^-$ , the resistor values at both inverting and non-inverting inputs should be equal, which means

$$R_1 + R_2 = \frac{R_3 R_4}{R_3 + R_4}$$
 (8)

From Equation (1) and Equation (8), we obtain

$$R_3 = (R_1 + R_2)A_{LP} \tag{9}$$

$$R_{4} = \left(\frac{A_{LP}}{A_{LP}-1}\right) (R_{1} + R_{2})$$
(10)

The values of C1 and C2 are normally close to or equal to

$$C = \frac{10}{f_C} \mu F$$

As a design example:

Require:  $A_{LP} = 2$ , Q = 1, fc = 1KHz

Start by selecting  $C_1$  and  $C_2$ . Choose a standard value that is close to

$$C = \frac{10}{f_c} \mu F$$

$$C_1 = C_2 = \frac{10}{1 \times 10^3} \, \mu F = 0.01 \, \mu F$$

From Equations (6), (7), (9), (10),

$$R_1 = 1\Omega$$

B<sub>0</sub>= 10

D 46

 $R_4 = 4\Omega$ 

The above resistor values are normalized values with  $\omega_n=1 \, \text{rad/s}$  and  $C_1=C_2=C_n=1 \, \text{F}.$  To scale the normalized cut-off frequency and resistances to the real values, two scaling factors are introduced, frequency scaling factor  $(k_f)$  and impedance scaling factor  $(k_m).$ 

$$k_{f} = \frac{\omega_{c}}{\omega_{n}} = \frac{2\pi \times 1 \times 10^{3}}{1} = 2\pi \times 10^{3}$$

$$k_{m}k_{f} = \frac{Cn}{C1}$$

$$k_{m} = 1.59 \times 10^{4}$$

Scaled values:

$$R_2=R_1=15.9~k\Omega$$

 $\mathsf{R}_3 = \mathsf{R}_4 = 63.6 \; \mathsf{k}\Omega$ 

$$C_1 = C_2 = 0.01 \ \mu F$$

An adjustment to the scaling may be made in order to have realistic values for resistors and capacitors. The actual value used for each component is shown in the circuit.

### 4.4.3 2nd-order High Pass Filter

A 2nd-order high pass filter can be built by simply interchanging those frequency selective components (R $_1$ , R $_2$ , C $_1$ , C $_2$ ) in the Sallen-Key 2nd-order active low pass filter. As shown in *Figure 14*, resistors become capacitors, and capacitors become resistors. The resulted high pass filter has the same corner frequency and the same maximum gain as the previous 2nd-order low pass filter if the same components are chosen.

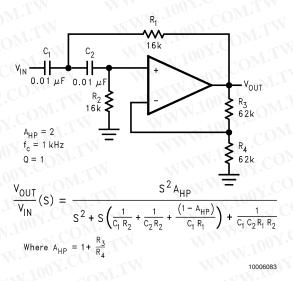


FIGURE 14. Sallen-Key 2nd-Order Active High-Pass Filter

### 4.4.4 State Variable Filter

A state variable filter requires three op amps. One convenient way to build state variable filters is with a quad op amp, such as the LMV324 (*Figure 15*).

This circuit can simultaneously represent a low-pass filter, high-pass filter, and bandpass filter at three different outputs. The equations for these functions are listed below. It is also called "Bi-Quad" active filter as it can produce a transfer function which is quadratic in both numerator and denominator.

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

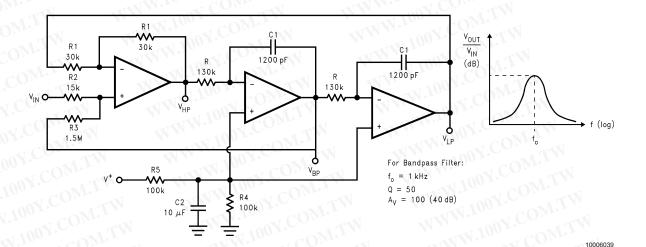


FIGURE 15. State Variable Active Filter

$$V_{LP} = \left(\frac{2R_3}{R_2 + R_3}\right) \frac{\frac{1}{R^2C^2}}{S^2 + \frac{1}{\left(\frac{R_2 + R_3}{2R_2}\right)RC}S + \frac{1}{R^2C^2}} V_{IN}$$

$$V_{HP} = \left(\frac{2R_3}{R_2 + R_3}\right) \frac{S^2}{S^2 + \frac{1}{\left(\frac{R_2 + R_3}{2R_2}\right)RC}S + \frac{1}{R^2C^2}} V_{IN}$$

$$V_{BP} = \left(\frac{2R_3}{R_2 + R_3}\right) \frac{\left(\frac{1}{RC}\right)S}{S^2 + \frac{1}{\left(\frac{R_2 + R_3}{2R_2}\right)RC}S + \frac{1}{R^2C^2}} V_{IN}$$

where for all three filters,

$$Q = \frac{R_2 + R_3}{2R_2}$$
 (11)

$$\omega_0 = \frac{1}{RC}$$
 (resonant frequency)

A design example for a bandpass filter is shown below:

Assume the system design requires a bandpass filter with f  $_{\rm O}$  = 1kHz and Q = 50. What needs to be calculated are capacitor and resistor values.

First choose convenient values for C<sub>1</sub>, R<sub>1</sub> and R<sub>2</sub>:

$$C_1 = 1200pF$$
  
 $2R_2 = R_1 = 30k\Omega$ 

Then from Equation (11),

$$R_3 = R_2(2Q-1)$$
  
 $R_3 = 15 k\Omega \times (2 \times 50-1)$   
= 1.5 M $\Omega$ 

From Equation (12),

$$R = \frac{1}{\omega_0 C_1}$$

$$R = \frac{1}{(2\pi x 10^3)(1.2 x 10^{-9})}$$

$$= 132.7 \text{ k}\Omega$$

From the above calculated values, the midband gain is H  $_0$  = R $_3$ /R $_2$  = 100 (40dB). The nearest 5% standard values have been added to *Figure 15*.

### 4.5 PULSE GENERATORS AND OSCILLATORS

A pulse generator is shown in *Figure 16*. Two diodes have been used to separate the charge and discharge paths to capacitor C.

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787

Http://www.100y.com.tw

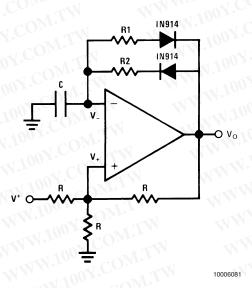


FIGURE 16. Pulse Generator

When the output voltage  $V_O$  is first at its high,  $V_{OH}$ , the capacitor C is charged toward  $V_{OH}$  through  $R_2$ . The voltage across C rises exponentially with a time constant  $\tau = R_2C$ , and this voltage is applied to the inverting input of the op amp. Meanwhile, the voltage at the non-inverting input is set at the positive threshold voltage  $(V_{TH+})$  of the generator. The capacitor voltage continually increases until it reaches  $V_{TH+}$ , at which point the output of the generator will switch to its low,  $V_{OL}$  (= 0V in this case). The voltage at the non-inverting input is switched to the negative threshold voltage  $(V_{TH-})$  of the generator. The capacitor then starts to discharge toward  $V_{OL}$  exponentially through  $R_1$ , with a time constant  $\tau = R_1C$ . When the capacitor voltage reaches  $V_{TH-}$ , the output of the pulse generator switches to  $V_{OH}$ . The capacitor starts to charge, and the cycle repeats itself.

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

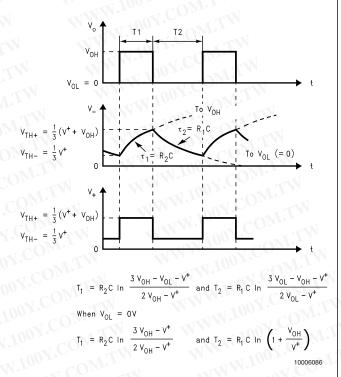


FIGURE 17. Waveforms of the Circuit in Figure 16

As shown in the waveforms in Figure 17, the pulse width  $(T_1)$  is set by  $R_2$ , C and  $V_{OH}$ , and the time between pulses  $(T_2)$  is set by  $R_1$ , C and  $V_{OL}$ . This pulse generator can be made to have different frequencies and pulse width by selecting different capacitor value and resistor values.

Figure 18 shows another pulse generator, with separate charge and discharge paths. The capacitor is charged through  $R_1$  and is discharged through  $R_2$ .

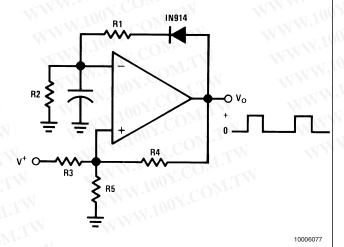


FIGURE 18. Pulse Generator

Figure 19 is a squarewave generator with the same path for charging and discharging the capacitor.

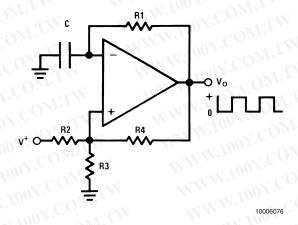


FIGURE 19. Squarewave Generator

### **4.6 CURRENT SOURCE AND SINK**


The LMV321/358/324 can be used in feedback loops which regulate the current in external PNP transistors to provide current sources or in external NPN transistors to provide current sinks.

### 4.6.1 Fixed Current Source

A multiple fixed current source is show in *Figure 20*. A voltage ( $V_{REF} = 2V$ ) is established across resistor  $R_3$  by the voltage divider ( $R_3$  and  $R_4$ ). Negative feedback is used to cause the voltage drop across  $R_1$  to be equal to  $V_{REF}$ . This controls the emitter current of transistor  $Q_1$  and if we neglect the base current of  $Q_1$  and  $Q_2$ , essentially this same current is available out of the collector of  $Q_1$ .

Large input resistors can be used to reduce current loss and a Darlington connection can be used to reduce errors due to the  $\beta$  of Q<sub>1</sub>.

The resistor,  $R_2$ , can be used to scale the collector current of  $Q_2$  either above or below the 1mA reference value.

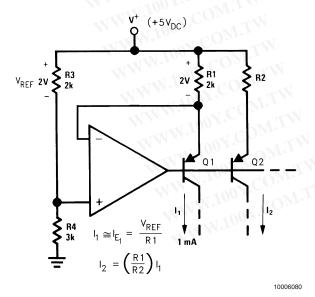

**FIGURE 20. Fixed Current Source** 

### 4.6.2 High Compliance Current Sink

A current sink circuit is shown in *Figure 21*. The circuit requires only one resistor ( $R_{\rm E}$ ) and supplies an output current which is directly proportional to this resistor value.

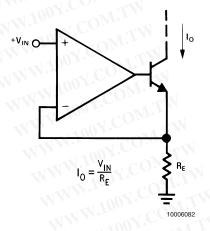


FIGURE 21. High Compliance Current Sink

### **4.7 POWER AMPLIFIER**

A power amplifier is illustrated in *Figure 22*. This circuit can provide a higher output current because a transistor follower is added to the output of the op amp.

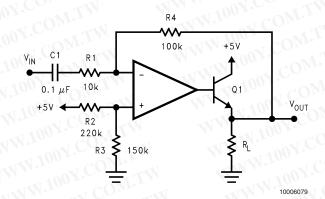


FIGURE 22. Power Amplifier

### 4.8 LED DRIVER

The LMV321/358/324 can be used to drive an LED as shown in *Figure 23*.

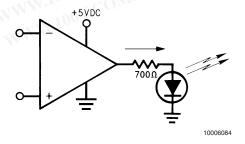


FIGURE 23. LED Driver

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

### **4.9 COMPARATOR WITH HYSTERESIS**

The LMV321/358/324 can be used as a low power comparator. *Figure 24* shows a comparator with hysteresis. The hysteresis is determined by the ratio of the two resistors.

$$\begin{split} V_{TH+} &= V_{REF}/(1+R_1/R_2) + V_{OH}/(1+R_2/R_1) \\ V_{TH-} &= V_{REF}/(1+R_1/R_2) + V_{OL}/(1+R_2/R_1) \\ V_{H} &= (V_{OH-}V_{OL})/(1+R_2/R_1) \end{split}$$

where

 $V_{TH+}$ : Positive Threshold Voltage  $V_{TH-}$ : Negative Threshold Voltage  $V_{OH}$ : Output Voltage at High

 $V_{OL}$ : Output Voltage at Low  $V_{H}$ : Hysteresis Voltage

Since LMV321/358/324 have rail-to-rail output, the ( $V_{OH-}V_{OL}$ ) equals to  $V_{S}$ , which is the supply voltage.

$$V_H = V_S/(1+R_2/R_1)$$

The differential voltage at the input of the op amp should not exceed the specified absolute maximum ratings. For real comparators that are much faster, we recommend you to use National's LMV331/393/339, which are single, dual and quad general purpose comparators for low voltage operation.



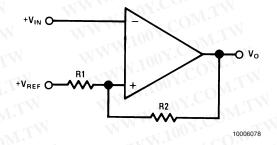



FIGURE 24. Comparator with Hysteresis

### **Connection Diagrams**

### 5-Pin SC70-5/SOT23-5



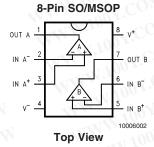

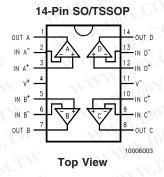


### **Ordering Information**

	Temperature Range	WW WW	TIMOY.CO MITH	1/1/1
Package	Industrial -40°C to +85°C	Packaging Marking	Transport Media	NSC Drawing
5-Pin SC70-5	LMV321M7	A12	1k Units Tape and Reel	MAA05
	LMV321M7X	A12	3k Units Tape and Reel	MM
5-Pin SOT23-5	LMV321M5	A13	1k Units Tape and Reel	MA05B
	LMV321M5X	A13	3k Units Tape and Reel	
8-Pin Small Outline	LMV358M	LMV358M	Rails	M08A
	LMV358MX	LMV358M	2.5k Units Tape and Reel	IVIUOA
8-Pin MSOP	LMV358MM	LMV358	1k Units Tape and Reel	MILLAGOA
	LMV358MMX	LMV358	3.5k Units Tape and Reel	MUA08A
14-Pin Small Outline	LMV324M	LMV324M	Rails	N44 4 A
	LMV324MX	LMV324M	2.5k Units Tape and Reel	M14A
14-Pin TSSOP	LMV324MT	LMV324MT	Rails	MTC14
	LMV324MTX	LMV324MT	2.5k Units Tape and Reel	MTC14

勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787

Http://www. 100y. com. tw


### SC70-5 Tape and Reel **Specification**

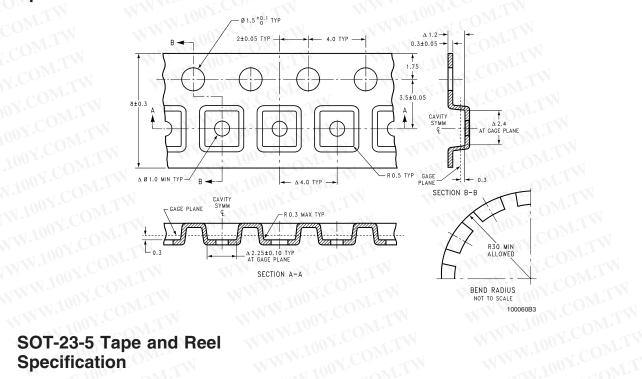

# SOT-23-5 Tape and Reel **Specification** TAPE FORMAT

ion			
Tape Section	# Cavities	Cavity Status	Cover Tape Status
Leader	0 (min)	Empty	Sealed
(Start End)	75 (min)	Empty	Sealed
Carrier	3000	Filled	Sealed
	250	Filled	Sealed
Trailer	125 (min)	Empty	Sealed
(Hub End)	0 (min)	Empty	Sealed

# TAPE DIMENSIONS

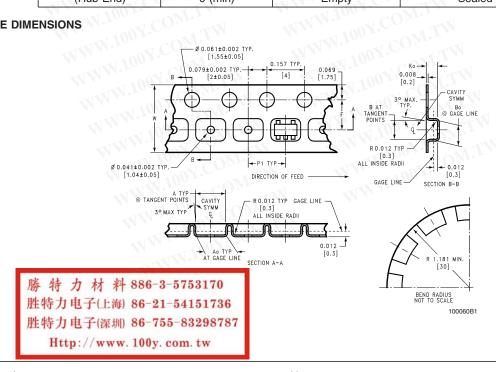

OOY.CO

WWW.1007

.COM.TW

WWW.100 Y.COM.TW

WW

WWW.110Y.COM.TW

WWW. OOY.COM.TV

WWW.100Y.COM.T

MMM.100X.COM.

W.100Y.COM

# WW.190Y.COM.TW SOT-23-5 Tape and Reel Specification (Continued)

WWW.100Y.COM.TW

WWW.100Y.Co


WWW.100Y.COM.TV

100Y.COM.TW

OT-23-5	Tape a	and Re	el Spe	ecificat	ion (Continued	(H) (H) (H)	COM'	TW
8 mm	0.130	0.124	0.130	0.126	0.138 ±0.002 (3.5 ±0.05)	0.055 ±0.004 (1.4 ±0.11)	0.157 (4)	0.315 ±0.012 (8 ±0.3)
Tape Size	DIM A	DIM Ao	DIM B	DIM Bo	DIM F	DIM Ko	DIM P1	DIM W

100Y.COM.TW

### **REEL DIMENSIONS**

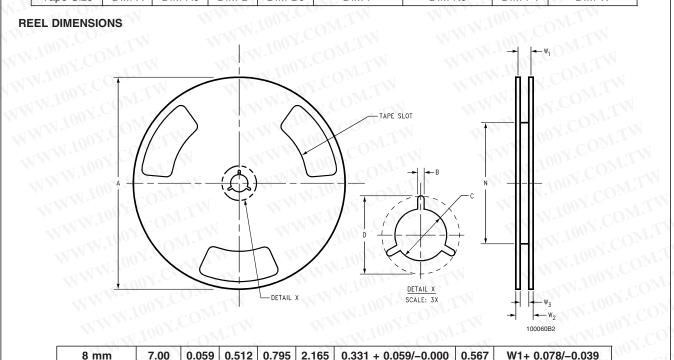

8 mm	7.00 330.00	0.059 1.50	Maria	-4	2.165 55.00	0.331 + 0.059/-0.000 8.40 + 1.50/-0.00	0.567 14.40	W1+ 0.078/-0.03 W1 + 2.00/-1.00
ape Size	Α	В	С	-D	N	W1 CO	W2	W3


WWW.100Y.COM.TW WWW.100Y.COM.TW 勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw WWW.100Y.COM.TW

WWW.100Y.COM.TW


100Y.COM.TW

WWW.100Y.

# Physical Dimensions inches (millimeters) unless otherwise noted SYMM (0.65) 1.8-2.4 1.8-2.1 1.8-2.4 1.8-2.




5-Pin SC70-5 NS Package Number MAA05A

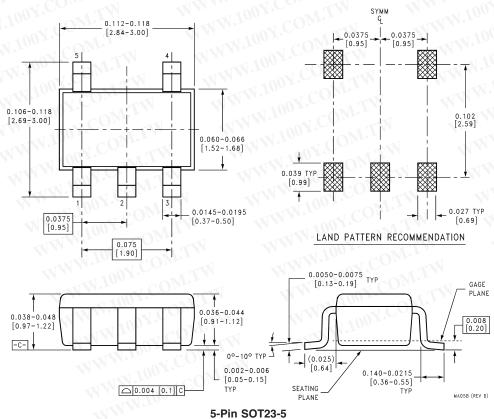


NS Package Number MA05B


勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

### Physical Dimensions inches (millimeters) unless otherwise noted (Continued)

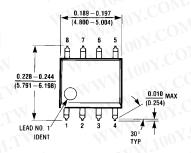

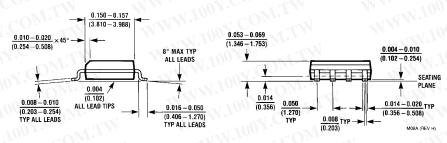

8-Pin SOIC **NS Package Number M08A** 

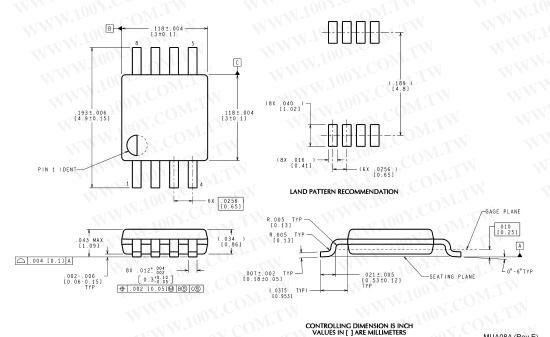

8-Pin MSOPNS Package Number MUA08A


力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw


> 25 www.national.com


MUA08A (Rev E)

### Physical Dimensions inches (millimeters) unless otherwise noted (Continued)


勝 特 力 材 料 886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www.100y.com.tw

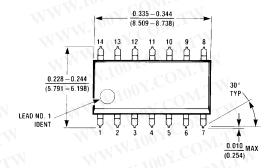

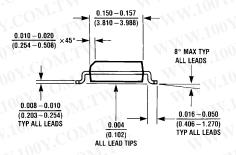

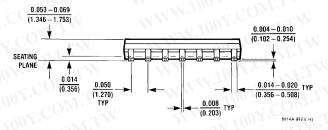

14-Pin SOIC NS Package Number M14A

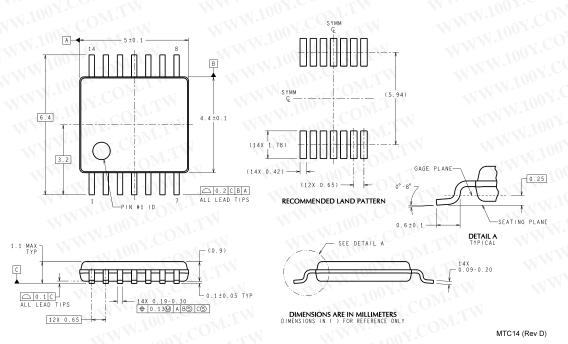

14-Pin TSSOPNS Package Number MTC14

### **Notes**

特力材料886-3-5753170 胜特力电子(上海) 86-21-54151736 胜特力电子(深圳) 86-755-83298787 Http://www. 100y. com. tw

### LIFE SUPPORT POLICY

WW.100X.COM.

NATIONAL'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF THE PRESIDENT AND GENERAL COUNSEL OF NATIONAL SEMICONDUCTOR CORPORATION. As used herein:

- 1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
- 2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.



**National Semiconductor Americas Customer Support Center** Email: new.feedback@nsc.com

Tel: 1-800-272-9959

www.national.com

**National Semiconductor Europe Customer Support Center** Fax: +49 (0) 180-530 85 86

Email: europe.support@nsc.com Deutsch Tel: +49 (0) 69 9508 6208 English Tel: +44 (0) 870 24 0 2171 Français Tel: +33 (0) 1 41 91 8790

**National Semiconductor** Asia Pacific Customer **Support Center** Email: ap.support@nsc.com **National Semiconductor** Japan Customer Support Center Fax: 81-3-5639-7507 Email: ipn.feedback@nsc.com Tel: 81-3-5639-7560