Autonics

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- Δ symbol indicates caution due to special circumstances in which hazards may occur.
- **Warning** Failure to follow instructions may result in serious injury or death.
- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.
- Failure to follow this instruction may result in explosion or fire. **03. Do not disassemble or modify the unit.**
- Failure to follow this instruction may result in fire.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.
- Failure to follow this instruction may result in fire. **05. Check 'Connections' before wiring.**
 - Failure to follow this instruction may result in fire.

Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.**02. Use a dry cloth to clean the unit, and do not use water or organic solvent.**Failure to follow this instruction may result in fire.

Cautions during Use

Safety Considerations

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- When connecting an inductive load such as DC relay or solenoid valve to the output, remove surge by using diodes or varistors.
- Use the product after 0.5 sec of the power input.
- When using a separate power supply for the sensor and load, supply power to the sensor first.
- 12-24 VDC= power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep it away from high voltage lines or power lines to prevent surge and inductive noise.
- When using switching mode power supply (SMPS), ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- When using a sensor with a noise-generating equipment (e.g., switching regulator, inverter, and servo motor), ground F.G. terminal of the equipment.
- This unit may be used in the following environments.
- Indoors (in the environment condition rated in 'Specifications') - Altitude max. 2.000 m
- Pollution degree 2
- Installation category III

Product Components

- Product
- Adjustment screwdriver
 (sensitivity adjustable model)

| 勝特力電材超市-龍」 | 山店 886-3-5773766 |
|------------|------------------|
| 勝特力電材超市-光行 | 复店 886-3-5729570 |
| 胜特力电子(上海) | 86-21-34970699 |
| 胜特力电子(深圳) | 86-755-83298787 |
| http://www | .100y.com.tw |

Instruction manual

1-channel U-shaped Photoelectric Sensors



BUP Series

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- Various sensing distance's lineup: 30 mm, 50 mm models
- High speed response type : Max. 1 ms
- Offers the sensitivity adjustable model
- Light ON / Dark ON operation mode selectable by control wire

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

-

0

| BUP | - | 0 |
|-----|---|---|
| | | |

• Sensing distance Number: Sensing distance (unit: mm)

Connection No mark: Cable type E: Cable connector type (used in elevators) Control output No mark: NPN open collector output

P: PNP open collector output

4

_

PunctionNo mark: Fixed sensitivityS: Sensitivity adjustable

Cautions during Installation

• Be sure to install this product by following the usage environment, location, and specified ratings. Consider the listed conditions below.

- Installation environment and background (reflected light)

0


- Sensing distance and sensing target

- Direction of target's movement

- \bullet For installation, tighten the M5 screw with a torque of 1.96 N m (sensing distance 30 mm model), M8 screw with a torque of 4.9 N m (sensing distance 50 mm model).
- Do not impact with a hard object or bend the cable excessively. That could decrease the product's water resistance.
- Use this product after the test. Check whether the indicator works appropriately for the positions of the detectable object.

| Operation Timing Chart | | | |
|------------------------|-------------|-------------|--|
| Operation mode | Light ON | Dark ON | |
| Received light | Received | Received | |
| | Interrupted | Interrupted | |
| Operation | | | |
| indicator (red) | OFF | OFF L | |
| Transistor output | | | |
| | OFF | OFF L | |

Connections

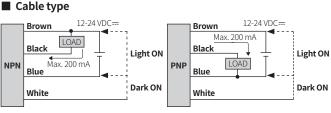

Pin

(1)

2

3

4

Color

Browr

Blue

Black

White

Function

+ V

0 V

OUT

Contro

Cable connector type

Connector: Daedong Inc., MIC-5M

| <u> </u> | |
|----------|--|


Operation mode selection


| Operation mode | Wiring |
|----------------|---|
| Light ON | Connect the control wire (white) to + V (brown) |
| Dark ON | Connect the control wire (white) to 0 V (blue) |

Circuit

NPN open collector output

PNP open collector output

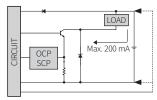

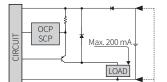

OCP (over current protection), SCP (short circuit protection)

If short-circuit the control output terminal or supply current over the rated specification, normal control signal is
not output due to the protection circuit.

Sensitivity Adjustment

- Set the adjuster for stable Light ON area, minimizing the effect of the installation
 environment.
- Use the offered adjustment screwdriver. Do NOT turn with excessive force to prevent product damage.
- The steps below are based on Light ON mode.


| STEP | Status | Description | |
|------|-------------|-------------|---|
| 01 | Received | | Turn the adjuster from MIN to MAX sensitivity and check the position (A) where the operation indicator activates under the light ON area. |
| 02 | Interrupted | | Turn the adjuster from (A) to MAX and check the position (B) where the operation indicator activates under the light OFF area. If the operation indicator does NOT activate at the MAX (maximum sensitivity): MAX = (B). |
| 03 | - | А В МАХ | Set the adjuster at the mid position between (A) and (B) for optimal sensitivity. |

Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.
- The sensors have the same size depending on the sensing distance.

| Α | Optical axis | С | Power indicator (green) |
|---|---------------------------|---|-------------------------|
| в | Operation indicator (red) | D | Sensitivity adjuster |


Sensing distance 30 mm model

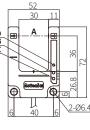







Sensing distance 50 mm model

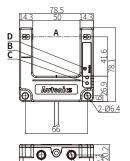

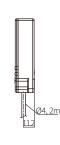

Connector

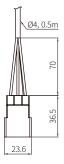

Specifications

| Model | BUP-D-D BUP | | BUP-🗆-E | | BUP- S- | |
|-----------------------------|--|----------------------|--------------------|---------------------|---------------------|----------------------|
| Sensing type | Through-beam | | | | | |
| Sensing distance | 30 mm | 50 mm | 30 mm | 50 mm | 30 mm | 50 mm |
| Sensing target | Opaque materials | | | | | |
| Min. sensing target | ≥Ø4mm ≥Ø1.5mm | | | | n | |
| Response time | ≤1ms | | | | | |
| Light source | Infrared | | | | | |
| Peak emission wavelength | 940 nm | | | | | |
| Sensitivity adjustment | Fixed YES (Adjuster) | | | | | |
| Operation mode | Light ON mode - Dark ON mode selectable (Control wire) | | | | | |
| Indicator | Operation indicator (red), power indicator (green) | | | | | |
| Approval | C€ERE | | CE | | C€ERE | |
| Unit weight (packaged) | ≈ 85 g (≈ 120 g) | ≈ 115 g (≈ 160 g) | ≈ 60 g (≈ 95 g) | ≈ 90 g (≈ 125 g) | ≈ 85 g (≈ 120 g) | ≈ 115 g (≈ 160 g) |

| Power supply | 12-24 VDC== ±10 % (ripple P-P: ≤ 10%) | | | |
|-----------------------------------|---|--|--|--|
| Current consumption | \leq 30 mA | | | |
| Control output | NPN open collector output / PNP open collector output model | | | |
| Load voltage | ≤ 30 VDC== | | | |
| Load current | ≤ 200 mA | | | |
| Residual voltage | NPN: ≤ 1 VDC=, PNP: ≤ 2.5 VDC= | | | |
| Protection circuit | Reverse power protection circuit, output short overcurrent protection circuit | | | |
| Insulation resistance | \geq 20 M Ω (500 VDC= megger) | | | |
| Noise immunity | \pm 240 VDC= the square wave noise (pulse width: 1 µs) by the noise simulator | | | |
| Dielectric strength | 1,000 VAC~ 50/60 Hz for 1 min | | | |
| Vibration | 1.5 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Z direction for 2 hours | | | |
| Shock | 500 m/s ² (\approx 50 G) in each X, Y, Z direction for 3 times | | | |
| Ambient illuminance (receiver) | Sunlight: ≤ 11,000 lx, incandescent lamp: ≤ 3,000 lx | | | |
| Ambient temperature | Fixed sensitivity model: -25 to 65 °C, storage: -25 to 70 °C (no freezing or condensation) Sensitivity adjustable model: -10 to 60 °C, storage: -25 to 70 °C (no freezing or condensation) | | | |
| Ambient humidity | 35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation) | | | |
| Protection rating | Fixed sensitivity model: IP66 (IEC standard) Sensitivity adjustable model: IP50 (IEC standard) | | | |
| Connection | Cable type, cable connector type | | | |
| Cable spec. | Cable type: Ø 4 mm, 4-wire, 2 m Cable connector type: Ø 4 mm, 4-wire, 0.5 m | | | |
| Wire spec. | AWG22 (0.08 mm, 60-core), insulator outer diameter: Ø 1.25 mm | | | |
| Connector | 5-pin socket type | | | |
| Material | Case: ABS, CAP: PC | | | |